TH
5619
.H7

STEEL SQUARE

HODGSON.

Class TH 5619

Book H7

Copyright No.

COPYRIGHT DEPOSIT.

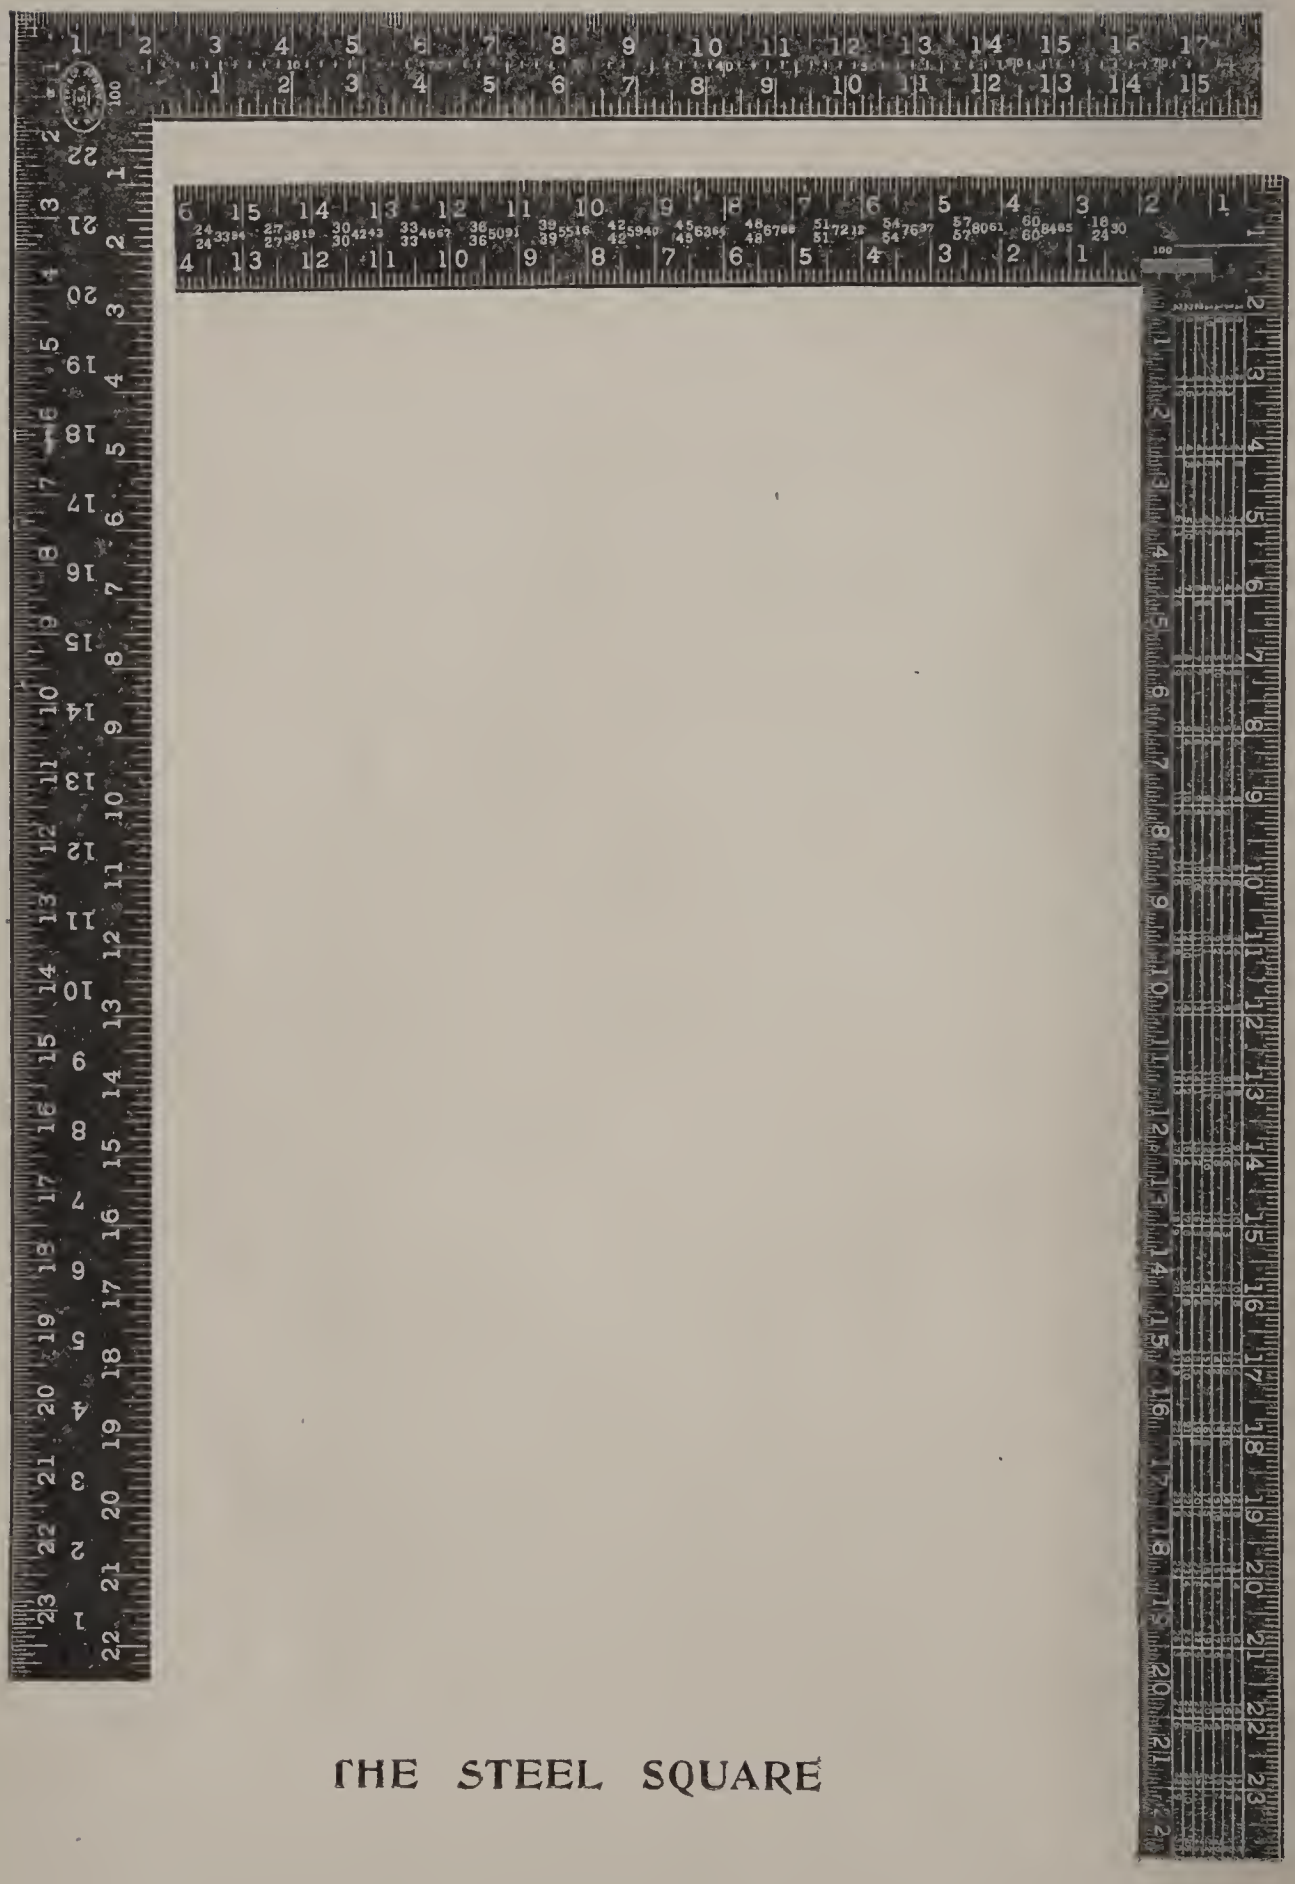

THE STEEL SQUARE

THE CARPENTERS'

Steel Square,

AND ITS USES.

BEING A DESCRIPTION OF THE SQUARE, AND ITS USES IN OBTAINING THE LENGTHS AND BEVELS OF ALL KINDS OF

RAFTERS, HIPS, GROINS, BRACES, BRACKETS, PURLINS, COLLAR BEAMS, AND JACK-RAFTERS;

ALSO ITS APPLICATION IN OBTAINING THE BEVELS AND CUTS FOR HOPPERS, SPRING MOULDINGS, OCTAGONS, STAIRS, DIMINISHED STILES, ETC.

ILLUSTRATED BY NEARLY ONE HUNDRED ENGRAVINGS.

BY

FRED. T. HODGSON,

Editor of the "Builder and Woodworker."

Fourth Edition. Revised and Greatly Enlarged.

NEW YORK:

THE INDUSTRIAL PUBLICATION COMPANY,

1906

TU6
.H7

LIBRARY of CONGRESS
Two Copies Received
JUN 27 1906
Copyright Entry
Jun 27, 1906
CLASS a, XXc. No.
1493-46
COPY B.

Copyright Secured
1880, 1883, 1906.
By John Phin.

PREFACE TO SECOND EDITION.

THE rapid disposal of the first edition of the "STEEL SQUARE AND ITS USES," has rendered it incumbent for the publisher to issue a second and larger edition; and recognizing this condition, in connection with the fact that the work has met with more than a passing favor from those who make daily use of the Steel Square, it has been deemed necessary to make the present edition more useful by adding a number of solutions of mechanical problems by aid of the instrument, and other matters that will render the work more valuable to the operative mechanic.

The Author has reason to, and does, feel pleased at the appreciation the working mechanics of this country have evinced for this work; and is assured, by the numerous letters, and other indications of good feeling he has received on all hands, that the present enlargement of the work has not been made unnecessarily or too soon.

Feeling confident that the additions to the present edition will commend themselves to the toiling thousands who have daily use for the "Steel Square," the publishers send the enlarged work out to the public with a knowledge that it will be welcomed by those who are most interested in the subject of which it treats.

New York, Jan. 1, 1883

PREFACE.

SOME time ago, the author of this little work contributed a series of papers on the STEEL SQUARE AND ITS USES, to the *American Builder*, and since their appearance, he has received hundreds of letters from as many persons residing in various parts of the United States, Canada, Australia and New Zealand, in which the writers requested him to publish the papers in book form. Partly in compliance with these requests, and partly at the solicitation of personal friends, together with a knowledge that a cheap but thorough work of the kind, would be of service to all persons who have occasion to use a steel square, he has consented, with the aid of the present enterprising publishers, to issue the work as now offered.

It is only of late years that American workmen have begun fully to understand the capabilities of the steel square; and even now, only a few of the best workmen have any idea of what can be accomplished with it when in skilful hands.

It is not claimed that the rules and methods shown in this little work are either new or original; they have been known to advanced workmen for many years past; but it is claimed that they have never before been brought together and put in so handy a shape as

in the present book; and it is further claimed that many of the rules herein illustrated and explained, have never appeared in print previous to the publication of the papers on the subject in the magazine referred to above.

Should this little volume prove of service to the man who toils with axe, saw and plane, for his daily bread, and profitable to the publishers who risk their money on its publication, it will have fulfilled its mission, as designed by

THE AUTHOR.

New York, 1880.

CONTENTS.

PART I.

	PAGE
Preliminary	9
Historical and Descriptive	13
Description of the Square	16
Board, Plank and Scantling Measure	19
Brace Rule	21
Octagonal Scale	22
Fence for Square	24
Application of Square	25
To lay out Rafters	28
Hip Rafters, Cripples, etc.	33
Backing for Hips	35
Stairs and Strings	39
Miscellaneous Rules	42
Measurement	43
Proportion of Circles	46
Centering Circles	47
How to Describe an Ellipse	48
How to Describe a Parabola	49
Bevels for Hoppers	50
Bisecting Circles	51
Cutting Spring Mouldings	54

PART II.

PAGE

Theoretical Rafters - - - - - - - - 57
Bevels and Lengths for Hips, Jacks and Purlins - - 58
Divisions of Widths - - - - - - - 60
Bisection of Angles - - - - - - - 60
Diminishing Stiles - - - - - - - 61

PART III.

Octagons - - - - - - - - - 62
To Find the Diagonal of a Square - - - - 66
Polygons - - - - - - - - - 67
Circles - - - - - - - - - 68
To Lay out Angles - - - - - - - 70
Bevels of Hoppers - - - - - - - 70
Widths of Sides and Ends of Hoppers - - - - 71
Corner Pieces for Hoppers - - - - - 73
Roofing - - - - - - - - - 73
Lengths and Bevels of Hip-Rafters - - - - 73
Backing of Hips - - - - - - - - 75
Irregular Hip Roofs - - - - - - - 75
Trusses - - - - - - - - - 77
Diameter of Circles - - - - - - - 78
Cutting Equal Mitres - - - - - - - 80
Theoretical Lengths - - - - - - 81

PART IV.

Miscellaneous Rules and Memoranda - - - - 83
Hip Roofs - - - - - - - - 83–89
Curved Hip Rafters - - - - - - 91
Hopper Angles - - - - - - - 92
Splayed Gothic Heads - - - - - - - 95

THE CARPENTERS' STEEL SQUARE,

AND ITS USES.

PART I.

Preliminary.—There is nothing of more importance to a young man who is learning the business of house-joinery and carpentry, than that he should make himself thoroughly conversant with the capabilities of the tools he employs. It may be that, in some of the rules shown in this work, the result could be attained much readier with other aids than the square; but the progressive mechanic will not rest satisfied with one method of performing operations when others are within his reach.

In the hand of the intelligent mechanic the square becomes a simple calculating machine of the most wonderful capacity, and by it he solves problems of the kinds continually arising in mechanical work, which by the ordinary methods are more difficult to perform.

The great improvement which the arts and manufactures have attained within the last fifty years, renders it essential that every person engaged therein should use his utmost exertions to obtain a perfect knowledge of the trade he

professes to follow. It is not enough, nowadays, for a person to have attained the character of a good workman; that phrase implies that quantum of excellence, which consists in working correctly and neatly, under the directions of others. The workman of to-day, to excel, must understand the principles of his trade, and be able to apply them correctly in practice. Such an one has a decided advantage over his fellow-workman; and if to his superior knowledge he possesses a steady manner, and industrious habits, his efforts cannot fail of being rewarded.

It is no sin not to know much, though it is a great one not to know all we can, and put it all to good use. Yet, how few mechanics there are who will know all they can? Men apply for employment daily who claim to be finished mechanics, and profess to be conversant with all the ins and outs of their craft, and who are noways backward in demanding the highest wages going, who, when tested, are found wanting in knowledge of the simplest formulas of their trade. They may, perhaps, be able to perform a good job of work after it is laid out for them by a more competent hand; they may have a partial knowledge of the uses and application of their tools; but, generally, their knowledge ends here. Yet some of these men have worked at this trade or that for a third of a century, and are to all appearances, satisfied with the little they learned when they were apprentices. True, mechanical knowledge was not always so easily obtained as at present, for nearly all works on the constructive arts were written by professional architects, engineers, and designers, and however unexceptionable in other respects, they were generally couched in such language, technical and mathematical, as to be perfectly

unintelligible to the majority of workmen; and instead of acting as aids to the ordinary inquirer, they enveloped in mystery the simplest solutions of every-day problems, discouraging nine-tenths of workmen on the very threshold of inquiry, and causing them to abandon further efforts to master the intricacies of their respective trades.

Of late years, a number of books have been published, in which the authors and compilers have made commendable efforts to simplify matters pertaining to the arts of carpentry and joinery, and the mechanic of to-day has not the difficulties of his predecessors to contend with. The workman of old could excuse his ignorance of the higher branches of his trade, by saying that he had no means of acquiring a knowledge of them. Books were beyond his reach, and trade secrets were guarded so jealously, that only a limited few were allowed to know them, and unless he was made of better stuff than the most of his fellow-workmen, he was forced to plod on in the same groove all his days.

Not so with the mechanic of to-day; if he is not well up in all the minutæ of his trade, he has but himself to blame, for although there is no royal road to knowledge, there are hundreds of open ways to obtain it; and the young mechanic who does not avail himself of one or other of these ways to enrich his mind, must lack energy, or be altogether indifferent about his trade, and may be put down as one who will never make a workman.

I have thought that it would not be out of place to preface this work on the "Steel Square," with the foregoing remarks, in the hope that they may stimulate the young mechanic, and urge him forward to conquer what at best are only imaginary difficulties. A willing heart and a

clear head will most assuredly win honorable distinction in any trade, if they are only properly used. Indeed, during an experience of many years in the employment and superintendence of mechanics of every grade, from the green "wood-haggler" to the finished and accomplished workman, I have invariably discovered that the finished workman was the result of persistent study and application, and not, as is popularly supposed, a natural or spontaneous production. It is true that some men possess greater natural mechanical abilities than others, and consequently a greater aptitude in grasping the principles that underlie the constructive arts; but, as a rule, such men are not reliable; they may be expert, equal to any mechanical emergency, and quick at mastering details, but they are seldom thorough, and never reliable where long sustained efforts are required.

The mechanic who reaches a fair degree of perfection by experience, study and application, is the man who rises to the surface, and whose steadiness and trustworthiness force themselves on the notice of employers and superintendents. I have said this in order to give encouragement to those young mechanics who find it up-hill work to master the intricacies of the various arts they are engaged in, for they may rest assured that in the end *work* and *application* will be sure to win; and I am certain that a thorough study of the steel square and its capabilities will do more than anything else to aid the young workman in mastering many of the mechanical difficulties that will confront him from time to time in his daily occupation.

It must not be supposed that the work here presented exhausts the subject. The enterprising mechanic will find

opportunity for using the square in the solution of many problems that will crop up during his daily work, and the principles herein laid down will aid very much towards correct solutions. In framing roofs, bridges, trestle-work, and constructions of timber, the Steel Square is a necessity to the American carpenter; but only a few of the more intelligent workmen ever use it for other purposes than to make measurements, lay off the mortices and tenons, and square over the various joints. Now, in framing bevel work of any description, the square may be used with great advantage and profit. Posts, girts, braces, and struts of every imaginable kind may be laid out by this wonderful instrument, if the operator will only study the plans with a view of making use of his square for obtaining the various bevels, lengths and cuts required to complete the work in hand. Tapering structures—the most difficult the framer meets with—do not contain a single bevel or length that can not be found by the square when properly applied, and it is this fact I wish to impress on my readers, for it would be impossible, in this work, to give every possible application of the square to work of this kind. I have, therefore, only given such examples as will enable any one to apply some one of them to any work in hand.

The Square—Historical and Descriptive.—Doubtless, in the early ages of mankind, when solid structures became a necessity, the want of an instrument similar to the square must have been felt at every "turn and corner," and there can be no question about one having been used—rude and imperfect perhaps—in erecting the first square or rectangular building that was ever built on this earth.

The Greeks, who were an inventive people, and who were apt to ascribe to themselves more credit than was really their due, in the way of inventions and discoveries, lay claim to be the inventors of the instrument. Pliny says that Theodorus, a Greek of Samos, invented the square and level. Theodorus was an artist of some note, but it is evident that the square and level, in some form or other, were used long before his time, even in his own country, for some of the finest temples in Athens and other Grecian cities, had been built long before his time; and the Pyramids of Egypt were hoary with age when he was in swaddling cloths. Indeed, the "square," as a constructive tool, must of necessity have found a place in the "kit" of the earliest builders. Evidences of its presence have been found in the ruins of pre-historic nations, and are abundant in the remains of ancient Petra, Nineveh, Babylon, Etruria, and India. South American ruins of great antiquity in Brazil, Peru, and other places, show that the unknown races that once inhabited the South American Continent, were familiar with many of the uses of the square. Egypt, however, that cradle of all the arts, furnishes us with the most numerous, and, perhaps, the most ancient evidences of the use of the square; paintings and inscriptions on the rock-cut tombs, the temples, and other works, showing its use and application, are plentiful. In one instance, a whole "kit" of tools was found in a tomb at Thebes, which consisted of mallets, hammers, bronze nails, small tools, drills, hatchets, adzes, squares, chisels, etc.; one bronze saw and one adze have the name of Thothmes III., of the 18th dynasty, stamped on their blades, showing that they were made nearly 3,500 years

ago. The constructive and decorative arts at that time were in their zenith in Egypt, and must have taken at least 1,000 years to reach that stage. Consequently, the square must have been used by workmen of that country, at least, four thousand years ago.

The British Museum contains many tools of pre-historic origin, and the square is not the least of them. Herculaneum and Pompeii contribute evidences of the importance of this useful tool. On some of the paintings recently discovered in those cities, the different artisans can be seen at home in their own workshops, with their work-benches, saw-horses, tools, and surroundings, much about the same as we would find a small carpenter shop of to-day, where all the work is done by hand; the only difference being a change in the form of some of the tools, which, in some instances, had been better left as these old workmen devised them.

It can make no difference, however, to the modern workman, as to when or where the square was first used; suffice to know, that, at present, we have squares immensely superior to anything known to the ancients, and it may be added, that so perfect has the machinery for the manufacture of steel squares become, that a defective tool is now the exception. Of course this relates to the products of manufacturers of repute, and not to the cheap squares, or to those said to be "first-class," that were made ten or fifteen years ago. The tool we recommend elsewhere is the best made, both as to quality of material, accuracy of workmanship, and amount of useful matter on its faces.

Description of the Square.—In the foregoing sketch I have given a few hints as to the kind of square to purchase when it is necessary to buy; in many cases, however, this book will find its way into the hands of mechanics and others, who will have old and favorite squares in their chests or workshops, and who will not care to dispose of a "well-tried friend" for the purpose of filling its place with another, simply because I have recommended it. To these workmen I would say that I do not advise a change, provided the old square is true, and the inches and sub-divisions are properly and accurately defined. I wish it distinctly understood that old squares, if true, and marked with inches and sub-divisions of inches, will perform nearly every solution presented in this book.

The lines and figures formed on the squares of different make, sometimes vary, both as to their position on the square, and their mode of application, but a thorough understanding of the application of the scales and lines shown on any first-class tool, will enable the student to comprehend the use of the lines and figures exhibited on other first-class squares.

To insure good results, it is necessary to be careful in the selection of the tool. The blade of the square should be 24 inches long, and two inches wide, and the tongue from 14 to 18 inches long and 1½ inches wide. The tongue should be exactly at right angles with the blade, or in other words the "square" should be perfectly square.

To test this question, get a board, about 12 or 14 inches wide, and four feet long, dress it on one side, and true up one edge as near straight as it is possible to make it. Lay the board on the bench, with the dressed side up, and the

trued edge towards you, then apply the square, with the blade to the left, and mark across the prepared board with a penknife blade, pressing close against the edge of the tongue; this process done to your satisfaction, reverse the square, and move it until the tongue is close up to the knife mark; if you find that the edge of the tongue and mark coincide, it is proof that the tool is correct enough for your purposes.

This, of course, relates to the inside edge of the blade, and the outside edge of the tongue. If these edges should not be straight, or should not prove perfectly true, they should be filed or ground until they are straight and true. The outside edge of the blade should also be "trued" up and made exactly parallel with the inside edge, if such is required. The same process should be gone through on the tongue. As a rule, squares made by firms of repute are perfect, and require no adjusting; nevertheless, it is well to make a critical examination before purchasing.

The next thing to be considered is the use of the figures, lines, and scales, as exhibited on the square. It is supposed that the ordinary divisions and sub-divisions of the inch, into halves, quarters, eighths, and sixteenths are understood by the student; and that he also understands how to use that part of the square that is sub-divided into twelfths of an inch. This being conceded, we now proceed to describe the various rules as shown on all good squares; but before proceeding further, it may not be out of place to state, that on the tool recommended in this book, one edge is subdivided into thirty-seconds of an inch.

This fine sub-division will be found very useful, particularly so when used as a scale to measure drawings made in

half, quarter, one-eighth, or one-sixteenth of an inch to the foot.

I now refer the reader to the square shown in the Frontispiece. It is the one recommended in the foregoing pages, and is the most complete square in the market, and manufactured, I believe, but by one firm. It is known to the trade as No. 100, and this number will be found stamped always on the face side of the square at the junction of the tongue and blade. The following instructions refer to the Frontispiece and accompanying cuts.

The diagonal scale is on the tongue at the junction with blade, Fig. 1, and is for taking off hundredths of an inch. The lengths of the lines between the diagonal and the

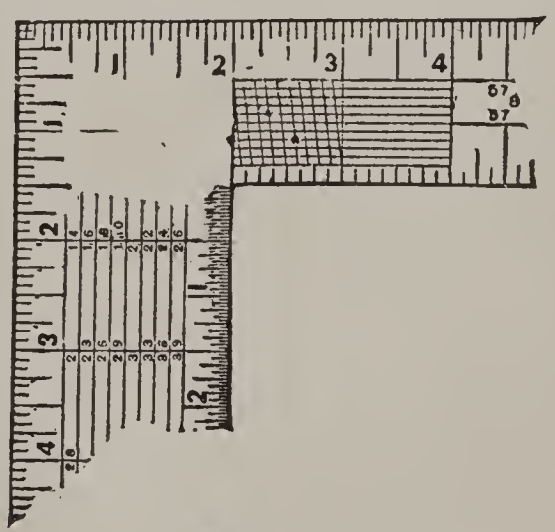

FIG. 2 *a*.

perpendicular are marked on the latter. Primary divisions are tenths, and the junction of the diagonal lines with the longitudinal parallel lines enables the operator to obtain divisions of one hundredth part of an inch; as, for example, if we wish to obtain twenty-four hundredths of an inch, we place the compasses on the "dots" on the fourth parallel line, which covers two primary divisions, and a fraction, or

four-tenths of the third primary division, which added together makes twenty-four hundredths of an inch. Again, if we wish to obtain five tenths and seven hundredths, we operate on the seventh line, taking five primaries and the fraction of the sixth where the diagonal intersects the parallel line, as shown by the "dots," on the compasses, and this gives us the distance required.

Fig. 2 *a* shows the position of the "dots" or "points" referred to in the foregoing example.

In practice it has been found that the diagonal scale is not so well adapted to the use of the ordinary mechanic as the plain scale finely divided. On the squares now made the latter is used entirely as shown on Page 109.

Board, Plank and Scantling Measure.—Perhaps, with the single exception of the common inch divisions on the square, no set of figures on the instrument will be found more useful to the active workman than that known as the board rule. A thorough knowledge of its use may be obtained by ten minutes' study, and, when once obtained, is always at hand and ready for use.

The following explanations are deemed sufficiently clear to give the reader a full knowledge of the workings of the rule. If we examine Fig. 2, in the Frontispiece, we will find under the figure 12, on the outer edge of the blade, where the length of the boards, plank, or scantling to be measured, is given, and the answer in feet and inches is found under the inches in width that the board, etc., measures. For example, take a board nine feet long and five inches wide; then under the figure 12, on the second line will be found the figure 9, which is the length of the board; then run along this line to the figure

directly under the five inches (the width of the board), and we find three feet nine inches, which is the correct answer in "board measure." If the stuff is two inches thick, the sum is doubled; if three inches thick, it is trebled, etc., etc. If the stuff is longer than any figures shown on the square, it can be measured by dividing and doubling the result. This rule is calculated, as its name indicates, for board measure, or for surfaces 1 inch in thickness. It may be advantageously used, however, upon timber by multiplying the result of the face measure of one side of a piece by its depth in inches. To illustrate, suppose it be required to measure a piece of timber 25 feet long, 10 x 14 inches in size. For the length we will take 12 and 13 feet. For the width we will take 10 inches, and multiply the result by 14. By the rule a board 12 feet long and 10 inches

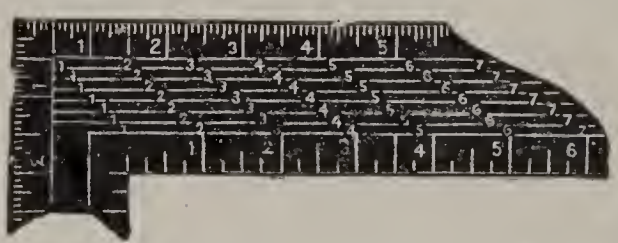

Fig. 3.

wide contains 10 feet, and one 13 feet long and 10 inches wide, 10 feet 10 inches. Therefore, a board 25 feet long and 10 inches wide must contain 20 feet and 10 inches. In the timber above described, however, we have what is equivalent to 14 such boards, and therefore we multiply this result by 14, which gives 291 feet and 8 inches, the board measure.

The "board measure," as shown on the portion of the

square, Fig. 3, gives the feet contained in each board according to its length and width. This style of figuring squares, for board measure, is going out of date, as it gives the answer only in feet.

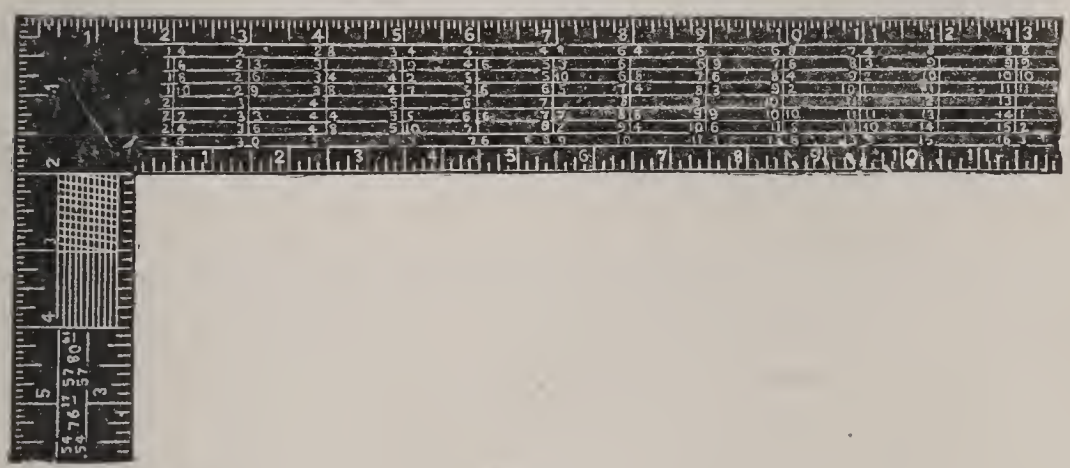

FIG. 3 *a*.

Fig. 3 *a* shows the method now in use for board measure. This shows the correct contents in feet and inches. It is a portion of the blade of the square, as shown at Fig. 2, of the Frontispiece.

Brace Rule.—The "brace rule" is always placed on the tongue of the square, as shown in the central space at x, Fig. 1.

This rule is easily understood; the figures on the left of the line represent the "run" or the length of two sides of a right angle, while the figures on the right represent the exact length of the third side of a right-angled triangle, in inches, tenths, and hundredths. Or, to explain it in another way, the equal numbers placed one above the other, may be considered as representing the sides of a square, and

the third number to the right the length of the diagonal of that square. Thus the exact length of a brace from point to point having a run of 33 inches on a post, and a run of the same on a girt, is 46·67 inches. The brace rule varies somewhat in the matter of the runs expressed in different squares. Some squares give a few brace lengths of which the runs upon the post and beam are unequal.

Octagonal Scale.—The "octagonal scale," as shown on the central division of the upper portion of blade, is on the opposite side of the square to the "brace rule," and runs along the centre of the tongue as at s s. Its use is as follows: Suppose a stick of timber ten inches square. Make a centre line, which will be five inches from each edge; set a pair of compasses, putting one leg on any of the main divisions shown on the square in this scale, and the other leg on the tenth subdivision. This division, pricked off from the centre line on the timber on each side, will give the points for the gauge-lines. Gauge from the corners both ways, and the lines for making the timber octagonal in its section are obtained. Always take the same number of spaces on your compasses as the timber is inches square from the centre line. Thus, if a stick is twelve inches square, take twelve spaces on the compasses; if only six inches square, take six spaces on the compasses, etc., etc. The rule always to be observed is as follows: Set off from each side of the centre line upon each face as many spaces by the octagon scale as the timber is inches square. For timbers larger in size than the number of divisions in the scale, the measurements by it may be doubled or trebled, as the case may be.

The diagram, Fig. 4 *a*, shows the application of the rule applied to the end of a stick of timber or on a plane surface. Let B C D E, be the square equal to six inches on a side. Draw the centre lines, B C and D E, then with the

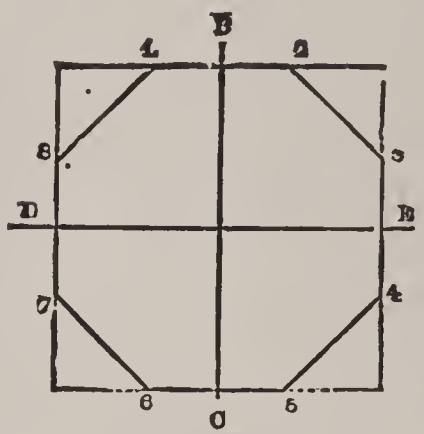

FIG. 4 *a*.

dividers take from the scale six parts, and lay off this distance from the centre of each; as B 1, B 2, E 3 and E 4, C 5 and C 6, D 7 and D 8. Draw lines from 1 to 8, 2 to 3, 4 to 5, 6 to 7, and the octagon figure is complete.

A rule for laying off octagons is figured on nearly all carpenters' two-foot rules, marked off from the inner edges of the rule; one set of figures is denoted by the letter E, another set is denoted by the letter M. That set marked E measures the distance from the edge of the square to the points indicated in the diagram, by the figures 1, 2, 3, 4, etc. The set marked M is used for finding the points 1, 2, 3, 4, etc., by measuring from the middle or centre lines, B, E, C, D.

I have now fully described all the lines, figures, and scales that are usually found on the better class of squares now in use; but, I may as well here remark that there are squares in use of an inferior grade, that are somewhat dif-

ferently figured. These tools, however, are such as can not be recommended for the purposes of the scientific carpenter or joiner.

Fence.—A necessary appendage to the steel square in solving mechanical problems, is, what I call, for the want of a better name, an adjustable fence. This is made out of a piece of black walnut or cherry 2 inches wide, and 2 feet 10 inches long (being cut so that it will pack in a tool chest), and 1⅝ inches thick; run a gauge line down the centre of both edges; this done, run a saw kerf cutting down these gauge lines at least one foot from each end, leaving about ten inches of solid wood in the centre of fence. We now take our square and insert the blade in the saw kerf at one end of the fence, and the tongue in the kerf at the other, the fence forming the third side of a right-angle triangle, the blade and the tongue of the square forming the other two sides. A fence may be made to do



Fig. 4.

pretty fair service, if the saw kerf is all cut from one end as shown at Fig. 4. The one first described, however, will be found the most serviceable. The next step will be to make some provision for holding the fence tight on the square; this is best done by putting a No. 10 1½ inch screw in each end of the fence, close up to the blade and tongue; having done this, we are ready to proceed to business.

Application.—The fence being made as desired, in either of the methods mentioned, and adjusted to the square, work can be commenced forthwith.

The first attempt will be to make a pattern for a brace, for a four-foot "run." Take a piece of stuff already prepared, six feet long, four inches wide and half-inch thick, gauge it three-eighths from jointed edge.

Take the square as arranged at Fig. 5, and place it on the prepared stuff as shown at Fig. 6. Adjust the square so that the twelve-inch lines coincide exactly with the gauge line o, o, o, o Hold the square firmly in the position now obtained, and slide the fence up the tongue and blade until it fits snugly against the jointed edge of the prepared stuff, screw the fence tight on the square, and be sure that the 12 inch marks on both the blade and the tongue are in exact position over the gauge-line.

I repeat this caution, because the successful completion of the work depends on exactness at this stage.

We are now ready to lay out the pattern. Slide the square to the extreme left, as shown on the dotted lines at x, mark with a knife on the outside edges of the square, cutting the gauge-line. Slide the square to the right until the 12 inch mark on the tongue stands over the knife mark on the gauge-line; mark the right-hand side of the square cutting the gauge-line as before, repeat the process four times, marking the extreme ends to cut off, and we have the length of the brace and the bevels.

Square over, with a try square, at each end from the gauge-line, and we have the toe of the brace. The lines, s, s, shown at the ends of the pattern, represent the tenons that are to be left on the braces. This pattern is now com-

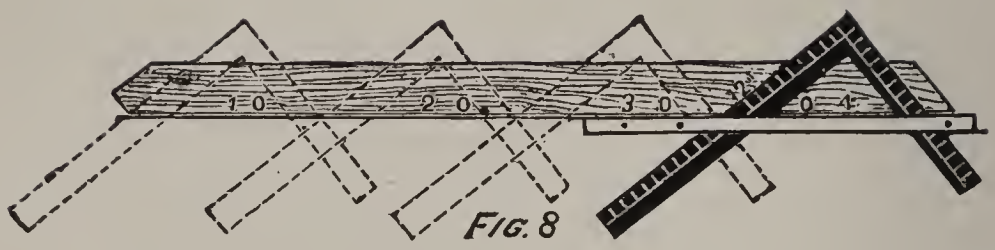

FIG. 8

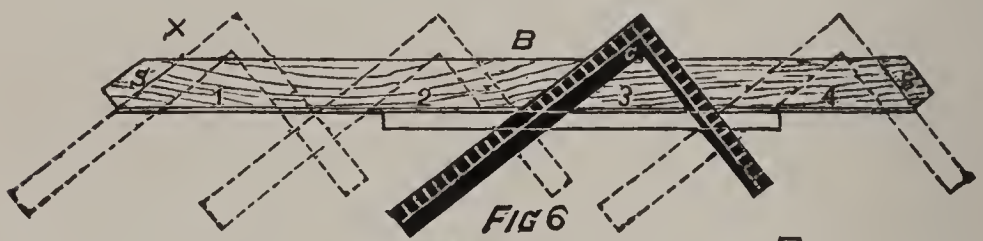

FIG 6

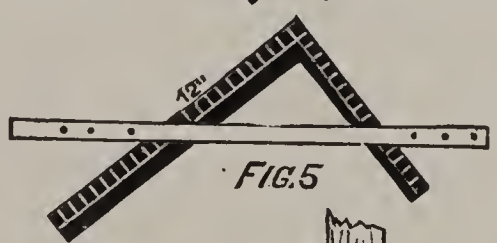

FIG. 5



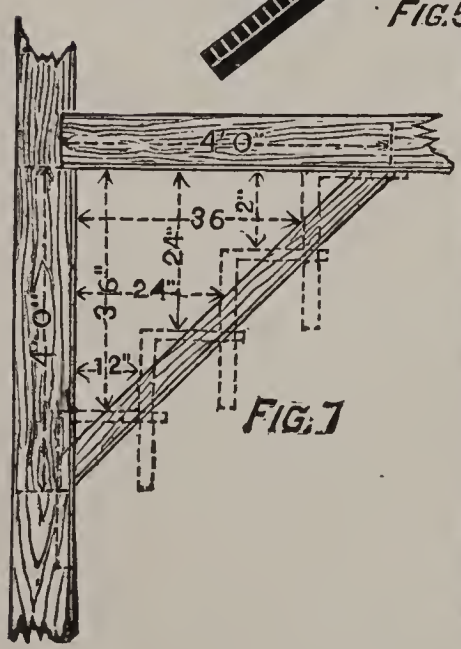

FIG. 7

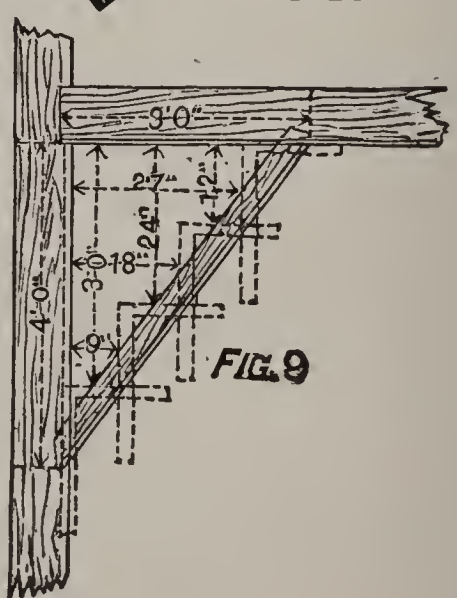

FIG. 9

plete; to make it handy for use, however, nail a strip 2 inches wide on its edge, to answer for a fence as shown at K, and the pattern can then be used either side up.

The cut at Fig. 7, shows the brace in position, on a reduced scale. The principle on which the square works in the formation of a brace can easily be understood from this cut, as the dotted lines show the position the square was in when the pattern was laid out.

It may be necessary to state that the "square," as now arranged, will lay out a brace pattern for any length, if the angle is right, and the *run* equal. Should the brace be of great length, however, additional care must be taken in the adjustment of the square, for should there be any departure from truth, that departure will be repeated every time the square is moved, and where it would not affect a short run, it might seriously affect a long one.

To lay out a pattern for a brace where the run on the beam is three feet, and the run down the post four, proceed as follows:

Prepare a piece of stuff, same as the one operated on for four feet *run;* joint and gauge it. Lay the square on the left-hand side, keep the 12 inch mark on the tongue, over the gauge-line, place the 9 inch mark on the blade, on the gauge-line, so that the gauge-line forms the third side of a right-angle triangle, the other sides of which are nine and twelve inches respectively.

Now proceed as on the former occasion, and as shown at Fig. 8, taking care to mark the bevels at the extreme ends. The dotted lines show the positions of the square, as the pattern is being laid out.

Fig. 9 shows the brace in position, the dotted lines show

where the square was placed on the pattern. It is well to thoroughly understand the method of obtaining the lengths and bevels of irregular braces. A little study, will soon enable any person to make all kinds of braces.

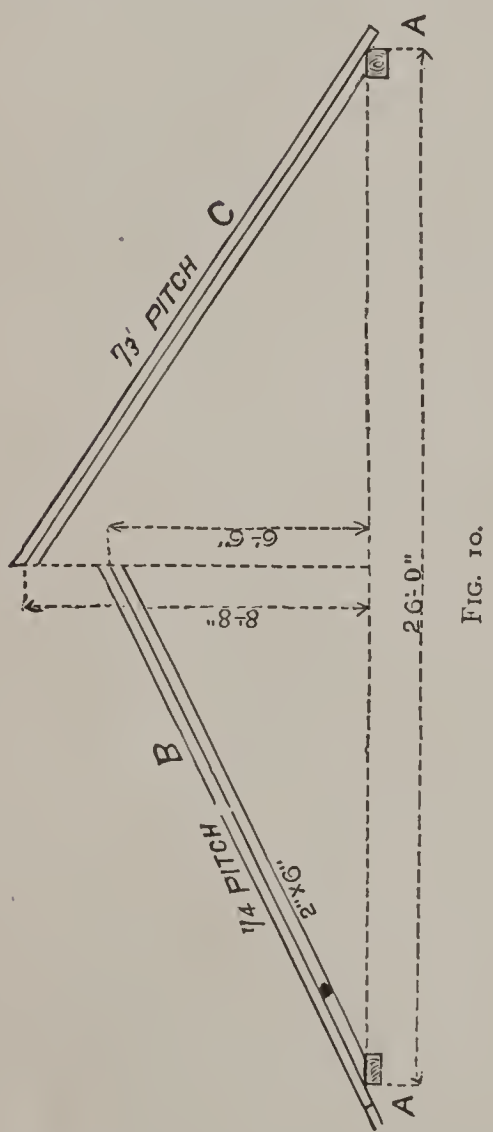

Fig. 10.

If we want a brace with a two feet run, and a four feet run, it must be evident that, as two is the half of four, so on the square take 12 inches on the tongue, and 6 inches on the blade, apply four times, and we have the length, and the bevels of a brace for this run.

For a three by four feet run, take 12 inches on the tongue, and 9 inches on the blade, and apply four times, because, as 3 feet is ¾ of four feet, so 9 inches is ¾ of 12 inches.

Rafters.—Fig. 10 shows a plan of a roof, having twenty-six feet of a span.

The span of a roof is the distance over the wall plates measuring from A to A, as shown in Fig. 10. It is also the extent of an arch between its abutments.

There are two rafters shown in position on Fig. 10. The one on the left is at an inclination of quarter pitch, and

marked B, and the one on the right, marked C, has an inclination of one-third pitch. These angles, or inclinations rather, are called quarter and third pitch, respectively, because the height from level of wall plates to ridge of roof is one-quarter or one-third the width of building, as the case may be.

At Fig. 11, the rafter B is shown drawn to a larger scale; you will notice that this rafter is for quarter pitch, and for convenience, it is supposed to consist of a piece of stuff 2 inches by 6 inches by 17 feet. That portion of the rafter that projects over the wall of the building, and forms the eve, is three or more inches in width, just as we please. The length of the projecting piece in this case is one foot—it may be more or less to suit the eve, but the line must continue from end to end of the rafter, as shown on the plan, and we will call this line our working line.

FIG. 11.

We are now ready to lay out this rafter, and will proceed as follows: We adjust the fence on the square the same as for braces, press the fence firmly against the top edge of rafter, and place the figure 12 inches on the left-hand side, and the figure 6 in on the right-hand side, directly over the working line, as shown on the plan. Be very exact about getting the figures on the line, for the quality of the

work depends much on this; when you are satisfied that you are right, screw your fence tight to the square. Commence at No. 1 on the left, and mark off on the working line; then slide your square to No. 2, repeat the marking and continue the process until you have measured off thirteen spaces, the same as shown by the dotted lines in the drawing. The last line on the right-hand side will be the plumb cut of the rafter, and the exact length required. It will be noticed that the square has been applied to the timber thirteen times.

The reason for this is, that the building is twenty-six feet wide, the half of which is thirteen feet, the distance that one rafter is expected to reach, so, if the building was thirty feet wide, we should be obliged to apply the square fifteen times instead of thirteen. We may take it for granted, then, that in all cases where this method is employed to obtain the lengths and bevels, or cuts of rafters, we must apply the square half as many times as there are feet in the width of the building being covered. If the roof to be covered is one-third pitch, all to be done is to take 12 inches on one side of the square and 8 inches on the other, and operate as for quarter pitch.

We shall frequently meet with roofs much more acute than the ones shown, but it will be easy to see how they can be managed. For instance, where the rafters are at right-angles to each other, apply the square the same as for braces of equal run, that is to say, keep the 12 mark on the blade, and the 12 mark on the tongue, on the working line. When a roof is more acute, or "steeper" than a right-angle, take a greater figure than twelve on one side of the square, and twelve on the other.

Whenever a drawing of a roof is to be followed, we can soon find out how to employ the square, by laying it on the drawing, as shown in Fig. 12. Of course, something depends on the scale to which the drawing is made. If any of the ordinary fractions of an inch are used, the intelligent workman will have no difficulty in discovering what figures to make use of to get the "cuts" and length desired.

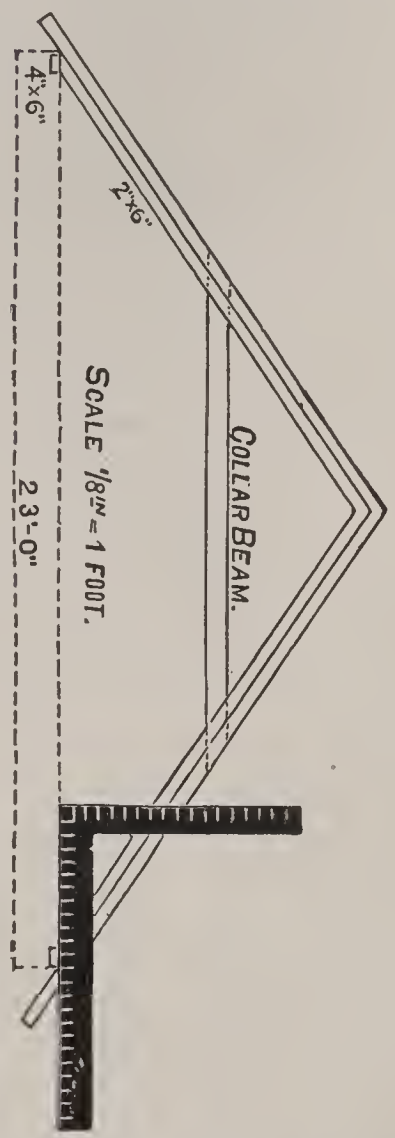

Fig. 12.

Sometimes there may be a fraction of a foot in this division; when such is the case, it can be dealt with as follows: suppose there is a fraction of a foot, say 8 inches, the half of which would be 4 inches, or ⅓ of a foot; then, if the roof is quarter pitch, all to be done is to place the square, with the 4 inch mark on the blade, and the 2 inch mark on the tongue, on the centre line of the rafter, and the distance between these points is the extra length required, and the line down the tongue is the bevel at the point of the rafter. On Fig. 13, is shown an application of this method. All other pitches and fractions can be treated in this manner without overtaxing the ingenuity of the workman.

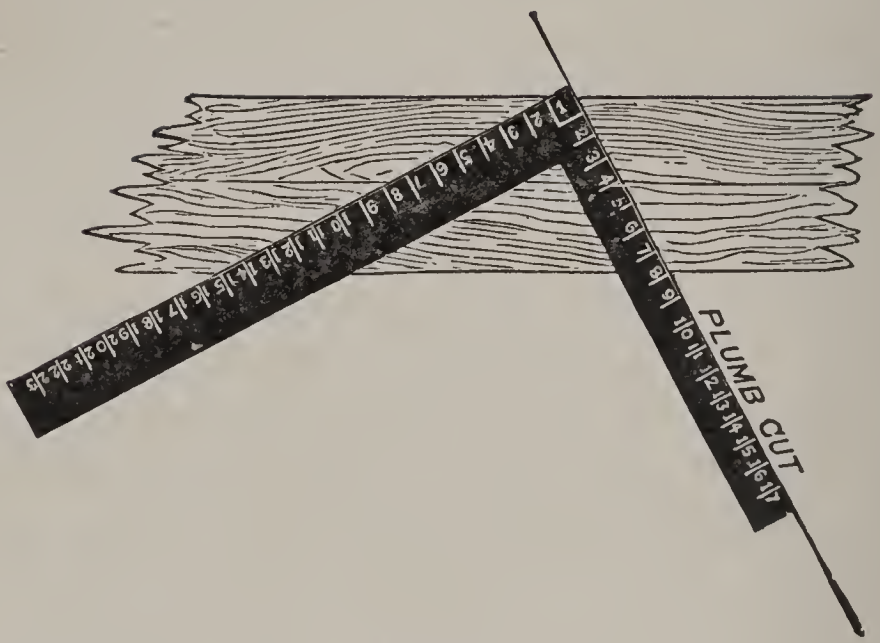

FIG. 13.

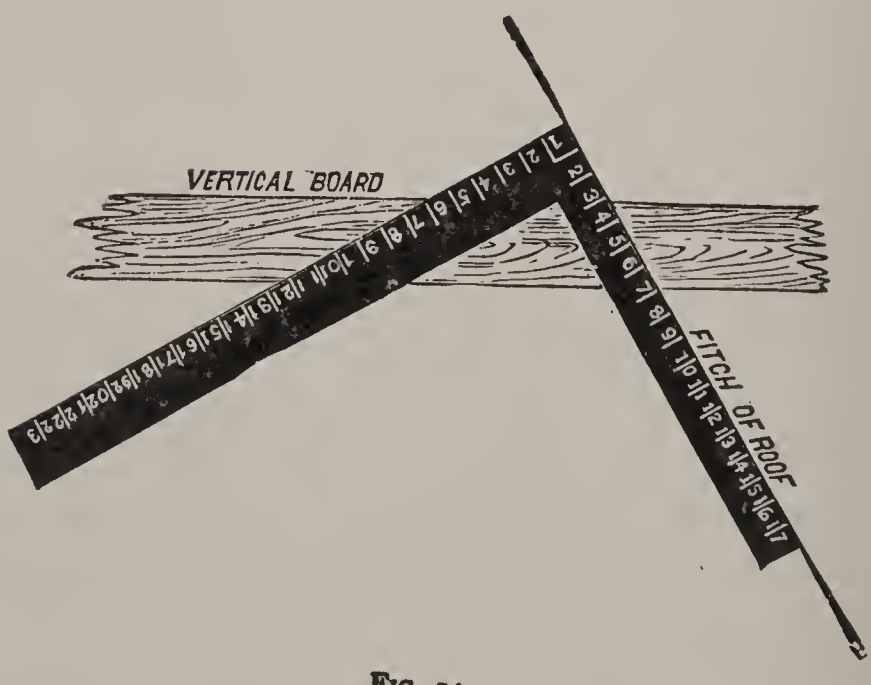

FIG. 14.

Sufficient has been shown to enable the student, if he has mastered it, to find the lengths and bevels of any common rafter; therefore, for the present, we will leave saddle roofs, and try what can be done with the square in determining the lengths and bevels of "hips," valleys, and cripples.

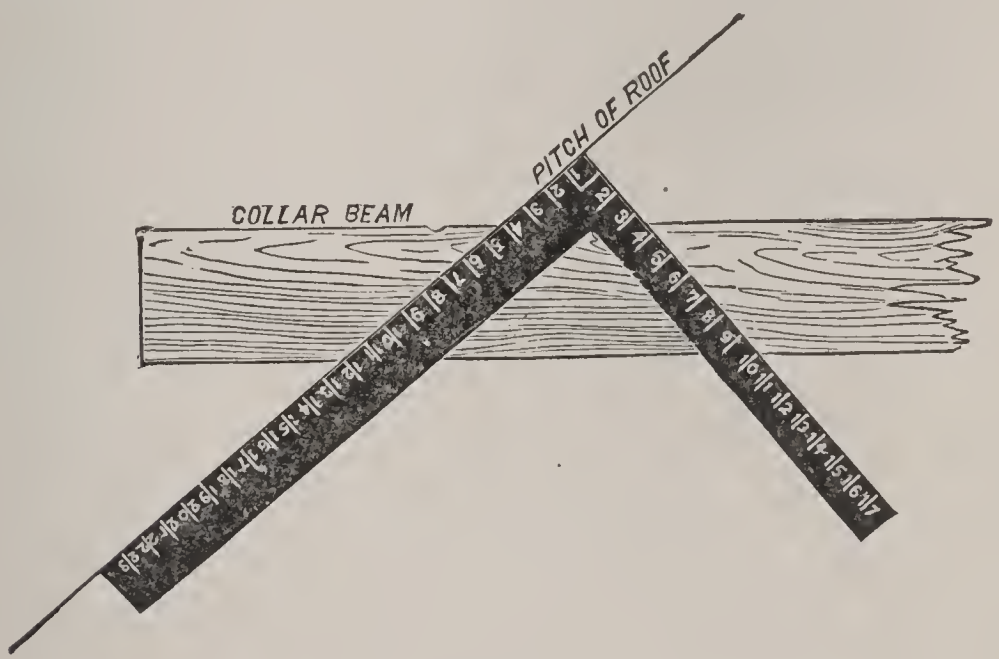

FIG. 15.

Fig. 14 shows how to get bevels on the top end of vertical boarding, at the gable ends, suitable for the quarter pitch at Fig. 10.

At Fig. 15, is shown a method for finding the bevel for horizontal boarding, collar ties, etc.

Hip Rafters.—Fig. 16, is supposed to be the pitch of a roof furnished by an architect, with the square applied to the pitch. The end of the long blade must only just enter

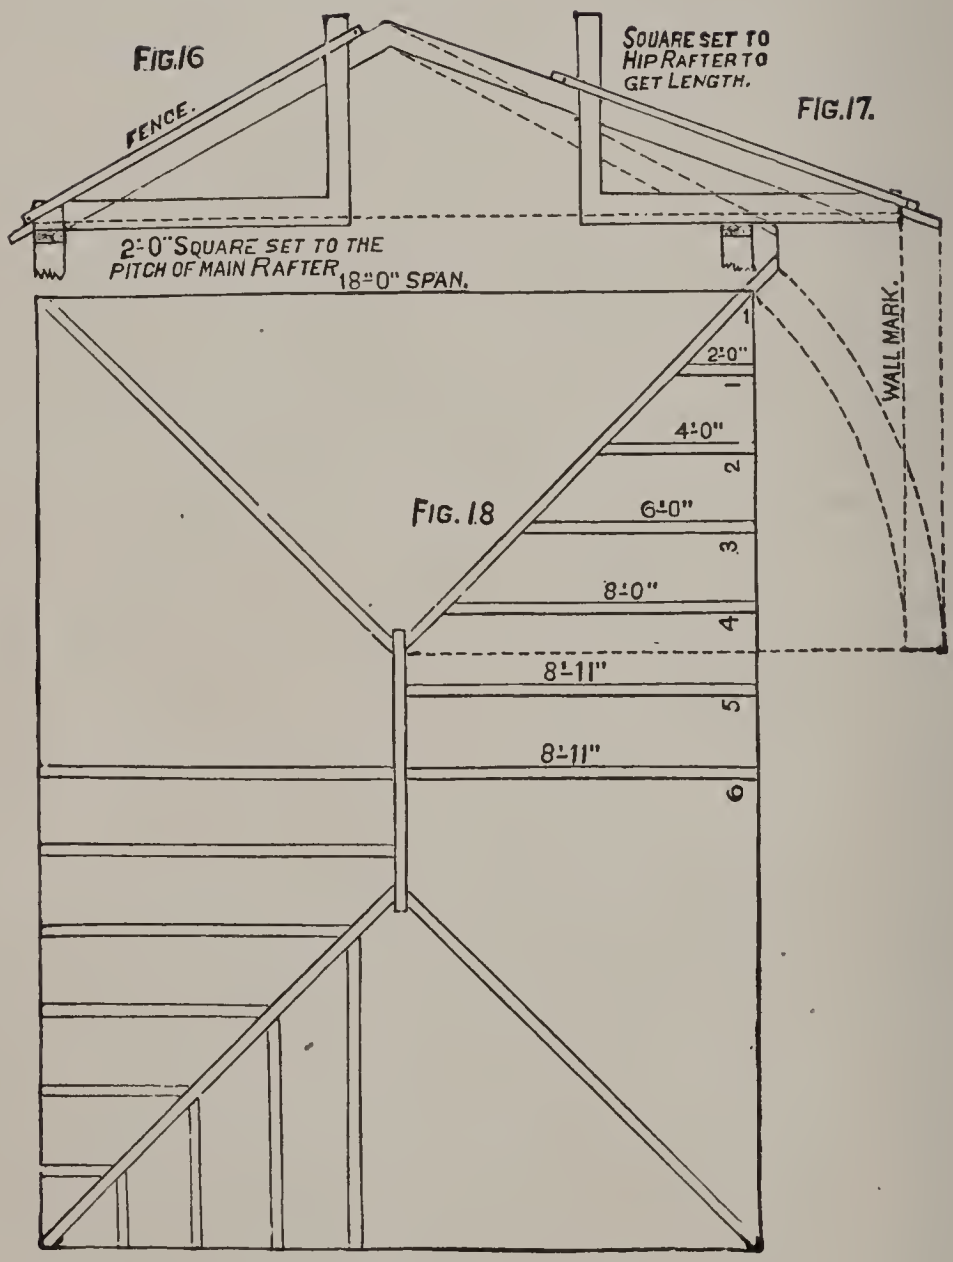
FIG.16
FENCE.
SQUARE SET TO HIP RAFTER TO GET LENGTH.
FIG.17.
2-0" SQUARE SET TO THE PITCH OF MAIN RAFTER
18-0" SPAN.
WALL MARK.
1
2-0"
1
4-0"
2
6-0"
3
8-0"
4
8-11"
5
8-11"
6
FIG. 18

the fence, as shown in the drawing, and the short end must be adjusted to the pitch of the roof, whatever it may be. Fig. 17 shows the square set to the pitch of the hip rafter. The squares as set give the plumb and level cuts. Fig. 18 is the rafter plan of a house 18 by 24 feet; the rafters are laid off on the level, and measure nine feet from centre of ridge to outside of wall; there should be a rafter pattern with a plumb cut at one end, and the foot cut at the other, got out as previously shown. (Figs. 16, 17, 18, P.) When the rafter foot is marked, place the end of the long blade of the square to the wall line, as in drawing, and mark across the rafter at the outside of the short blade, and these marks on the rafter pitch will correspond with two feet on the level plan; slide the square up the rafter and place the end of the long blade to the mark last made, and mark outside the short blade as before, repeat the application until nine feet are measured off, and then the length of the rafter is correct; remember to mark off one-half the thickness of ridge-piece. The rafters are laid off on part of plan to show the appearance of the rafters in a roof of this kind, but for working purposes the rafters 1, 2, 3, 4, 5, and 6, with one hip rafter, is all that is required.

Hip-roof Framing.—We first lay off common rafter, which has been previously explained; but deeming it necessary to give a formula in figures to avoid making a plan, we take ⅓ pitch. This pitch is ⅓ the width of building, to point of rafter from wall plate or base. For an example, always use 8, which is ⅓ of 24, on tongues for altitude; 12, ½ the width of 24, on blade for base. This cuts common rafter. Next is the hip-rafter. It must be understood that

the diagonal of 12 and 12 is 17 in framing, and the hip is the diagonal of a square added to the rise of roof; therefore we take 8 on tongue and 17 on blade; run the same number of times as common rafter (rule to find distance of hip diagonal $a^2 + a^2 + b^2 = y^2$). To cut jack rafters, divide the numbers of openings for common rafter. Suppose we have 5 jacks, with six openings, our common rafter 12 feet long, each jack would be 2 feet shorter. First 10 feet, second 8 feet, third 6 feet, and so on. The top down cut the same as cut of common rafter; foot also the same. To cut mitre to fit hip. Take half the width of building on tongue and length of common rafter on blade; blade gives cut. Now find the diagonal of 8 and 12, which is 14^{42}, call it 14 7-16, take 12 on tongue, 14 7-16 on blade; blade gives cut. The hip-rafter must be beveled to suit jacks; height of hip on tongue, length of hip on blade; tongue gives bevel. Then we take 8 on tongue 18¾ on blade; tongue gives the bevel. Those figures will span all cuts in putting on cornice and sheathing. To cut bed moulds for gable to fit under cornice, take half width of building on tongue length of common rafter on blade; blade gives cut; machine mouldings will not member, but this gives a solid joint; and to member properly it is necessary to make moulding by hand, the diagonal plumb cut differences. I find a great many mechanics puzzled to makes the cuts for a valley. To cut planceer, to run up valley, take heighth of rafter on tongue, length of rafter on blade; tongue gives cut. The plumb cut takes the height of hip-rafter on tongue, length of hip-rafter on blade; tongue gives cut. These figures give the cuts for ⅓ pitch only, regardless of width of building.

For a hopper the mitre is cut on the same principle. To make a butt joint, take the width of side on blade, and half the flare on tongue; the latter gives the cut. You will observe that a hip-roof is the same as a hopper inverted. The cuts for the edges of the pieces of a hexagonal hopper are found this way: Subtract the width of one piece at the bottom from the width of same at top, take remainder on tongue, depth of side on blade; tongue gives the cut. The cut on the face of sides: Take 7-12 of the rise on tongues and the depth of side on blade; tongue gives cut. The bevel of top and bottom: Take rise on blade, run on tongue; tongue gives cut.

Fig. 19 exhibits two methods of finding the "backing" of the angle on hip-rafter. The methods are as simple as any known. Take the length of the rafter on the blade, and the rise on the short blade or tongue, place the square on the line D E, the plan of the hip, the angle is given to bevel the hip-rafter, as shown at F. This method gives the angle, only for a right-angled plan, where the pitches are the same, *and no other.*

The other method applies to right, obtuse, and acute angles, where the pitches are the same. At the angle D will be seen the line from the points K L, at the intersection of the sides of the angle rafter with the sides of the plan.

With one point of the compass at D, describe the curve from the line as shown. Tangential to the curve draw the dotted line, cutting A, then draw a line parallel to A B, the pitch of the hip. The pitch or bevel, will be found at G, which is a section of the hip-rafter.

This problem is taken from "Gould's Carpenters'

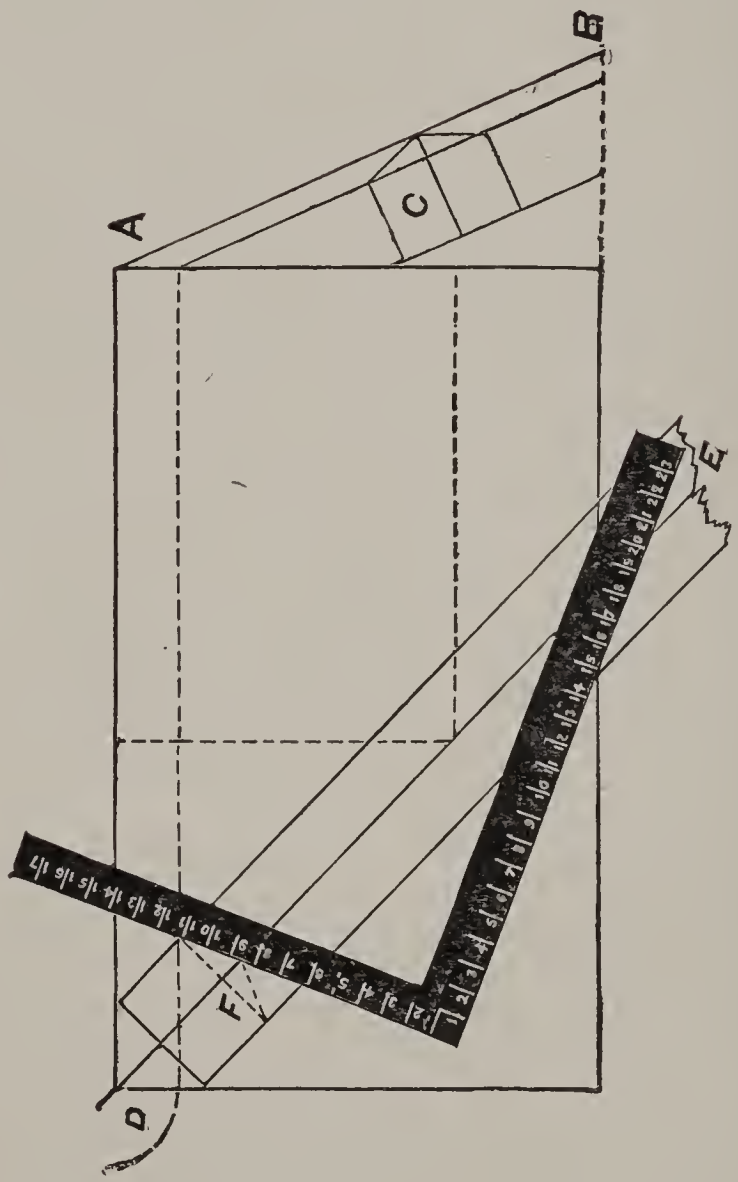

FIG. 19.

Guide," but has been in practice among workmen for many years.

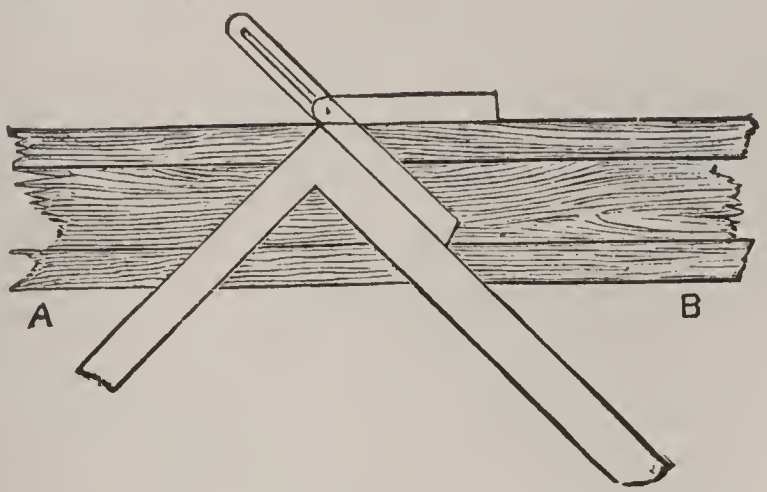

FIG 20.

Fig. 20 exhibits a method of finding the cuts in a mitre box, by placing the square on the line A B at equal distances from the heel of the square, say ten inches. The bevel is shown to prove the truth of the lines by applying it to opposite sides of the square.

Stairs.—In laying out stairs with the square, it is necessary to first determine the height from the top of the floor on which the stairs start from, to the floor on which they are to land; also the "run" or the distance of their horizontal stretch. These lengths being obtained, the rest is easy.

Fig. 21 shows a part of a stair string, with the "square" laid on, showing its application in cutting out a pitch-board. As the square is placed it shows 10 inches for the tread and 7 inches for the rise.

To cut a pitch-board, after the tread and rise have been

determined, proceed as follows: Take a piece of thin, clear stuff, and lay the square on the face edge, as shown in the figure, and mark out the pitch-board with a sharp knife;

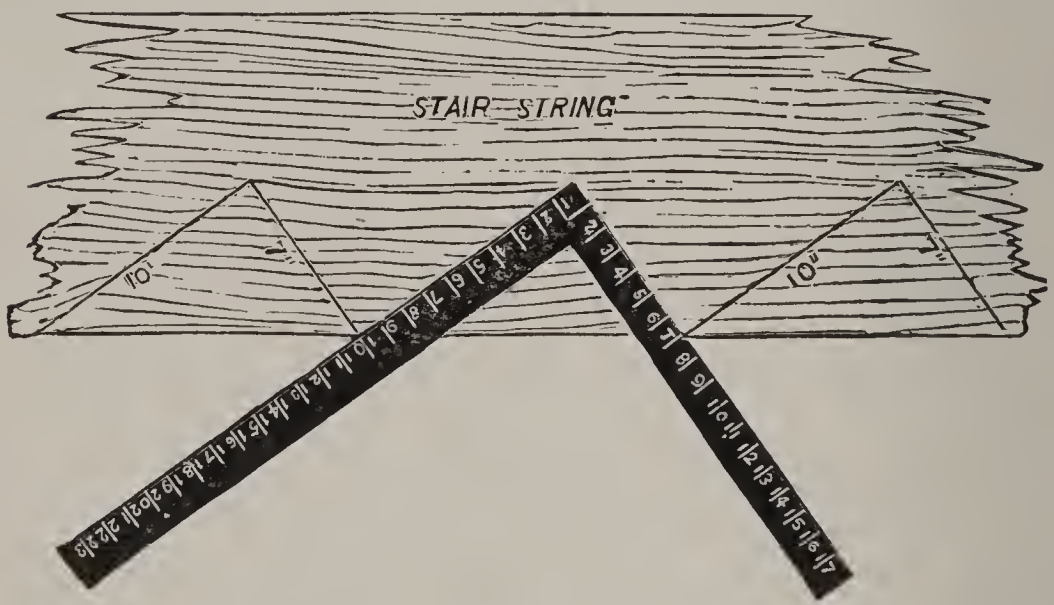

FIG. 21.

then cut out with a fine saw and dress to knife marks, nail a piece on the longest edge of the pitch-board for a fence, and it is ready for use.

Fig. 22 is a rod, with the number and heighth of steps for a rough flight of stairs to lead down into a cellar or elsewhere.

Fig. 23 is a step-ladder, sufficiently inclined to permit a person to pass up and down on it with convenience. To lay off the treads, level across the pitch of the ladder, set the short side of the square on the floor, at the foot of the string, after the string is cut, to fit the floor and trimmer joists. Fasten the fence on the square, as shown at Fig. 5. The height of the steps in this case is nine inches, so it will be seen that it is an easy matter to lay off the string, as the

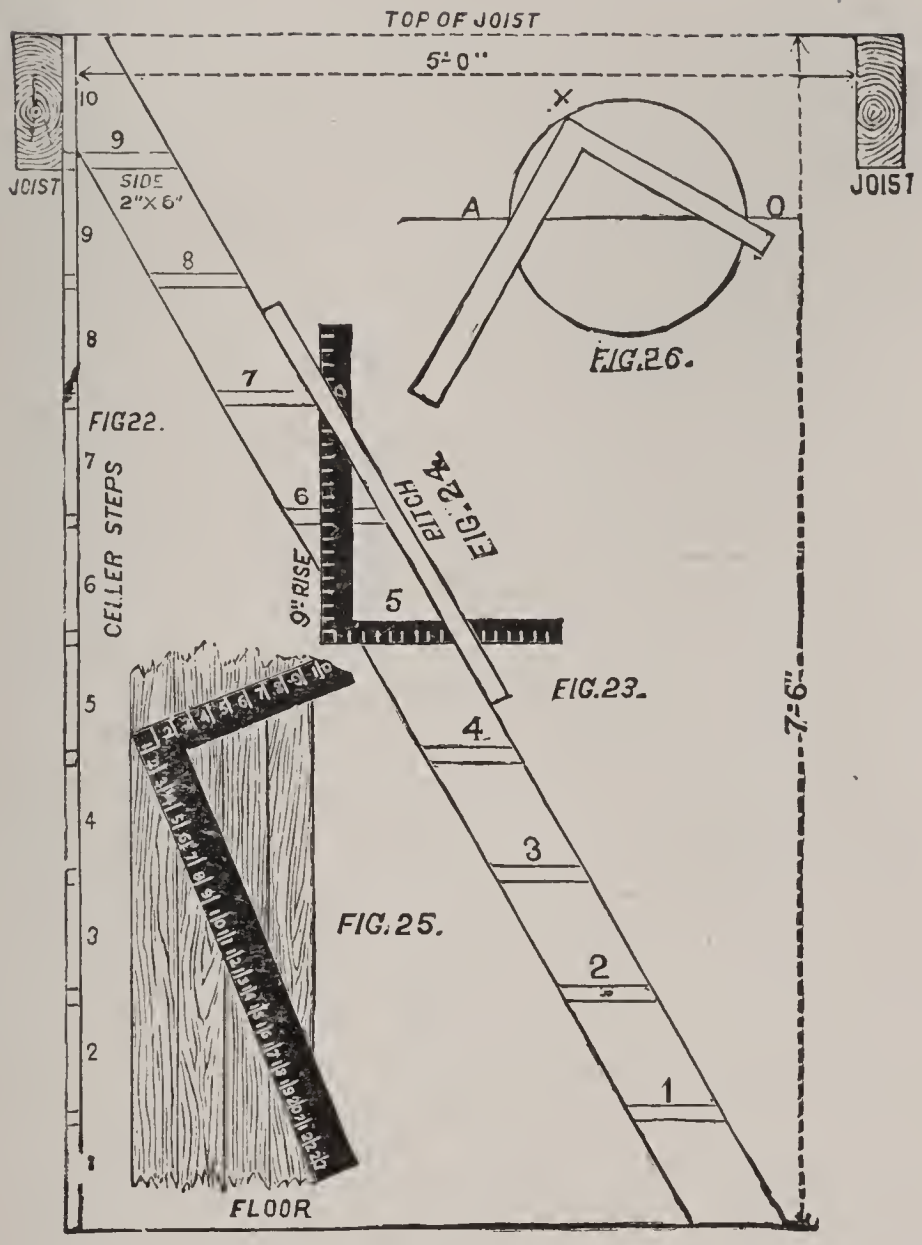

FIG22.

FIG.24.

FIG.23.

FIG.26.

FIG.25.

long side of the square hangs plumb, and nine inches up its length will be the distance from one step to the next one.

Fig. 24 shows the square and fence in position on the string.

The opening in the floor at the top of the string shows the ends of trimming joists, five feet apart.

Fig. 25 shows how to divide a board into an even number of parts, each part being equal, when the same is an uneven number of inches, or parts of an inch in width. Lay the square as shown, with the ends of the square on the edges of the board, then the points of division will be found at 6, 12, and 18, for dividing the board in four equal parts; or at 4, 8, 12, 16, and 20, if it is desired to divide the board into six equal parts. Of course, the common two-foot rule will answer this purpose as well as the square, but it is not always convenient.

Fig. 26 shows how a circle can be described by means of a "steel square" without having recourse to its centre.

At the extremities of the diameter, A, O, fix two pins, as shown; then by sliding the sides of the square in contact with the pins, and holding a pencil at the point X, a semicircle will be struck. Reverse the square, repeat the process, and the circle is complete.

Miscellaneous Rules —The following rules have been tested over and over again by the writer, and found reliable in every instance. They have been known to advanced workmen for many years, but were never published, so far as the writer knows, until they appeared in the *Builder and Wood-Worker*, some years ago:

Measurement.—Let us suppose that we have a pile of lumber to measure, the boards being of different widths, and say 16 feet long. We take our square and a bevel with a long blade and proceed as follows: First we set the bevel at 12 inches on the tongue of the square, because we want to find the contents of the board in feet, 12 inches being one foot; now we set the other end of the bevel blade on the 16 inch mark on the blade of the square, because the boards are 16 feet long. Now, it must be quite evident to any one who would think for a moment, that a board 12 inches, or one foot wide, and 16 feet long, must contain 16 feet of lumber. Very well, then we have 16, the length, on the blade. Now, we have a board 11 inches wide, we just move our bevel from the 12 inch mark to the 11 inch mark, and look on the blade of the square for the true answer; and so on with any width, so long as the stuff is 16 feet long. If the stuff is 2 inches thick, double the answer, if 3 inches thick, treble the answer, etc.

Now, if we have stuff 14 feet long, we simply change the bevel blade from 16 inches on the square blade, to 14 inches, keeping the other end of the bevel on the 12 inch mark, 12 inches being the constant figure on that side of the square, and it will easily be seen that any length of stuff within the range of the square can be measured accurately by this method.

If we want to find out how many yards of plastering or painting there are in a wall, it can be done by this method quite easily. Let us suppose a wall to be 12 feet high and 18 feet long, and we want to find out how many yards of plastering or painting there are in it, we set the bevel on the 9 inch mark on the tongue (we take 9 inches because 9

square feet make one square yard,) we take 18 inches, one of the dimensions of the wall, on the blade of the square; then after screwing the bevel tight, we slide it from 9 inches to 12 inches, the latter number being the other dimension, and the answer will be found on the blade of the square. It must be understood that 9 inches must be a constant figure when you want the answer to be in yards, and in measuring for plastering it is as well to set the other end of the bevel on the figure that corresponds with the height of the ceiling, and then there will require no movement of the bevel further than to place it on the third dimension. This last rule is a very simple and very useful one; of course "openings" will have to be allowed for, as this rule gives the whole measurement.

If the diagonal of any parallelogram within the range of the square is required, it can be obtained as follows: Set the blade of the bevel on 8¾ in. on the tongue of the square, and at 12⅜ in. on the blade; securely fasten the bevel at this angle. Now, suppose the parallelogram or square to be 11 inches on the side, then move the bevel to the 11 inch mark on the tongue of the square, and the answer, 15 9-16, will be found on the blade. All problems of this nature can be solved with the square and bevel as the latter is now set. There is no particular reason for using 8¾ and 12⅜, only that they are in exact proportion to 70 and 99. 4⅜ and 6 3-16 would do just as well, but would not admit as ready an adjustment of the bevel.

To find the circumference of a circle with the square and bevel proceed as follows: Set the bevel to 7 on the tongue and 22 on the blade; move the bevel to the given diameter on the tongue of the square, and the approximate answer

will be found on the blade. When the circumference is wanted the operation is simply reversed, that is, we put the bevel on the blade and look on the tongue of the square for the answer.

If we want to find the side of the greatest square that can be inscribed in a given circle, when the diameter is given, we set the bevel to 8½ on the tongue and 12 on the blade. Then set the bevel of the diameter, on the blade, and the answer will be found on the tongue.

The circumference of an ellipse or oval is found by setting 5⅝ inches on the tongue and 8¾ inches on the blade; then set the bevel to the sum of the longest and shortest diameters on the tongue, and the blade gives the answer.

To find a square of equal area to a given circle, we set the bevel to 9¾ inches on the tongue, and 11 inches on the blade; then move the bevel to the diameter of the circle on the blade, and the answer will be found on the tongue. If the circumference of the circle is given, and we want to find a square containing the same area, we set the bevel to 5½ inches on the tongue and 19½ inches on the blade.

On Fig. 27 is shown a method to determine the proportions of any circular presses or other cylindrical bodies, by the use of the square. Suppose the small circle, N, to be five inches in diameter and the circle R is ten inches in diameter, and it is required to make another circle, Z, to contain the same area as the two circles N and R. Measure line *a*, on the square D, from five on the tongue to 10 on the blade, and the length of this line A from the two points named will be the diameter of the larger circle Z. And again, if you want to run these circles into a fourth one, set the diameter of the third on the tongue of the square,

and the diameter of z on the blade, and the diagonal will give the diameter of the fourth or largest circle, and the same rule may be carried out to infinite extent. The rule is reversed by taking the diameter of the greater circle and laying diagonally on the square, and letting the ends touch

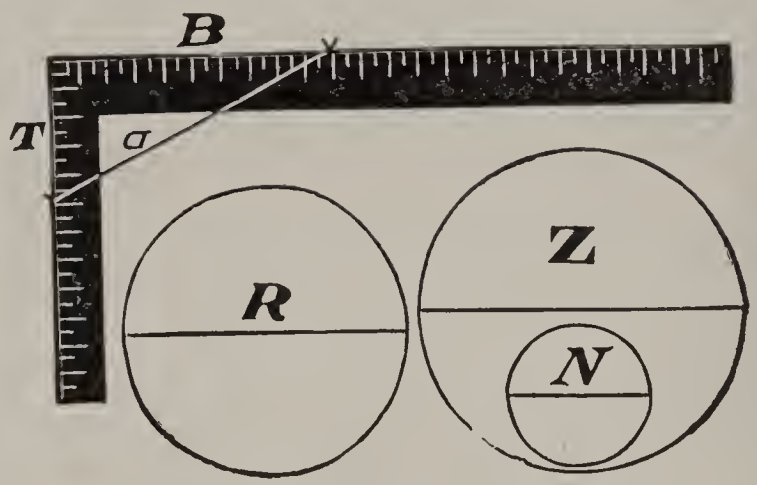

Fig. 27.

whatever points on the outside edge of the square. These points will give the diameter of two circles, which combined, will contain the same area as the larger circle. The same rule can also be applied to squares, cubes, triangles, rectangles, and all other regular figures, by taking similar dimensions only; that is, if the largest side of one triangle is taken, the largest side of the other must also be taken, and the result will be the largest side of the required triangle, and so with the shortest side.

In Fig. 28 we show how the centre of a circle may be determined without the use of compasses; this is based on the principle that a circle can be drawn through any three points that are not actually in a straight line. Suppose we take A B C D for four given points, then draw a line from A

to D, and from B to C; get the centre of these lines, and square from these centres as shown, and when the square crosses, the line, or where the lines intersect, as at X, there will be the centre of the circle. This is a very useful rule, and

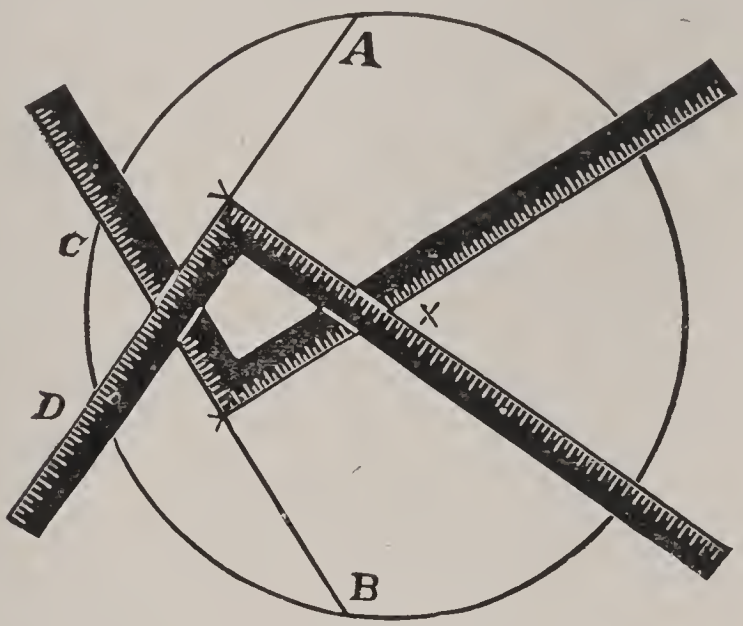

FIG. 28.

by keeping it in mind the mechanic may very frequently save himself much trouble, as it often happens that it is necessary to find the centre of the circle, when the compasses are not at hand.

In Fig. 29 we show how the square can be used, in lieu of the trammel, for the production of ellipses. Here the square, E D F, is used to form the elliptical quadrant, A B, instead of the cross of the trammel; *h l k* may be simply pins, which can be pressed against the sides of the square while the tracer is moved. In this case the adjustment is obtained by making the distance, *h l*, equal to the semi-axis minor, and the distance *l k*, equal to the semi-axis major.

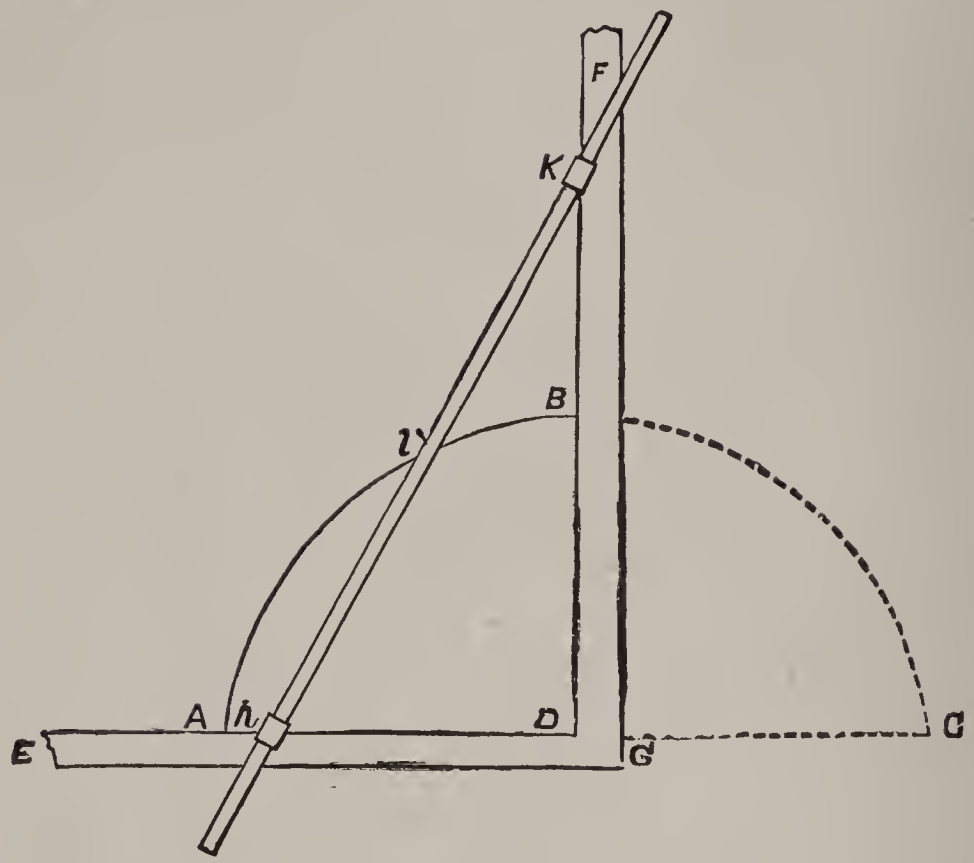

FIG. 29.

Fig. 30 shows a method of describing a parabola by means of a straight rule and a square, its double ordinate and abscissa being given. Let A C be the double ordinate, and D B the abscissa. Bisect D C in F; join B F, and draw F E perpendicular to B F, cutting the axis B D produced in F. From B set off B G equal to D E, and G will be the focus of the parabola. Make B L equal to B G, and lay the rule on straight-edge H K on L, and parallel to A C. Take a string, M F G, equal in length to L E; attach one of its ends to a pin, or other fastening, at G, and its other end to the end M, of the square M N O. If now the square be slid along the straight-edge, and the string be pressed against

its edge M N, a pencil placed in the bight at F will describe the curve.

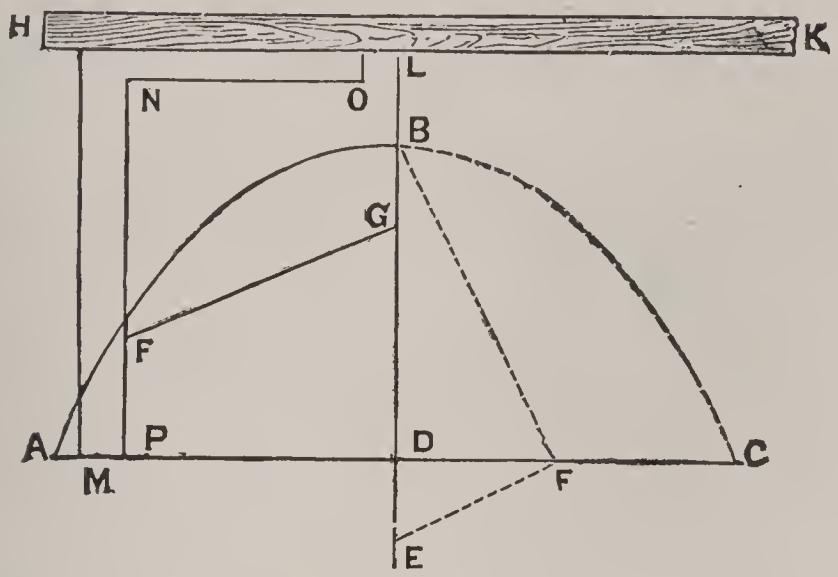

FIG. 30.

The two arms of a horizontal lever are respectively 9 inches and 13 inches in length from the suspending point; a weight of 10 lbs. is suspended from the shorter arm, and it is required to know what weight will be required to suspend on the long arm to make it balance. Set a bevel on the blade of square at 13 inches and the other end of the bevel on the 9 inch mark on tongue of square, then slide the bevel from 13 inches to 10 on the blade of square, and the answer will be found on the tongue of the square. It is easy to see how this rule can be reversed so that a weight required for the shorter arm can be found.

Fig. 31 shows how to get the flare for a hopper 4 feet across the top and 16 inches perpendicular depth. Add to the depth one-third of the required size of the discharge

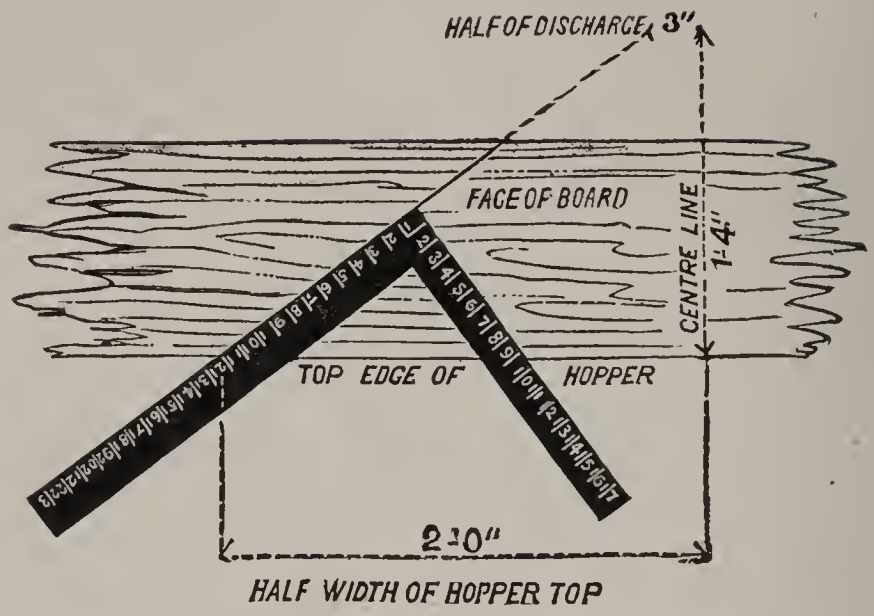

FIG. 31.

hole (the draft represents a 6-inch hole), which makes 18 inches, which is represented on the tongue of the square. (The figures on the draft are 9 and 12, which produce the same bevel.) Then take one-half, 24 inches of the width across the top of the hopper, which is represented on the blade of the square. Then scribe along the blade as represented by the dotted lines, which gives the required flare. (The one-third added to the depth is near enough for all practical purpose for the discharge.)

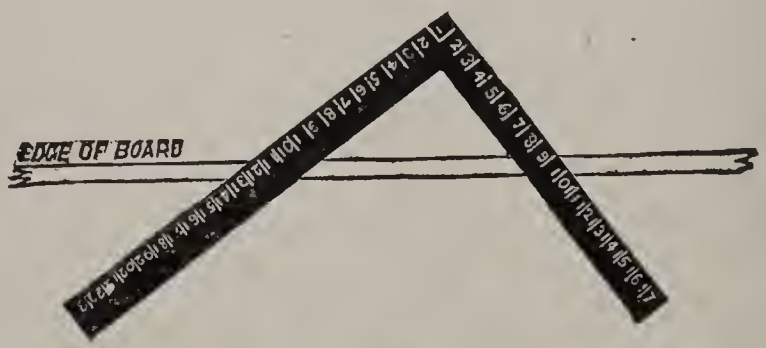

FIG. 32.

Fig. 32 shows how to apply the square to the edge of a board in order to obtain the bevel to form the joint. Using the same figures as in Fig. 31, scribe across the edge of the board by the side of the tongue, as shown by dotted lines. The long point being the outside.

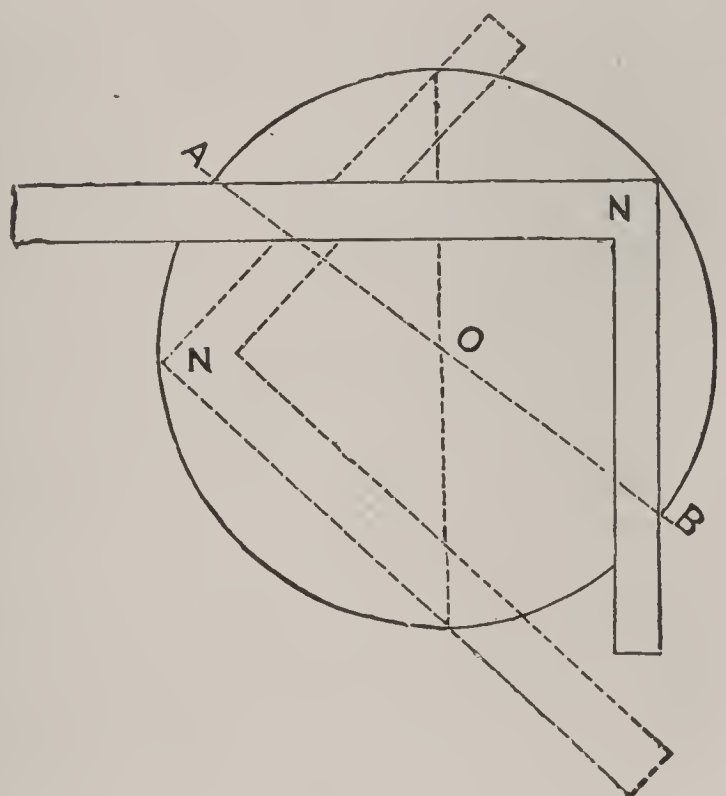

FIG. 33.

On Fig. 33 we show a quick method of finding the centre of a circle: Let N N, the corner of the square, touch the circumference, and where the blade and tongue cross it will be divided equally; then move the square to any other place and mark in the same way and straight edge across, and where the line crosses A, B, as at O, there will be the centre of the circle.

1 and 2, Fig. 34, are taken from Gould's *Wood-Working Guide.*

The portion marked A, exhibits a method of finding the lines for eight-squaring a piece of timber with the square, by placing the block on the piece, and making the points seven inches from the ends of the square, from which to draw the lines for the sides of the octagonal piece required.

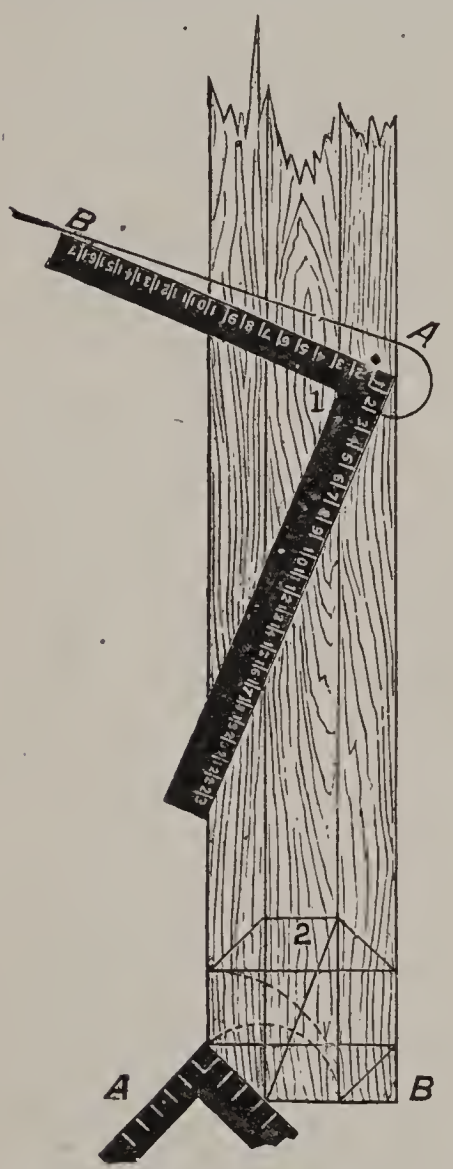

FIG. 34.

At the heel of the square is shown a method of cutting a board to fit any angle with the square and compass, by placing the square in the angle, and taking the distance from the heel of the square to the angle A, in the compass; then lay the square on the piece to be fitted, with the distance taken, and from the point A, draw the line A B, which will give the angle to cut the piece required.

At 2 is shown a method of constructing a polygonal figure of eight sides; by placing the square on the line A B, with equal distances on the blade and tongue, as shown; the curve lines show the method of transferring the distances; the diagonal gives the intersection at the angles.

There are at least a dozen different ways of forming octagonal figures by the square; some of them are tedious and difficult, while others can not be applied under all circumstances. The method shown at Fig. 35 is handy and easily understood.

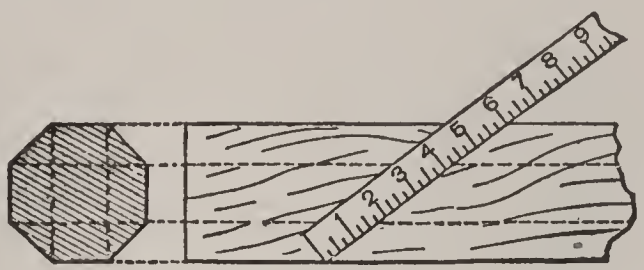

Fig. 35.

An equilateral triangle can be formed by taking half of one side on the tongue of the square, as shown at Fig. 36. The line along the edge of the tongue forms the mitre for

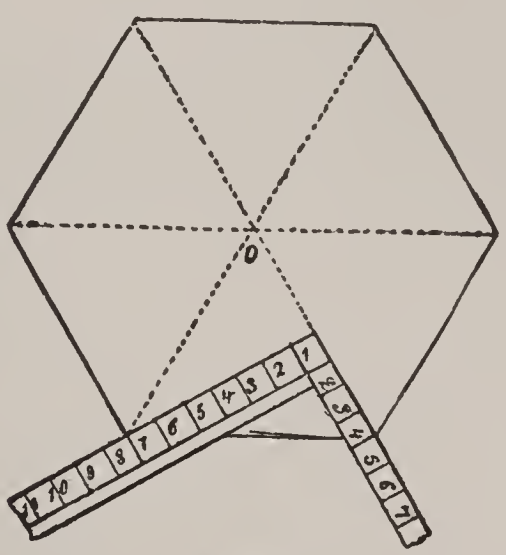

Fig. 36.

the triangle, and the line along the edge of the blade forms e cut for the joints of a hexagon, and as six equi-

lateral triangles form a hexagon when one point of each is placed at a central point, *o*, it follows that a hexagon may be constructed by the square above.

The following is a good method for obtaining the cuts for a horizontal and raking cornice; it is correct and simple; the gutter to be always cut a square mitre.

The seat or run of the rafter on the blade, R C, Fig. 37, the rise of the roof on the tongue, A C, mark against the tongue, gives the cut for the side of the box, A C. The

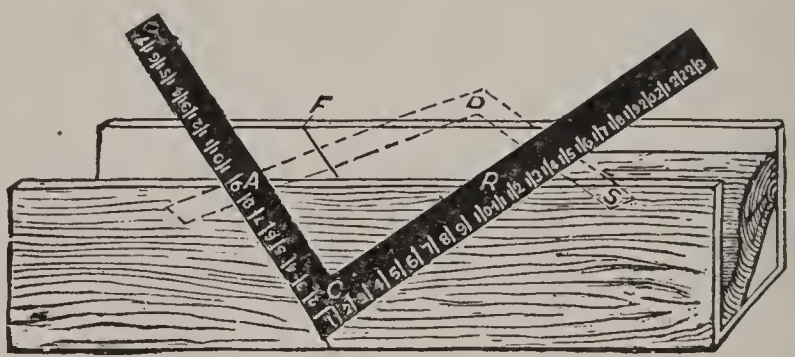

Fig. 37.

diagonal A, R, which is the length of the rafter on the blade A, D, the seat of the rafter on the tongue D, S, mark against the blade gives the cut across the box, A D. D A C is the mitre cut to fit the gutter; then if we square across the box from A, it gives F, A, C the cut for the gable peak.

At Fig. 38 is shown a method for obtaining either the butt or mitre cuts, for "Hopper" work.

The line, s s, in the cut represents the edge of a board; the line, A B, the flare of hopper. Lay the square on the face of the board so that the blade will coincide with flare of hopper, A B, then mark by the tongue the line B C, then square from edge of board, s s, cutting the angle B.

Now we have a figure that will, when used on the steel

square, give the cuts for a hopper of any flare, either with butt or mitre joints.

To find bevel to cut across face of board:

Take A B on blade and A D on tongue, bevel of tongue is the bevel required.

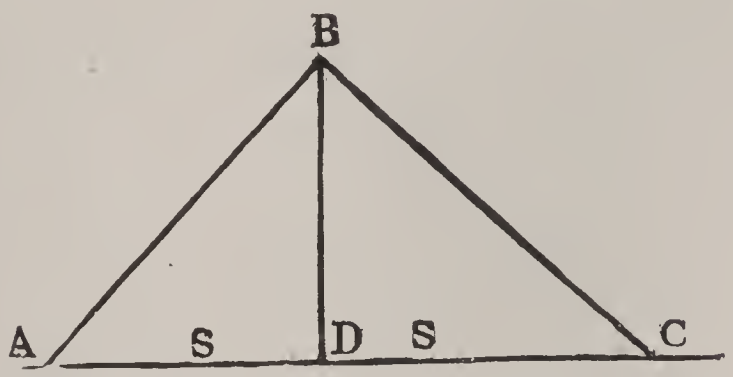

Fig. 38.

To find the bevel for butt-joint: Take B C on blade and A D on tongue; bevel of tongue is the bevel required.

To find the bevel for mitre joint: Take B C on blade and D C on tongue; bevel of tongue is the bevel required.

It will be seen that this is a very simple method of solving what is usually considered a very difficult problem.

PART II.

The following useful applications of the square were kindly furnished for this work, by Mr. Croker; several of them are new and original:

Consider the blade of the square as representing the *span* of a building, but without any reference to actual or scale measurement. Next, some particular portion of the blade is to be taken as the rise of the *supposed* building; if a third, fourth, or half pitch is required, then a third, fourth, or a half of the blade is conceived as the rise which with half the blade solves the pitch. From this it will be seen that half the blade is always taken as the base of the *theoretical common rafter.* Where we have to deal with irregular pitches—by which is meant those pitches which are not a quarter, sixth, third, half, etc., of the building—then the square is to be applied to the irregular pitch with the blade lying in the direction of the pitch and the centre of the blade at the intersection of pitch and base line of the common rafter, and the resulting distance on the tongue, where it intersects the base line, is the distance to be taken as the rise of the theoretical rafter. Let us now take a hip-roof over a square plan (for all the rules apply only to square planned building), and the practical problems supposed to need solution are: Length of common rafters, the plumb and level cuts; length of hip-rafter, its plumb and level cuts; bevel of jacks and sheet-

ing boards against the hips; "backing" of the hip-rafter, top and down bevel of a purlin mitering against the hip with its surface in line with the plane of the roof. If the student can readily and intelligently solve these problems, he will be in a position to make extensions in the principles involved. Let the width of building under consideration be 24 feet wide, and of one third pitch.

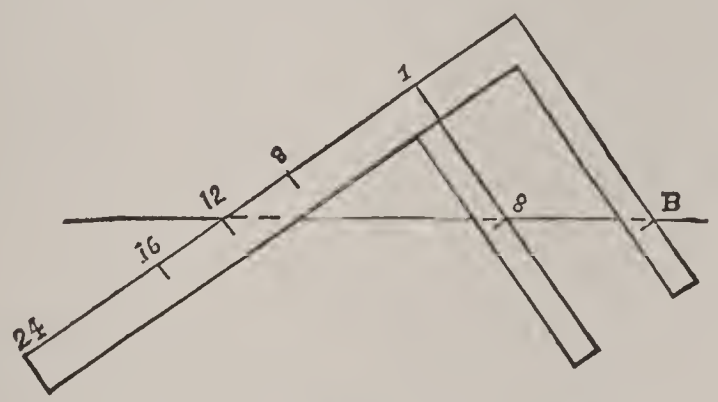

FIG. 36.

Let 1, 12, Fig. 36, be the base of the theoretical common rafter, eight inches rise, equal to one third of the blade, because it is a third pitch; mark along the blade and extend the heel, making it and 12 equal to half the width of the actual building to a scale of 1½ inch to a foot; this is a much better scale to work by than an inch one, being larger and more legible, eighths being inches, sixteenths, ½ inches, etc., thus enabling very accurate measurements to be taken. By the way, it is a good plan to have the square stamped off on the eighths side at every 1½ inches for feet, for more readily counting the scale; then mark along the tongue at B, which gives B 12 the length of common rafter; level cut on blade and plumb cut on tongue. Next take the rise of the theoretical common rafter on the tongue, and 17 inches

on the blade, as the theoretical base of the hip-rafter; place the square as shown at Fig. 37; then multiply the

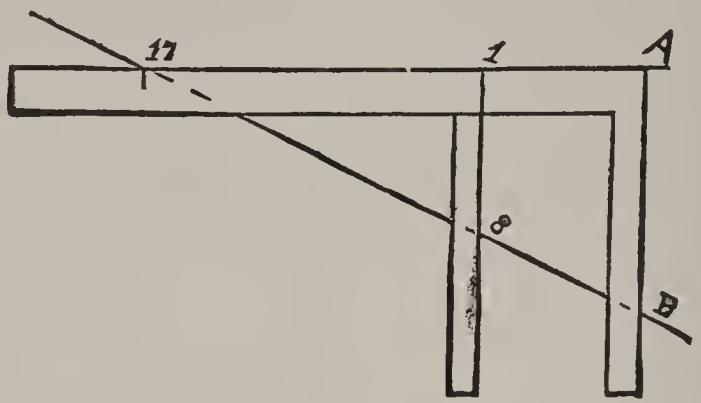

FIG. 37.

actual base of common rafter 12, (Fig. 36.) by 1·414 = 16·968 feet, or 17 feet, practically, which set off on blade at A 17; mark on tongue at B, then B 17 is the length of hip-rafter. For the bevels of jacks and sheeting-boards against hips take the diagonal B 12—theoretical rafter—Fig. 36, on the blade with half the blade—the theoretical base—and place the square as shown at Fig. 38, then mark along the blade for bevel of jacks, and along tongue for bevel of sheeting-boards.

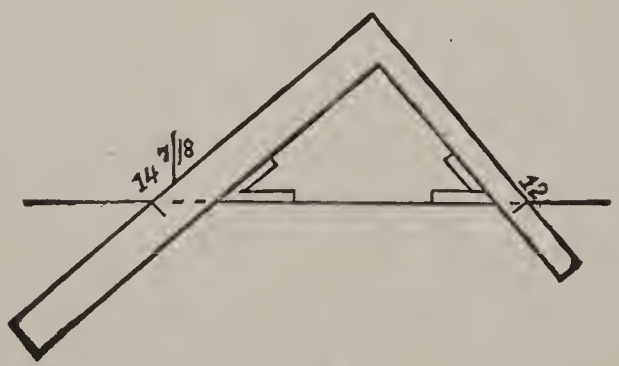

FIG. 38.

For the "backing" of hip, take the diagonal of the theoretical hip-rafter, 8, 17 (Fig 37), on the blade, and its rise—8 inches—on the tongue, and place square as shown at Fig. 39; mark by the tongue which gives the bevel required.

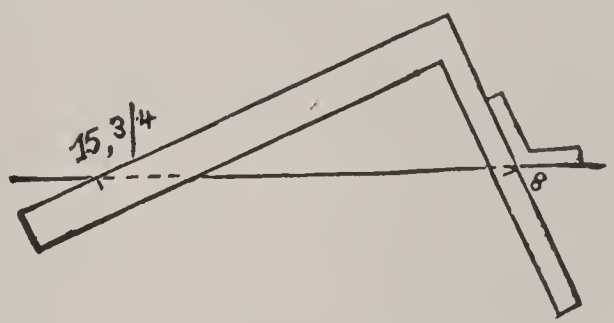

Fig. 39.

To get the upper bevel of a purlin lying in the plane of the roof, take the bevel at tongue (Fig. 38), for the down bevel take the blade distance 14·7—16 (Fig. 38) on the blade with the theoretical rise—8; place the square as shown at Fig. 40; mark by the tongue which gives the bevel required.

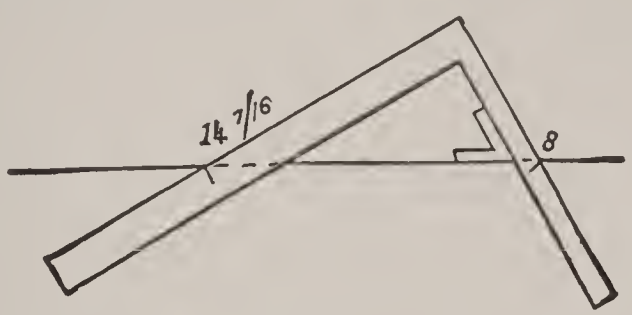

Fig. 40.

Fig. 41 shows how any length or breadth within the extent of the blade of the square can be instantly divided into any equal parts. Let A and B represent the edges of a board, say 8¾ inches, wide, to be divided into 5 equal parts; take any

convenient 5 parts, say 15 inches, because $5 \times 3 = 15$, placing heel of square fair to edge B, and 15 to edge A; mark off at every 3 inches on blade, as shown, and draw lines through these points, which will divide the board as required. We will here show how the square can be used to solve problems in proportion; for instance, if 1500 feet of boards cost $10.75, what will 600 feet cost? Take 15 on the blade

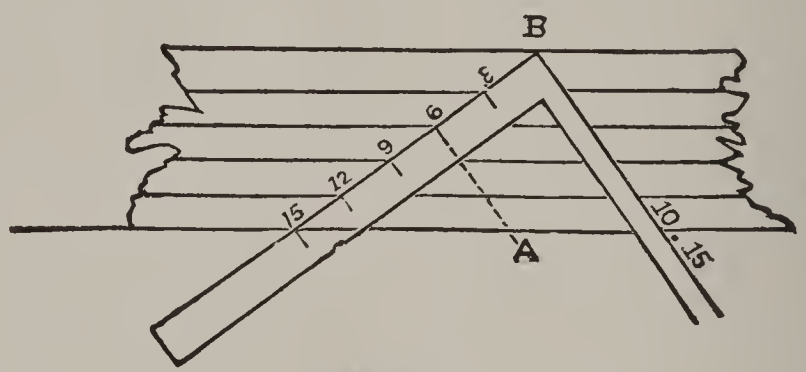

FIG. 41.

and 10·75 on the tongue, and place the square as shown at Fig. 41, then count from 15 towards B, and from this point draw parallel to tongue; 6 A, this is the answer required.

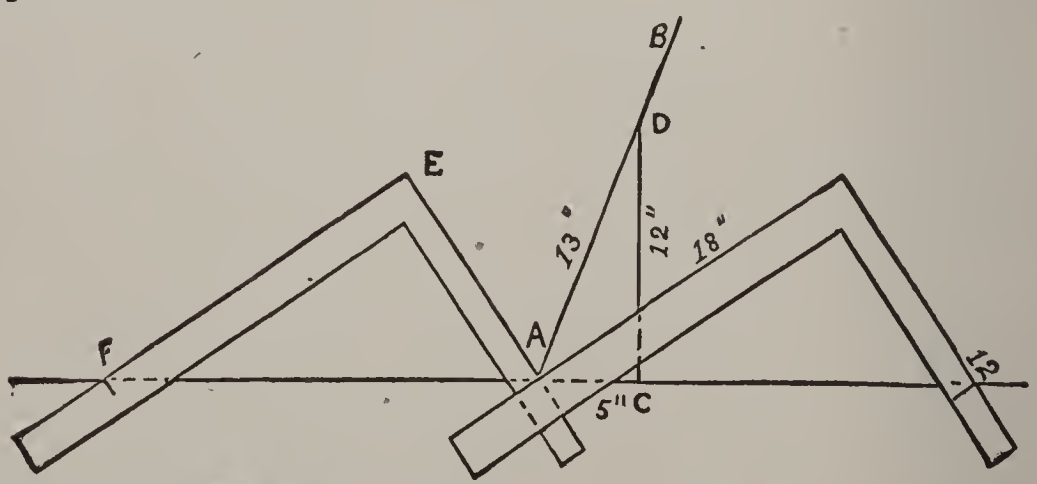

FIG. 42.

FIG. 43.

Figs. 42 and 43 show quite a novel and useful way of bisecting any angle. Let A 12, A B be the given sides of an acute angle to be bisected. At any convenient point as C square C D from C 12. Now take C D on the tongue, and the sum of A D and A C on the blade of the square, place as shown in the Figure, then mark by the blade, which is the bisection required. If the angle is obtuse, as A B, A F, (Fig. 42), próduce a convenient distance, as A C, square over C D, take C D on the tongue, and the sum of A D, A C, on the blade, place square as shown, and mark by the tongue for the required bisection.

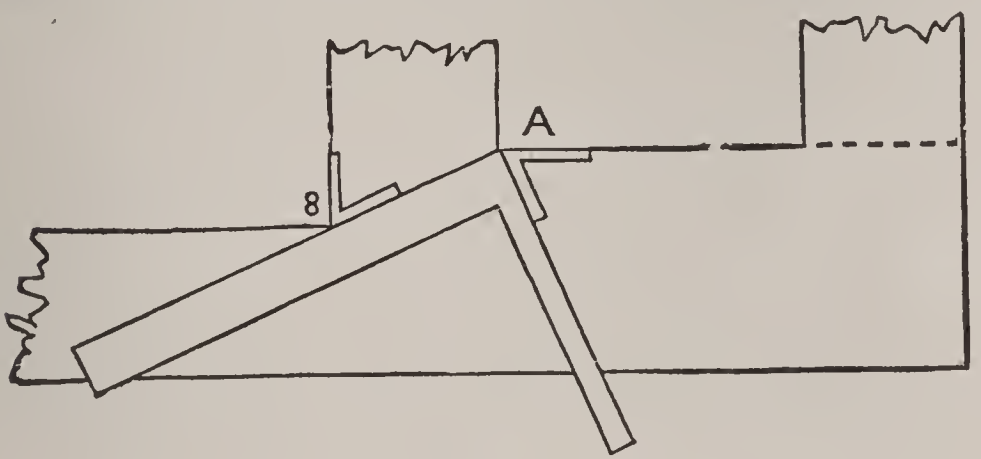

FIG. 44.

Fig. 44 shows a handy way of finding the bevel of rails to diminish door stiles. Place the square fair with the known joint A B, mark by the tongue, then the resulting bevel at A is the same as that at B.

PART III.

The following rules have been gathered from various sources, chiefly, however, from papers recently published in the *Scientific American Supplement*, by John O. Connell, of St. Louis, and from papers contributed to the *Builder and Wood-Worker*, by Wm. E. Hill, of Terre Haute, Ind.

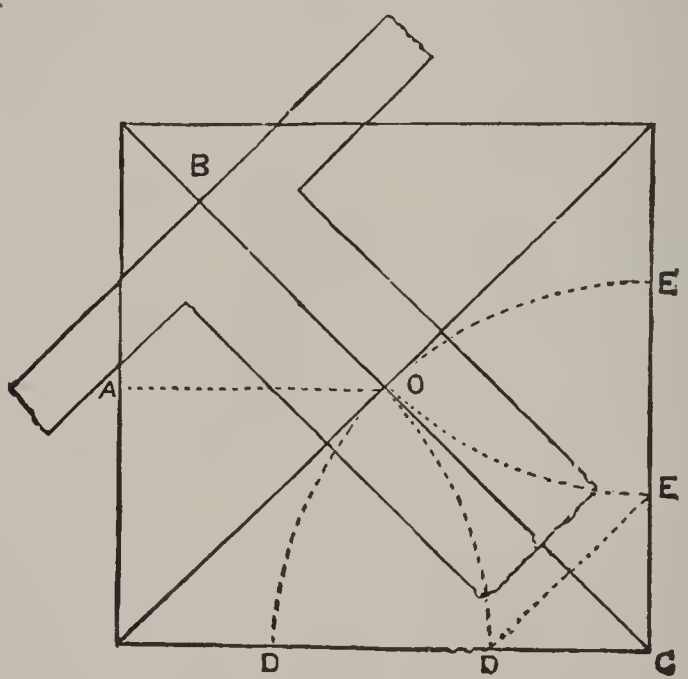

FIG. 45.

* Fig. 45 shows how an octagon can be produced by the aid of a steel square. Prick off the distance A O equal to half the distance of the square; mark this distance on the blade of the square from B to O, place the square on the

* Wm. E. Hill.

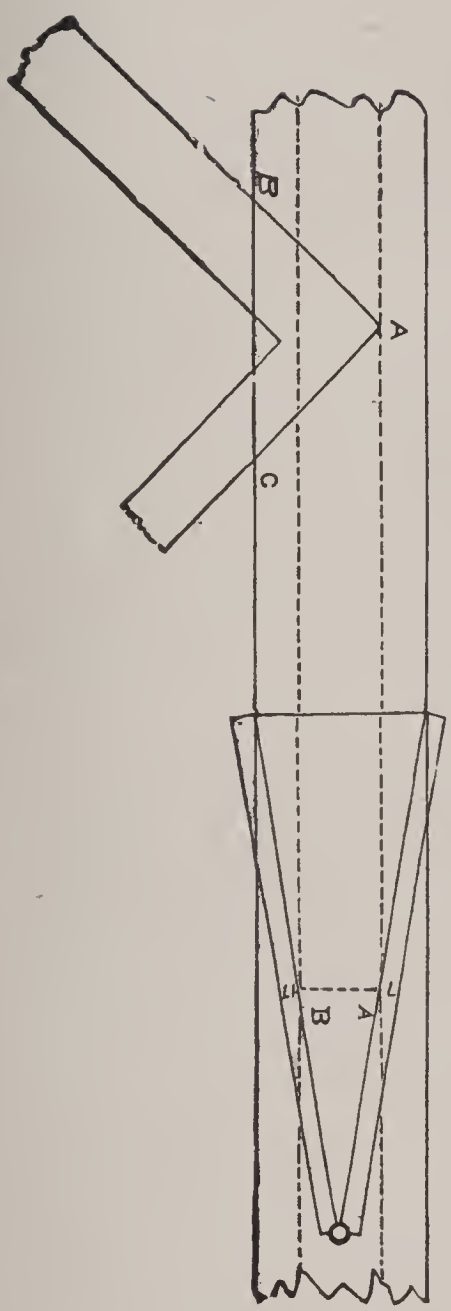

Fig. 46.

diagonal, as shown, and square over each way. Do the same at every angle, and the octagon is complete.

To obtain the same figure with the compasses, proceed as follows: Take half the diagonal on the compasses, make a little over a quarter sweep from C, and at the insersection at D and C, then D and C form one side of an octagonal figure.

Again: take a piece of timber twelve inches square, as at Fig. 46; take twelve inches on the blade and tongue from A to B, and A to C, mark at the point A, operate similarly on the opposite edge, and the marked points will be guides for guage-lines for the angles forming an octagon. The remaining three sides of the timber can be treated in the same manner.

These points can be found with a carpenter's rule as follows: Lay the

rule on the timber, partly opened, as shown, in the cut, "prick off" at the figures 7 and 17 as at A and B, and these points will be the guides for the gauge-lines. The same points can be found by laying the square diagonally across the timber and "pricking" off 7 and 17.

To make a moulder's flask octagonal proceed as follows: The flask to be four feet across. Multiply 4 × 5 (as an octagon is always as 5 to 12 nearly), which gives 20; divide by 12, which gives 1⅔ feet, cut mitre to suit this measurement, nail into corners of square box, and you have an octagon flask at once.

Another method of constructing an octagon is shown at Fig. 47. Take the side as *a b* for a radius, describe an arc

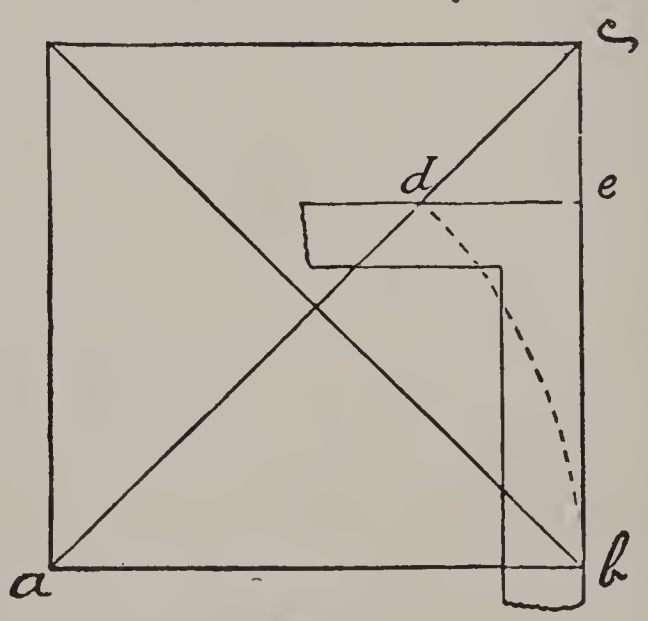

FIG. 47.

cutting the diagonal at *d*; square over from *d* to *e*, and the point *e* will then be the gauge-guide for all the sides.

Another method (Fig. 48) is to draw a straight line, *c b*, any length; then let *a b* and *a c* be corresponding figures on the blade and tongue of the square, mark along either and measure the distance of required octagon; move

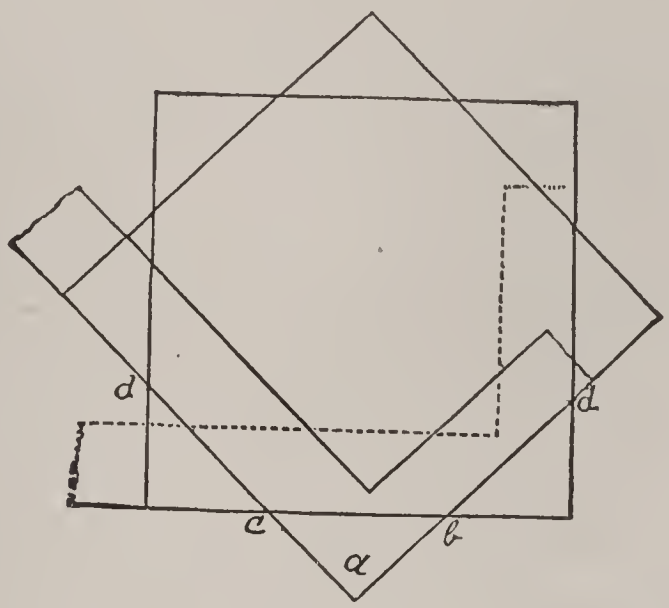

FIG. 48.

the square and mark also. Now use the square the same as before, and the marks *c b* and *b d* are the points required.

Fig. 49 shows the application of a long bevel to a square, by which some calculations can be made with greater ease and quickness than by the usual arithmetical process. The largest size of carpenter's bevel placed under the framing square will answer in nearly every case. One edge of each blade should be perfectly straight and the edge of L should be cut out in several places to see the blade E, when placed under the square. The two blades should be fastened together by a thumb-screw. There

should be three holes in L, one near each end and one in the middle, and a notch filed by each hole, so that the blade E, may be shifted when necessary.

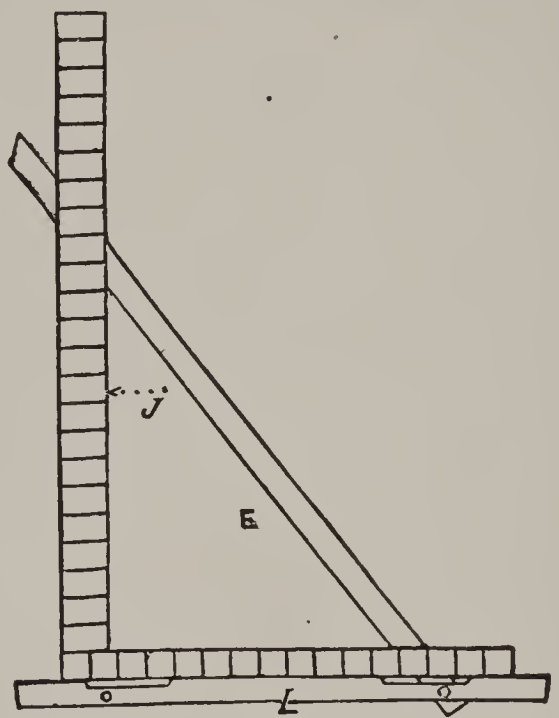

FIG. 49

*To Find the Diagonal of a Square by this instrument, set the blade E to 8¾ inches on the tongue and 12⅜ inches on the blade. Then screw the bevel fast; and supposing the side of the square in question is 11 inches, move blade E to the 11 inch mark on the tongue, keeping blade L against the square, when blade E will touch 15 9-16 inches on the blade, which is the required diagonal. There is no special reason for using 8¾ and 12⅜; other numbers may be employed provided the proportion of 70 to 99 exists between them. In the problem just solved as in all that follow, the bevel being once set to solve a particular ques-

* J. O. Connell.

tion will solve all the others of the same kind, till the bevel is altered.

Polygons Inscribed in Circles.—In the following table, set the bevel to the pair of numbers under the polygon to be inscribed.

No. of sides.	3	4	5	6	7	8	9	10	11	12
Radius.....	56	70	74	Side	60	98	22	89	80	85
Side.....	97	99	87	equal to radius.	52	75	15	55	45	44

If we require the radius of a circle which will circumscribe an octagon 8 inches on a side, we refer to column 8, take 98 parts on the blade and 75 on tongue, and tighten the bevel. As the side of a hexagon equals the radius of its circle, the side of an octagon must be less than the radius; hence we shift to 8 inches, that end of the bevel blade which gives the lesser number, in this case, on the tongue of the square, as the 75 parts to which the bevel was set are less than the 98. The required radius is then indicated on the blade.

We will now explain the figures used in stepping round a circle forming inscribed polygons from three to twelve sides: Set bevel or fence to 12 on blade, and the number opposite each polygon on tongue; move to diameter of circle; answer of the side of polygon on tongue.

Names.	*No. of Sides.*	*Gauge Points*
Triangle.....	3	10·40
Square.....	4	8·49
Pentagon.....	5	7·05
Hexagon.....	6	6·00
Heptagon.....	7	5·21
Octagon.....	8	4·60
Nonagon.....	9	4·11
Decagon.....	10	3·71
Undecagon.....	11	3·39
Dodecagon.....	12	3·11

To divide a circle into a given number of parts, multiply the corresponding number in column one and the product is the chord to lay off on circumference. The side of a polygon is known, to find the radius of a circle that will circumscribe: Multiply the given side by the corresponding number opposite of polygon in column two.

No. of Sides.	*Name of Polygon.*	*Angle.*	*Angle of Polygon.*	*Column 1.*	*Column 2.*
3	Triangle	120	60	1·732	·5773
4	Square	90	90	1·414	·7071
5	Pentagon	72	108	1·775	·8510
6	Hexagon	60	120	Radius.	Side.
7	Heptagon	51 3-7	128 4-7	·8677	1·152
8	Octagon	45	135	·7653	1·3071
9	Nonagon	40	140	·6840	1·4863
10	Decagon	36	144	·6180	1·6181
11	Undecagon	32 8-11	147 3-11	·5634	1·7754
12	Dodecagon	30	150	·5176	1·9323

The side of a polygon is known, to find the length of perpendicular: Set bevel or fence to the tabulated numbers below. Example: The side of an octagon is 12, set bevel to 23 on tongue, 27 11-16 on blade. Blade gives the answer.

No. of Sides.	3	4	5	6	7	8	9	10	11	12
Perpendicular..	9	1	30	13	27 3-4	27 7-10	50 3-4	28 1-2	51 3-4	26
Side of Polygon	31 1-5	2	35 1-4	15	26	23	37	18 1-2	30 1-2	14

To Inscribe three Equal Circles in a circle of given diameter. Set to 6½ on tongue and 14 on blade. Move the bevel to the given diameter on the blade and the required diameter appears on the tongue.

Four equal circles require a bevel of 2·91 and 14.

The following also, is another use for the square and bevel combined.

If a person is drawing a machine on a scale of 1½ inch to the foot, he may simply lay a common rule under the

square, touching the 12 inch mark on the blade, and the 1½ inch mark on the tongue; he then possesses a contrivance by which he may easily reduce from one scale to the other. For instance, if a piece of stick 2¾ inches square is to go into the construction, the draughtsman finds the 9¼ inch mark on the blade, that is 2¾ inches back from the 12 inch mark, and measures square out to the rule. This distance is the reduced section of the stick. A straight mark, drawn on a table or a drawing board, serves as well as a rule.

Conveyors'-shaft 5 inches in diameter, 12 feet long, pitch of flights 9 inches; make a posteboard template; multiplying the diameter by 3·1416 gives the base, and the 9 is the altitude. The paper would be 9 inches altitude, 15 71-100 base; draw a line along shaft, place altitude or 9 inches along this line, scribe along the hypothenuse; this gives the spiral course of flight. This principle also teaches how to cut round sticks of straight timber by marking along base of template. take square on each end the same as taking a stick out of wind, before striking lines.

The cuts for the edges of the pieces of a hexagonal hopper are found by subtracting the width of one piece at the bottom, viz., the width of same at top, and taking the remainder on the tongue, and depth of side on blade. The tongue gives the cut. For the cut on the face of the sides, take 7-12 of the rise on the tongue, and the depth of side on the blade. The tongue gives the cut. The bevel for the top and bottom edges is found by taking the rise on the blade, and the run on the tongue; the latter gives the cut.

To find the cut of an octagonal hopper for the face of

the board and also the edge, subtract the rise from the width of side; take the remainder on the tongue and width of side on blade; the tongue gives the cut. The edge of the stuff is to be square when applying the bevel. The bevel for the top and bottom edges of the sides is found by taking the rise on the blade, and run on the tongue, the latter gives the cut. This makes the edges horizontal. The edges are not to be beveled till the four sides are cut.

To lay off Angles of 60° and 30°.—Mark any number of inches, say 14, on an indefinite line. Place the blade against one extremity of this distance, and the 7 inch mark of the tongue at the other. The tongue then forms an angle of 60° with the indefinite line, and the blade an angle of 30°.

To Find the Bevels and Width of Sides and Ends of a Square Hopper.—Fig. 50. The large square represents the upper edges of the hopper and the small one the lower edges, or base. The width of the sides and ends is found in this way: Take the run *a b* on the tongue, and the perpendicular height *a d* on the blade. It is thus found in the same manner as the length of a brace. To find the cut for a butt joint, take width of side on blade and half the length of the base on tongue; the latter gives the cut. For a mitre joint take width of side on the blade and perpendicular height on tongue; the latter gives the cut.

For the cut across the sides of the boards, take the run

a b on the tongue, and the width of side on blade; the tongue gives the cut. The inside corners of the sides and ends are longer than the outside, so if a hopper is to be of

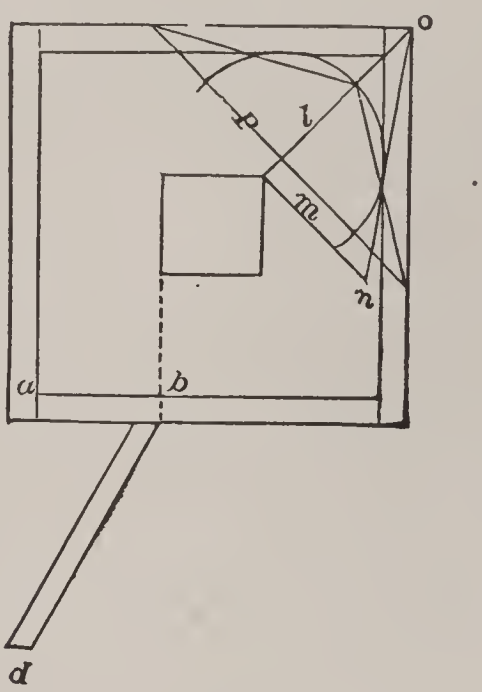

FIG. 50.

a certain size, the lengths of ends and sides are to be measured on the inside edge of each piece, and the bevels struck across the edges to these marks. This is only in case of butt joints. Of course if the hopper is to be square, the thickness of the sides must be taken from the ends.

If the top and bottom edges are to be horizontal, the bevel is thus found: Take the perpendicular height of hopper on the blade and the run on the tongue, the latter gives both cuts. A hopper can be made by the above method by getting the outside dimensions at top and bottom, and the perpendicular height.

In large hoppers pieces are put down along the corners

to strengthen them. The length, and the bevel to fit the corner are thus found: Suppose the top of hopper is 8 feet, and the bottom 18 inches square. Find the diagonals of each, subtract the one from the other, and half the remainder is the run for the corner piece. From the length of this run, *l*, and the rise, *a b*, we find the length of the corner piece. To find the bevel or backing, take on the blade the length of the corner piece and on the tongue the rise; the latter gives the bevel. Another method is to draw the line, *l*, to represent the seat of the corner piece, set off square with this the line *m*, of the same length as the run, *a b*. Then draw *n o*, which is the length of the corner piece. To find the backing, draw a line, *p*, anywhere across *l*, at right angles therewith, and at its intersection with line, *l*, strike a circle tangent to *n o*. From the point of intersection of the circle with *l*, draw lines to the extremities of *p*. The angle made by these lines is the bevel or backing.

Another method generally employed for finding the bevels of hoppers is to bevel the top and bottom edges of the sides and ends to the angle they are to stand at, then to lay a bevel set to a mitre, or angle of 45°, on the beveled edge, and that will lay off a mitre joint, while a try-square will lay off a butt joint. An angle of 45° will mitre only those boxes with sides which are vertical and square with each other.

When the sides and ends of a rectangular box or hopper are of the same width, that is, when sides and ends slope at equal angles, the bevels, either butt or mitre, are found as for square hoppers.

When a hopper has the sides and ends of different widths, that is, when sides and ends stand at different angles,

both having the same rise, find the cuts for each from its respective rise, run and width.

Roofing.—Fig. 51. A hip-roof with two corners out of square is given an example, the dimensions of which are. width 15 feet, rise of roof 5 feet, length 30 feet on the

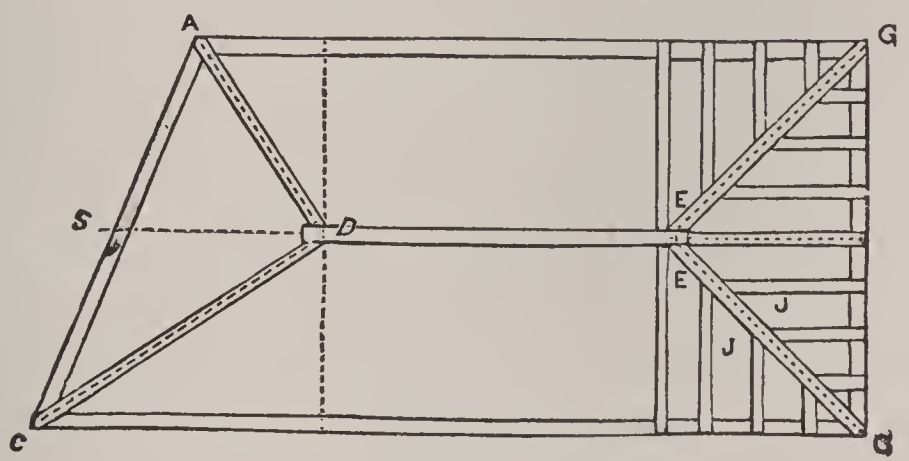

FIG. 51.

shorter side, 33 feet on the longer. The timbers A D, C D, E G, E G, are the hip rafters; J J the jack rafters. The seats of each hip rafter should form a square, so that each pair of jack rafters, J J, for instance, may be cut of equal length.

Lengths and Bevels of Hip-Rafters.—We will first consider those on the square end of the roof. In order to find their length, it is first necessary to obtain their run, which is found as follows: Take half the width of building on both blade and tongue, whence is obtained the length of seat from G to E, at the intersection of the dotted lines. By similar use of the square, this length with the rise of roof, gives the length of the hip-rafter. The lengths of all the rafters

should be measured along the middle, as the dotted lines show. This is the full length; half the thickness of the ridge-pole is to be taken off, measured square back from the bevel.

The bevel of the upper end of a hip-rafter is called the down bevel. It is always square with the lower end bevel, hence these bevels are found by the parts taken on the square to find the lengths of the hip-rafters. Another method is to take 17 inches on the blade and the number of inches of rise to the foot, that is, the rise in inches divided by half the width of roof in feet—on the tongue. The tongue gives the down bevel, the blade the lower end bevel. The reason for the foregoing is that when the hip-rafters are square with each other, the seat of the hip is the diagonal of a square whose side is half the width of building. The diagonal of a square with a 12 inch side is 17 inches nearly. So if the rise of roof in 1 foot is 6 inches, the rise of hip-rafter will be that only in 17 inches. The directions here given assume that the hip-rafter abuts the ridge-pole at right angles, but as the ground plan of the roof shows that they meet at an acute angle, another bevel must be considered, called the side bevel of the hip-rafters. Were there no slope to the roof, the bevel where they meet the ridge pole would be an angle of 45°, as the hips would be square with each other. When a pitch or slope is given, the hips depart from the right angle, and therefore the side bevels are always less than 45°. Take the length of hip on the blade, and its run on the tongue; the blade gives the cut.

Backing of the hip-rafters. The backs of the hip-rafters must be beveled to lie even with the planes of the roof. This bevel must slope from the middle toward either side.

It is found by taking the length of hip on blade, and the rise of the roof on tongue. The latter gives the bevel.

To find the lengths of the jack-rafters: Suppose there are to be four between the corner and the first common rafter; then there are five spaces, which, by dividing 7 foot 6 inches by 5, are 1 foot 2 inches from centre to centre of jacks. The rise of roof, also divided by 5, gives 1 foot rise for the shortest rafter. The run is 1 foot 6 inches; as both rise and run are given, the length down and lower bevels are found therefrom. The next jack has double the rise, run and length of the first; the following one three times, and the fourth four times. All the measurements are to proceed on or from the middle lines of the jacks.

The side bevel of all the jack-rafters is obtained by taking the length of a common rafter on the blade and its run on the tongue; the bevel on the blade gives the result.

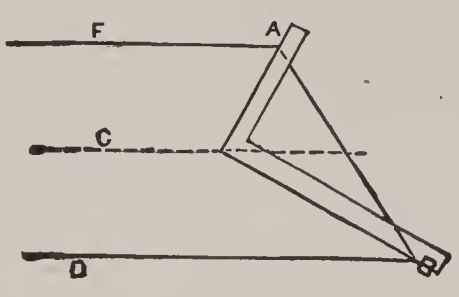

FIG. 52.

Let us now consider the end of the building out of square. Fig. 52 illustrates the method of laying down the seats of the hips. To find the lengths of these hips, the lengths of the seats must be got by taking half the width of building on blade, and the distance from the end of the dotted line crossing the roof, to the corner on the tongue. The length

of the seat so obtained taken on the square, with the rise of the roof, gives the length of the respective hip-rafter.

The down and lower end bevels are found as in the previous hip-rafters. To obtain each side bevel, add the distance from the dotted line to the corner and the gain of the hip-rafter; take the sum on the blade, and half the width of building on the tongue; the latter gives the cut.

The lengths, etc., of the jack-rafters on the side, are determined as at the square end of the roof; the side bevel being found by taking the length of a common rafter on the blade, and the distance from the dotted line to corner on the tongue. The latter showing the bevel.

The lengths of jack-rafters on the end. Assuming there are to be four jacks between the corner and the centre included, half the length of the end of the roof must be divided by 5. One side of the roof being 3 feet longer than the other, we place 3 feet, on tongue, and 15 feet, the width of building, on the blade, and thus obtain the distance from corner to corner on the end of the roof. Half this divided by 5 gives the distance of the jacks apart. The distance from where the middle lines of the hips meet to the middle point of the end of the roof is also to be divided by 5, the quotient giving the run of the shortest rafter. The rise is the same as for the jacks on the square end.

These rules give the full length of rafter, so that when hips come against a ridge-pole or jacks against a hip, half the thickness of pole or hip, squared back from their down bevels, must be taken off.

Side bevels of these jacks are obtained by adding the distance from the dotted line to the corner to the gain of a common rafter in running that distance; take this on the

blade, and half the width of building on the tongue. The blade gives the bevel.

Trusses.—Fig. 53. A is the straining beam, B the brace, T the tie beam. Generally the brace has about one-third the length of tie beam for a run. From the rise and run find the length and lower end bevel of the brace. After marking the lower end bevel on the stick, add to it just what is cut out of the tie beam. The bevel of the upper end of the brace where it butts against the straining beam is found in the following manner. Take the length of the

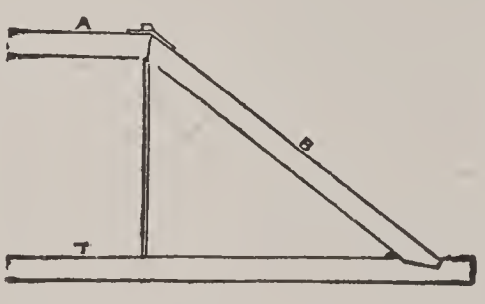

FIG. 53.

brace, or a proportional part, and mark it on the edge of a board; take half the rise of the brace on the tongue, lay it to one of these marks on the board, and move the blade till it touches the other mark on board. A line drawn along the tongue gives the bevel for both brace and straining beam. The angle made between brace and straining beam is thus bisected. Lay off the measurements from the outside of the timbers. Put a bolt where shown, with a washer under the head to fit the angle of straining beam and brace.

There are quite a number of methods of obtaining approximate proportions of the diameter of circles to their circumferences. The true proportion, or, as it is sometimes expressed, "the squaring of the circle," is one of those feats, like the discovery of "perpetual motion," and is as far from being accomplished now as ever. At any rate, it makes but little difference at this time, to the operative mechanic, whether the circle can be squared or not, so long as he can get near enough to the truth to satisfy the requirements at hand satisfactorily; and to aid him in this, the following method is shown of obtaining the circumferences of circles when the diameter is given, by use of the square. Of course, as shown in the cut, the rule will apply to circles of any reasonable dimensions.

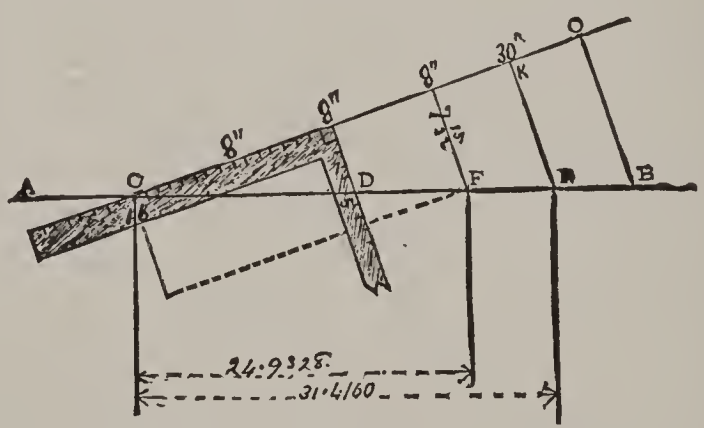

FIG. 54.

Let A B, Fig. 54, be a straight line, or the straight edge of a board; then apply the square as shown, placing the 16-inch mark on the blade at C, and the 5-inch mark on the tongue at D. See that the junctions of the blade and tongue of the square with the line A B, are accurately placed, for on this depends the truth of the results. Now, suppose we wish to ascertain the circumference of a circle

whose diameter is 8 inches; commencing at the point, C, we space off the diameter, 8 inches, three times, on the line C O, as shown at 8″ 8″ 8″; then square down the line 8″ F, then C F will be the circumference of a circle whose diameter is 8. It will be seen, by dotted lines in the cut, that the circumference equals the diagonal of a rectangle whose sides are respectively 24 and $7\frac{15}{32}$ inches; so that by adopting these figures (24 and $7\frac{15}{32}$) it enables the operative to use the full length and capacity of the square. The better way, however, is to work from a basis of 16 and 5, and draw the lines, C O and A B, to considerable length, so that they may be made available for dimensions beyond the range of the square. Now, let us suppose an instance where the circumference of a circle is wanted, whose diameter is 10; we simply space off three tens, or thirty inches, on the line C O, which, in this case, is at K. Square down from K to R, and C R is the length sought.

Now, to prove this, let us proceed as follows: Diam. = $10 \times 3{\cdot}1416 = 31{\cdot}4160$, or nearly thirty-one inches and fifteen thirty-seconds of an inch. Now, if we measure C R, we will find that the distance is exactly 31·4160 inches, and is, therefore, the answer sought. It will be seen by these examples that the circumferences of circles may be easily obtained when the diameters are known. So, also, may the diameters be found when the circumferences are known, for by laying off the circumference on the line A B, as C D in Fig. 54, for instance, and then applying the square as there exhibited, and dividing the distance from the heel of the square to the point C into three equal parts. One of these parts is the diameter of the circle whose circumference equals the distance from C to D.

In my experience, I have frequently been asked how a mitre, or equal joint, could be laid off by using the square.

The matter is so simple, that it was thought unnecessary to insert it in the first edition, but the many inquiries on the subject that have been received since the work was published, induces me to give a few examples of the manner in which advanced workmen generally accomplish this end. Let Fig. 55 represent an oblique angle formed

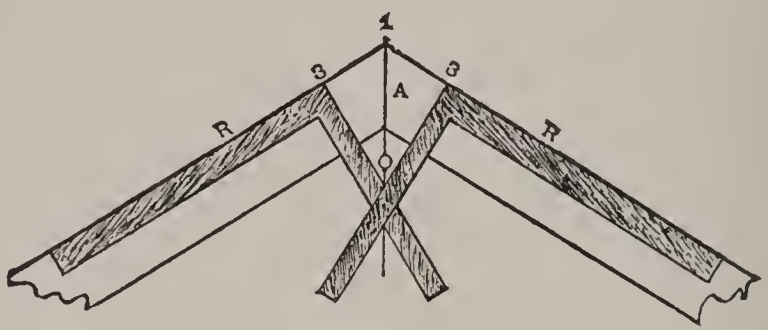

FIG. 55.

by two parallel boards. To obtain the joint, A, space off equal distances from the point 1 to 3, 3, then square over from the lines, R, R, keeping the heel of the square at the points, 3, 3. At the junction of the lines formed by the tongue of the square at 0 will be one point, and 1 will be the other by which the joint line, A, is defined.

To find the line of juncture for an acute angle, we proceed as follows: Fig. 56 represents two parallel boards; 1 the extreme angle, 3, 3 equal distances from the angle 1 and are the points where the heel of the square must rest to form the lines 0, 3; 0 shows the junction of the lines formed by the blade of the square. Draw a line from 0 to 1, and the line, A, formed, is the bevel required.

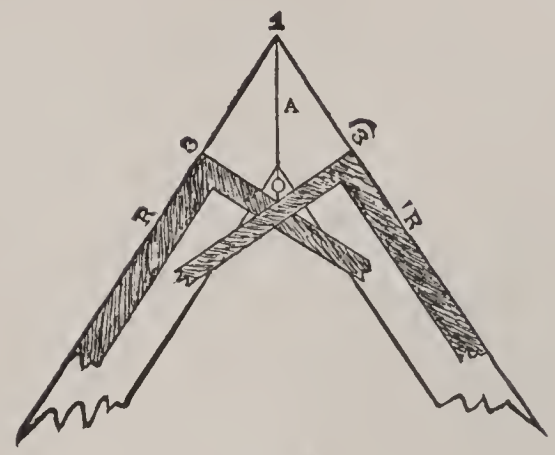

Fig. 56.

It will be seen, by these two examples, that the bevel of a junction at any angle may be obtained by this method.

Sometimes, when estimating on work, it becomes necessary to get the length of braces and other timbers, that would require considerable figuring to obtain if the usual

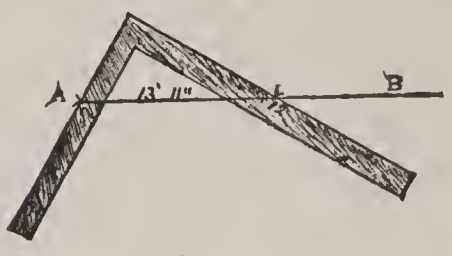

Fig. 57.

method of finding the length of the third side of a right-angled triangle was adopted. The square, at this juncture, may be made use of with advantage, where the length of the lines wanted is within the range of the instrument, and almost any dimensions may be manipulated, by making the subdivisions of the inch represent inches, feet, or yards. Suppose we want to get the length of a brace with unequal run of 7 and 12 feet respectively. Lay the two-foot rule

across the square, putting the end on 7 on the tongue, and cutting the 12-inch line on the blade; then, as shown in Fig. 57, we will have on the side of the rule A B, 13 feet 11 inches, or say 14 feet, which is near enough for the estimator's purpose, and if required for working purposes, the exact length and bevels may be obtained by careful measurement.

PART IV.

Miscellaneous Rules and Memoranda.—The practical carpenter and joiner will frequently want to use the more elaborate methods of obtaining solutions where the problems are complicated and various; and the following rules are inserted in this work with a view of reaching *some* of the problems that appear to be beyond the range of the Steel Square without making such intricate combinations as would be sure to lead to confusion in ordinary hands.

Hip-Roofs.—The principles to be determined in a hip-roof are seven; namely:

1st. The angle which a common rafter makes with the level of the top of the building; that is, the pitch of the roof.

2nd. The angle which the hip-rafter makes with the level of the building.

3d. The angles which the hip-rafter makes with the adjoining sides of the roof. This is called the backing of the hip.

4th. The height of the roof, or the "rise," as it is called.

5th. The lengths of the common rafters.

6th. The lengths of the hip-rafters.

7th. The distance between the centre line of the hip-rafter and the centre line of the first entire common rafter.

The first, fourth, fifth and seventh are generally given, and from these the others may be found, as will be shown by the following illustrations: Let A B C D Fig. 58, be

the plan of a roof. Draw G H parallel to the sides, A D, B C, and in the middle of the distance between them. From the points A, B, C, D, with any radius, describe the curves *a b*, *a b*, cutting the sides of the plan at *a*, *b*. From these points, with any radius, bisect the four angles of the plan at *r*, *r*, *r*, *r*, and from A, B, C, D, through the points,

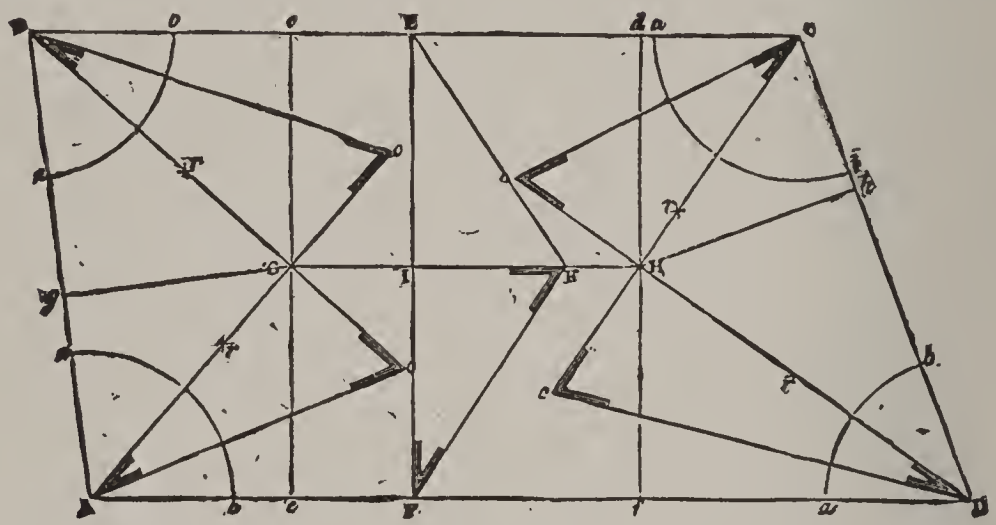

FIG. 58.

r, *r*, *r*, *r*, draw the lines of the hip-rafters, A G, B G, C H, D H, cutting the ridge-line, G H, in G and H, and produce them indefinitely. The dotted lines, *c e*, *d f*, are the seats of the last entire common rafters. Through any point in the ridge-line, I, draw E I F at right angles to G H. Make I K equal to the height or rise of roof, and join E K, F K; then E K is the length of a common rafter. Make G *o*, H *o*, equal to I K, the rise of the roof, and join A *o*, B *o*, C *o*, D *o*, for the length of the hip-rafters. If the triangles, A *o* G, B *o* G, be turned round their seats, A G, B G, until their perpendiculars are perpendicular to the plane of the plan, the points, O O, and the lines, G *o*, G *o*, will coincide, and the rafters, A *o*, B *o*, be in their true positions.

If the roof is irregular. and it is required to keep the ridge level, we proceed as shown in Fig. 59.

Bisect the angles of two ends by the lines A *b*, B *b*, C *b*, D G, in the same manner as in Fig. 58; and through G draw the lines G E, G F, parallel to the sides, C B, D A,

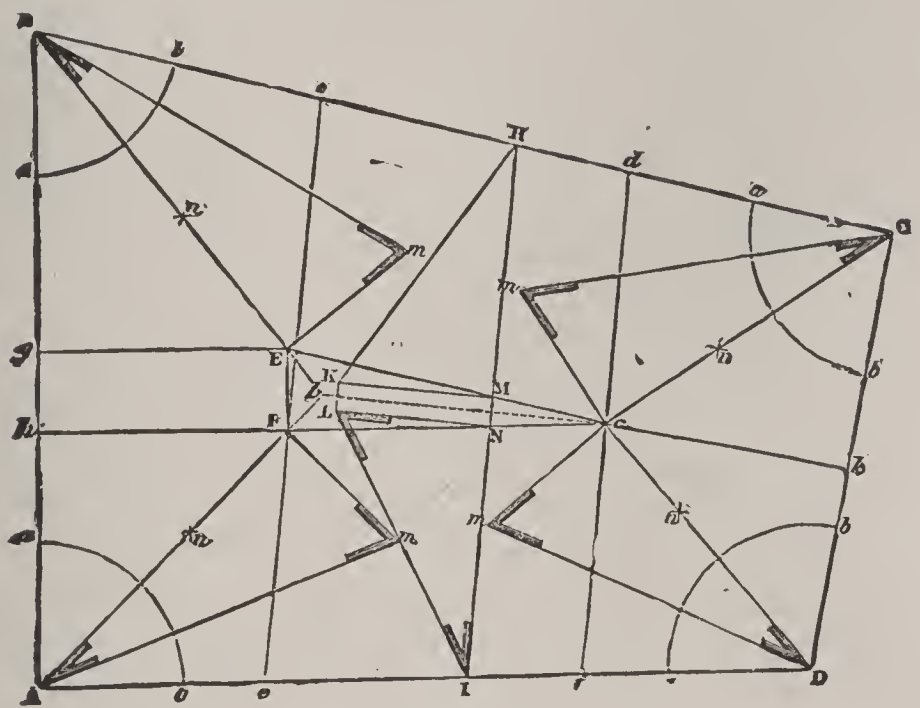

FIG. 59.

spectively cutting A *b*, B *b*, in E and F; join E F; then the triangle, E G F, is a flat, and the remaining triangle and trapeziums are the inclined sides. Join G *b*, and draw H I perpendicular to it; at the points M and N, where H I cuts the lines G E, G F, draw M K, N L perpendicular to H I, and make them equal to the rise; then draw H K, I L for the lengths of the common rafters. At E, set up E *m* perpendicular to B E; make it equal to M K or N L, and join B *m* for the length of the hip-rafter, and proceed in the same manner to obtain A *m*, C *m*, D *m*.

To find the backing of a hip-rafter, when the plan is

right-angled, we proceed as shown in Fig. 60. Let B *b*, *b* C be the common rafters, A D the width of the roof, and A B equal to one-half the width. Bisect B C in *a*, and join A *a*, D *a*. From *a* set off *a c*, *a d* equal to the height of the

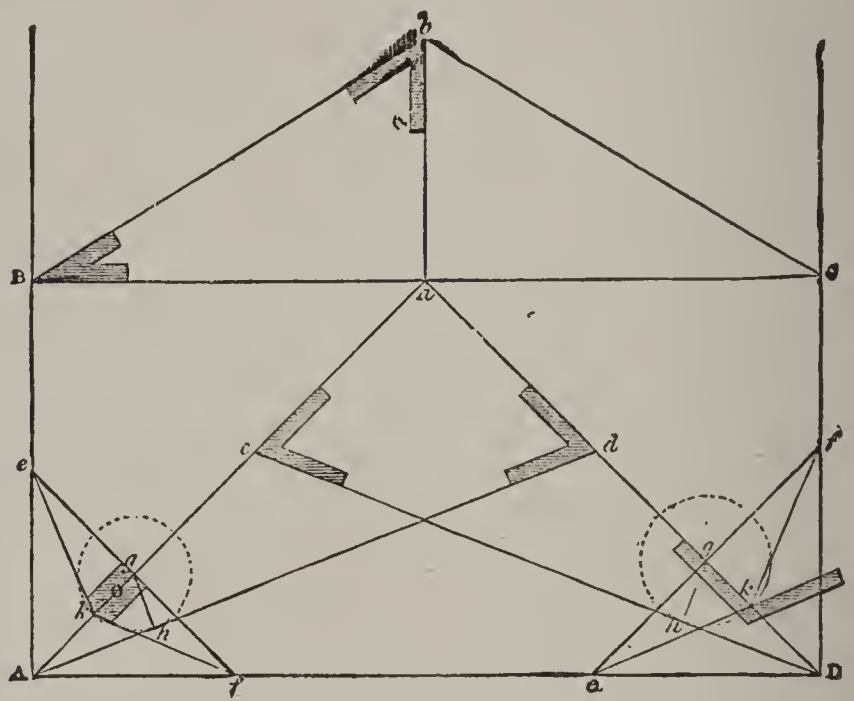

FIG. 60.

roof *a b*, and join A *d*, D *c*; then A *d*, D *c* are the hip-rafters. To find the backing: from any point *h* in A *d*, draw the perpendicular *h g*, cutting A *a* in *g*; and through *g* draw perpendicular to A *a* the line *e f*, cutting A B, A D in *e* and *f*. Make *g k* equal to *g h*, and join *k e*, *k f*; the angle *e k f* is the angle of the backing of the hip-rafter C.

Fig. 61 shows the method of obtaining the backing of the hip where the plan is not right angled.

Bisect A D in *a*, and from *a* describe the semicircle A *b* D; draw *a b* parallel to the sides A B, D C, and join A *b*, D *b*, for the seat of the hip-rafters. From *b* set off on

b d, *b e* = the lengths *b d*, *b e*, equal to the height of the roof *b c*, and join A *e*, D *d*, for the lengths of the hip-rafters. To find the backing of the rafter:—In A *e*, take any point *k*, and draw *k h* perpendicular to A *e*. Through *h* draw *f h g* perpendicular to A *b*, meeting A B, A D in *f* and *g*. Make *l* equal to *h k*, and join *f l*, *g l*; the *f l g* is the backing the hip.

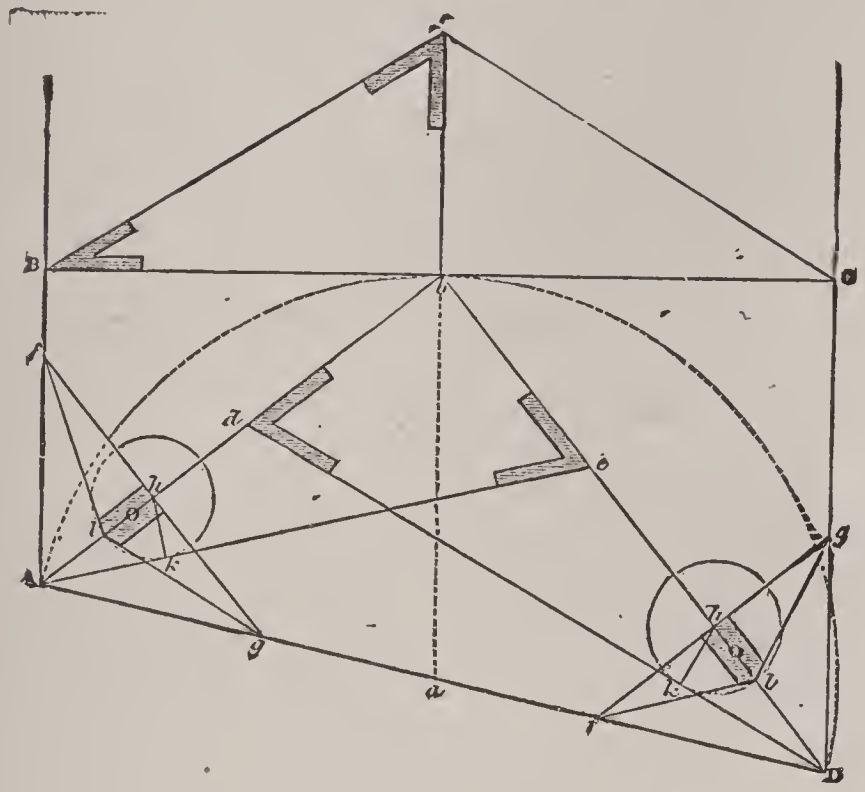

FIG. 61.

Fig. 62 shows how to find the shoulder of purlins: First, where the purlin has one of its faces in the plane of the roof, as at E. From *c* as a centre, with any radius, describe the arc *d g*; and from the opposite extremities of the diameter, draw *d h*, *g m* perpendicular to B C. From *e* and *f*, where the upper adjacent sides of the purlin produced cut the curve, draw *e i*, *f l* parallel to *d h*, *g m*; also draw *c k* parallel to *d h*. From *l* and *i* draw *l m* and *i h*

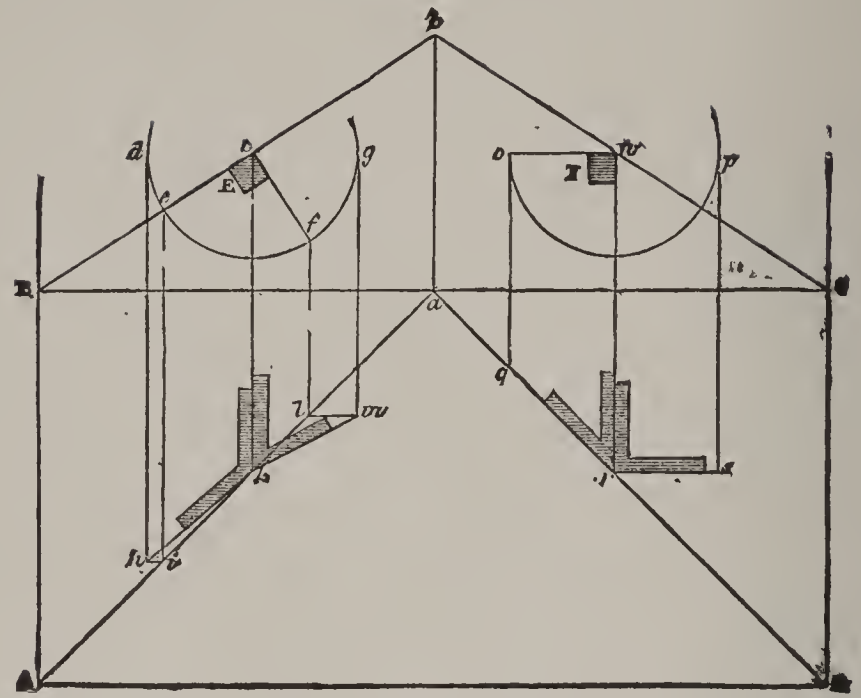

FIG. 62.

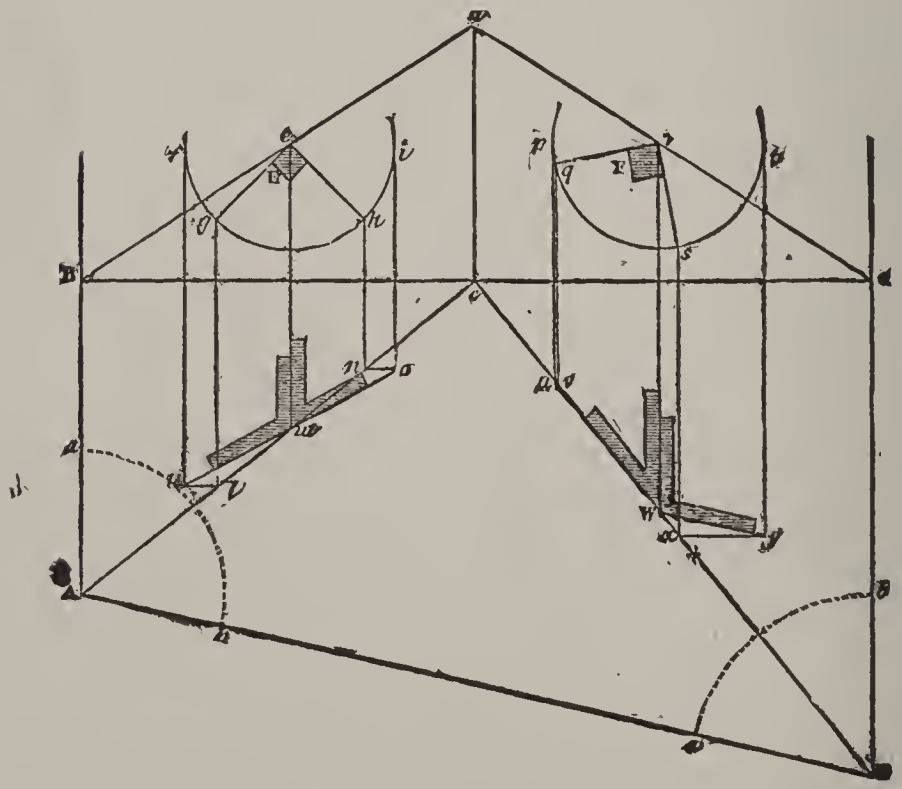

FIG. 63.

parallel to B C, and join *k h*, *k m*. Then *c k m* is the down bevel of the purlin, and *c k h* is its side bevel.

When the purlin has two of its sides parallel to the horizon. This simple case is shown worked out at F. It requires no explanation.

When the sides of the purlin make various angles with the horizon. Fig. 63 shows the application of the method described in Fig. 62 to these cases.

It sometimes happens, particularly in railroad buildings, that the carpenter is called upon to pierce a circular or conical roof with a saddle roof, and to accomplish this

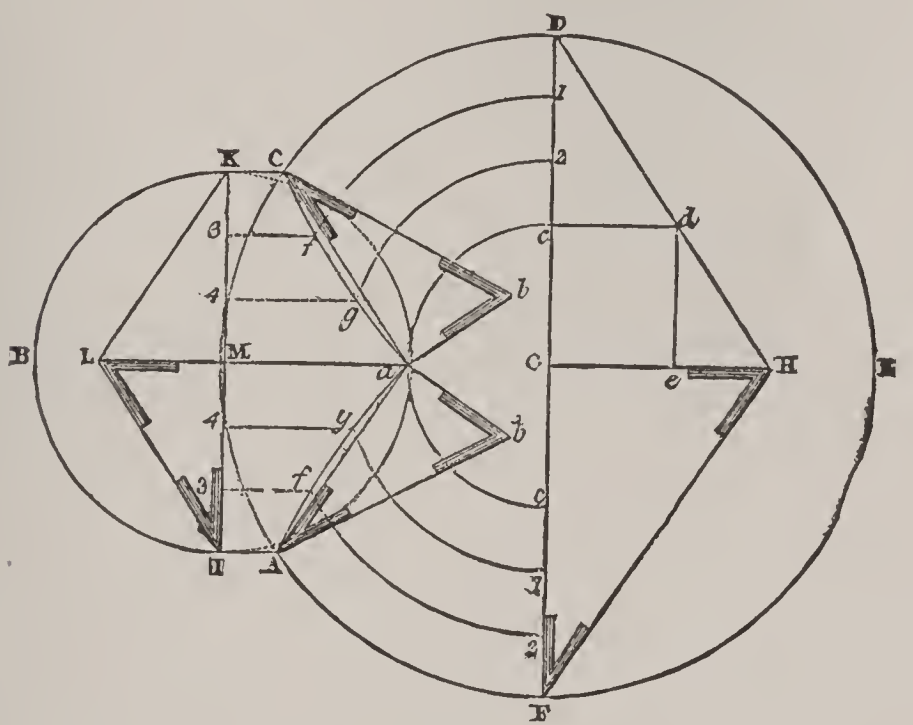

FIG. 64.

economically is often the result of much labor and perplexity if a correct method is not at hand.

The following method, shown in Fig. 64, is an excellent

one, and will no doubt be found useful in cases such as mentioned.

Let D H, F H be the common rafters of the conical roof, and K L, I L the common rafters of the smaller roof, both of the same pitch. On G H set up G *e* equal to M L. the height of the lesser roof, and draw *e d* parallel to D F, and from *d* draw *c d* perpendicular to D F. The triangle D *d c*, will then by construction be equal to the triangle K L M, and will give the seat and the length and pitch of the common rafter of the smaller roof B. Divide the lines of the seats in both figures, D *c*, K M, into the same number of equal parts; and through the points of division in E, from G as a centre, describe the curves *c a*, 2 *g*, 1 *f*, and through those in B, draw the lines 3 *f*, 4 *g*, M *a*, parallel to the sides of the roof, and intersecting the curves in *f g a*. Through these points trace the curves C *f g a*, A *f g a*, which give the lines of intersection of the two roofs. Then to find the valley rafters, join C *a*, A *a*; and on *a* erect the lines *a b*, *a b* perpendicular to C *a* and A *a*, and make them respectively equal to M L; then C *b*, A *b* is the length of the valley rafter, very nearly.

Fig. 65 shows how a curved hip-rafter may be obtained. The rafter shown in this instance is ogee in shape, but it makes no difference what shape the common rafter may be, the proper shape and length of hip may be obtained by this method. It will be noticed that one side of the example shown is wider than the other; this is to show that the rule will work correctly where the sides are unequal in width, as well as where they are equal. Let A B C, F E C represent the plan of the roof. F C G the profile of the wide side of the rafter. First, divide this rafter G C into any

number of parts—in this case six. Transfer these points to the mitre line E B, or, what is the same, the line in the plan representing the hip rafter. From the points thus established in E B, erect perpendiculars indefinitely. With the dividers take the distance from the points in the line F C,

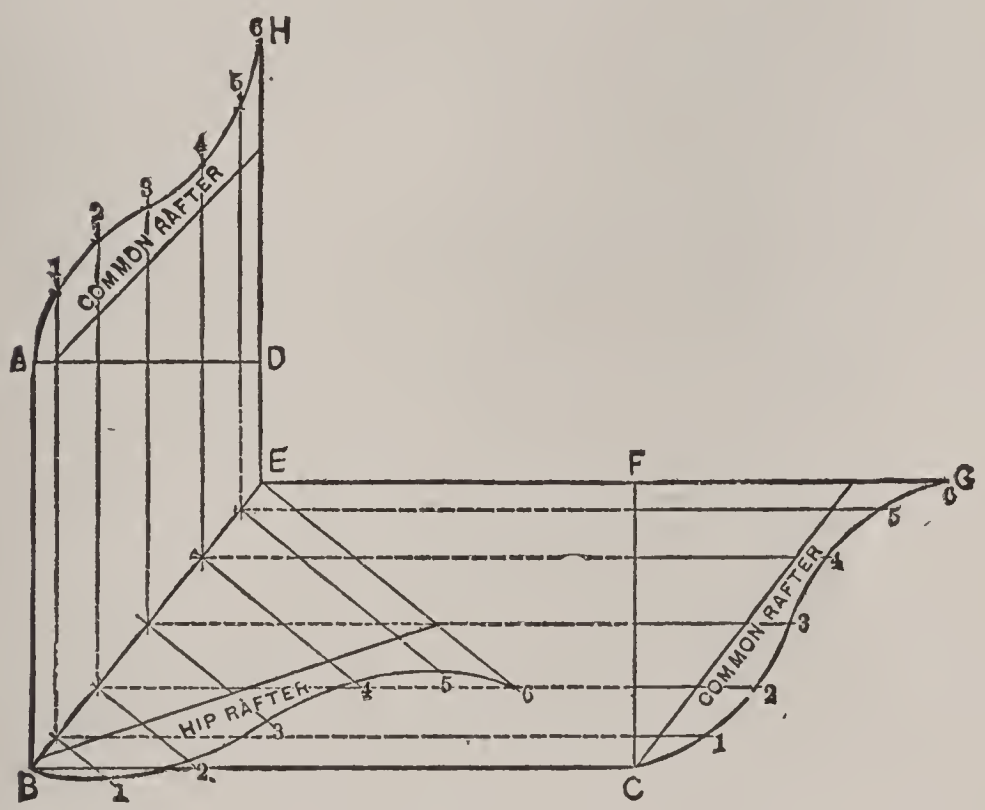

FIG. 65.

measuring to the points in the profile G C, and set the same off on corresponding lines, measuring from E B, thus establishing the points 1, 2, 3, etc.; then a line traced through these points will be the required hip rafter.

For the common rafter on the narrow side, continue the lines from E B parallel with the lines of the plan D E and A B. Draw A D at right angles to these lines. With the dividers as before, measuring from F C to the points in G C, set off corresponding distances from A D, thus estab-

lishing the points shown between A and H. A line traced through the points thus obtained will be the line of the rafter on the narrow side. This is supposed to be the return roof of a veranda, but is only shown as an example, for it is not customary to build verandas nowadays with an ogee roof, but with a rafter having a depression or cove in it. For accuracy it would be as well to make nearly twice

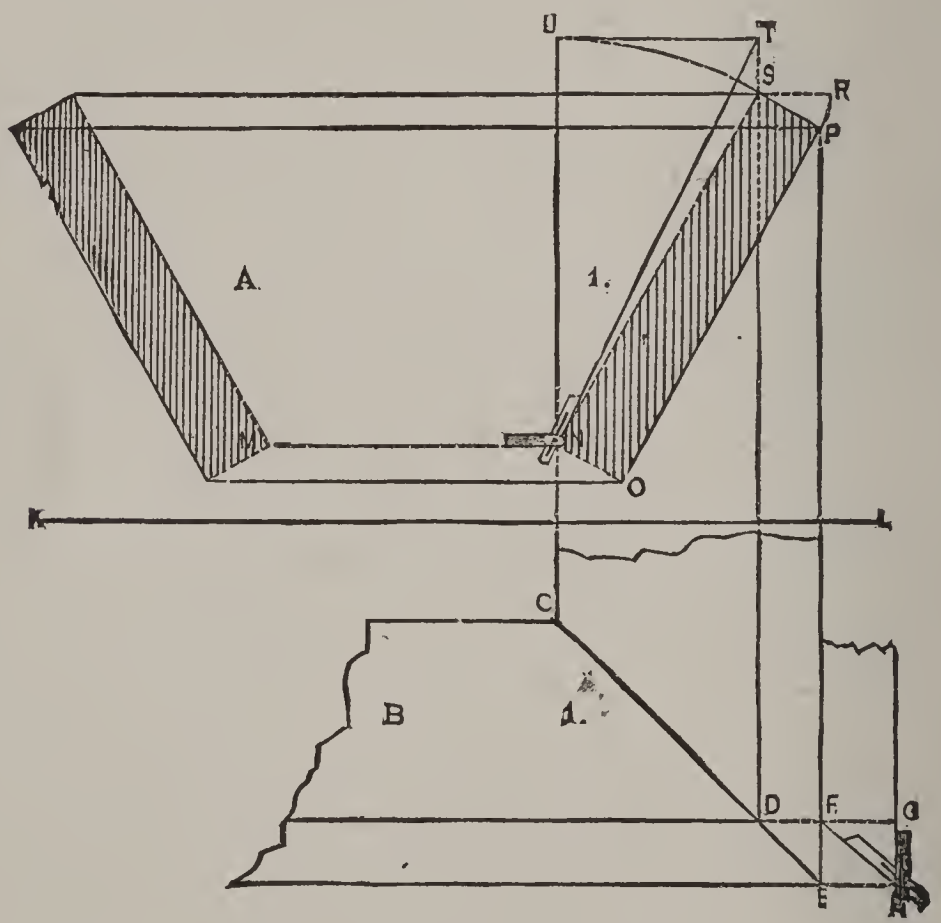

FIG. 66.

the number of divisions shown from 1 to 6, as are there represented.

It has been shown, in the forepart of this work, how the bevels and lines for hoppers may be obtained by the aid of

the square, and it is now proposed to show how the same results may be obtained by a system of lines. This method, in many shapes and forms, has been used from time immemorial by workmen, more particularly by carriage makers to obtain the bevels of splayed seats; the present way of expressing it, however, is comparatively recent.

If we make A 1, Fig. 66, represent the elevation of our hopper, and B 1 a portion of the plan, we proceed as follows: Lay off N S, which is the bevel of one side, and N S P O the section of one end.

Place one foot of the dividers at N, and with N S as radius describe the arc S U, intersecting the right line N U in the point U. At S erect the perpendicular S T, and draw the line U T at right angles to N U. Connect N and T; then the triangle M N T is the end bevel required. The line N T is the hypothenuse of a right-angled triangle, of which N U may may be taken for the perpendicular and U T for the base. To find the mitre of which D E is the plan, project S and P, as indicated in the plan by the full lines. With S P as radius and S as centre, describe the arc P R. In the plan draw D G, on which lay off the distance S R, measuring from F, as shown by F G. Then G H F is the mitre sought.

Fig. 67 shows the rule for finding the bevels for the sides of the hopper. From M, the point at which E M intersects B C, or the inner face of the hopper, erect the perpendicular M L, intersecting R F, or the upper edge of the hopper, in the point L. Then L C shows how much longer the inside edge is required to be than the outside. In the plan draw T V parallel to S X, making the distance between

the two lines equal to C F of the elevation, or, equal to the thickness of one side. From the point L in the elevation

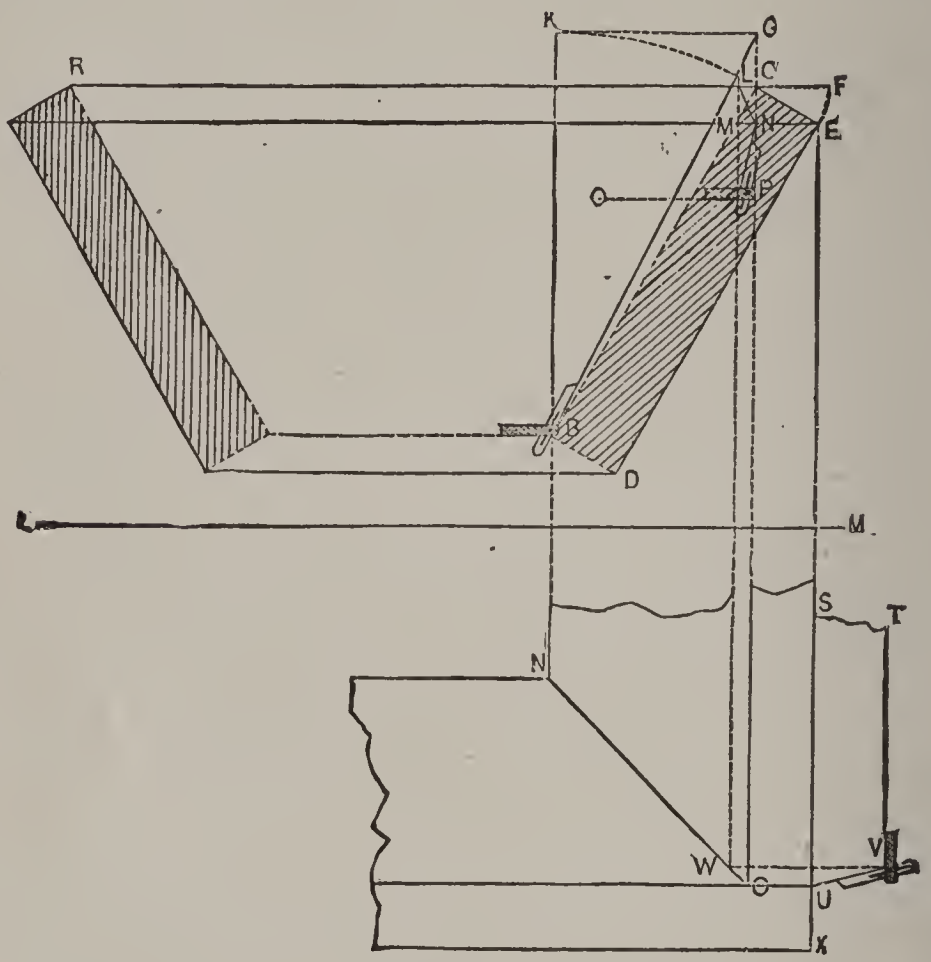

FIG. 67.

drop the line L W, producing it until it cuts the mitre line N O, as shown at W. From W, at right angles to L W, erect the perpendicular W V, meeting the line T V in the point V. Connect V and U; then T V U will be the angle sought. This bevel may be found at once by laying off the thickness of the side from the line E M, as shown by N P in the elevation, and applying the bevel as shown. This course does away with the plan entirely, provided both sides have the same inclination.

There are several other ways by which the same results may be obtained; some of these will no doubt occur to the reader when laying out the lines as shown here.

Fig. 68 exhibits a method of obtaining the correct shape of a veneer for covering the splayed head of a gothic jamb.

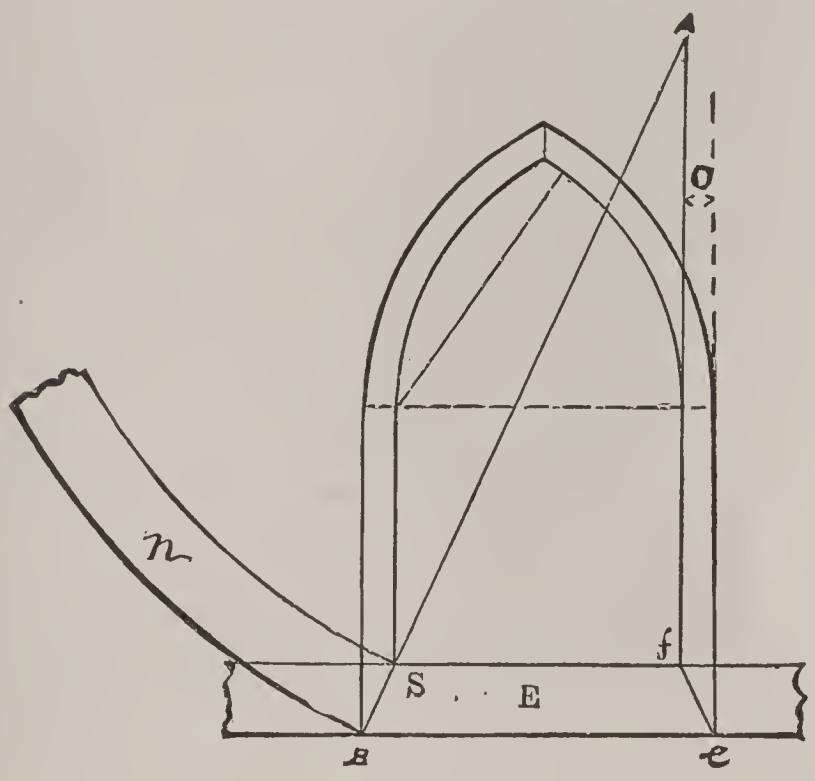

Fig. 68.

E shows the horizontal sill, *e f* the splay, *f* A the line of the inside of jamb, *o* the difference between front and back edges of jamb, B A the line of splay. At the point of junction of the lines B A, *f* A, set one point of the compasses, and with the radius A B draw the outside curve of *n*; then with the radius A S draw the inside curve, and *n* will be the veneer required. This will give the required shape for either side of the head.

Sometimes the workman may have a semicircular groove to make, either as a pattern for casting or as a moulding of some sort. Now it is a well-known geometrical fact that the angle within a semicircular circumference is a right angle; this being admitted, it may be taken advantage of in making such hollow forms as I have mentioned, and which I illustrate by the Figure 69. The curve or semi-

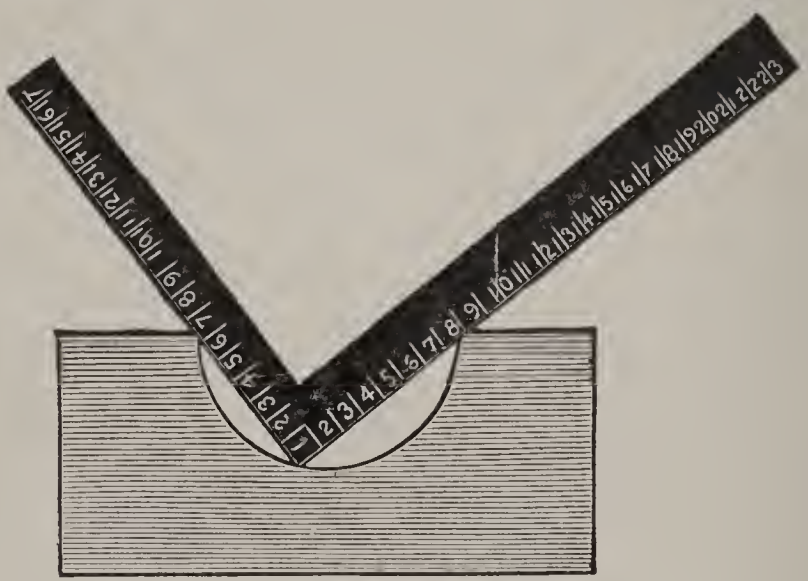

Fig. 69.

circle may be worked out by a plane or other instrument, and to prove the correctness of the work, the steel square may be applied as shown. If the square touches at only two points, then the groove is not deep enough, or else it is too deep, in which case the operator must remove more stuff from the groove, or from the flat surface of the work, if permissible. By giving the square an oscillating motion, so as to make the corner sweep the entire surface of the curve, the accuracy of the work may be ascertained whenever the square is applied. In this instance the square may

be used as a templet, and the advantages of it in such cases are that it may be used in any sized semicircular groove, thus saving a multiplication of templets. This principle may be extended further, as it is equally applicable to a hollow hemisphere as to a hollow semicylinder, which makes a knowledge of this fact of great value to wood or metal turners, as it can be easily seen that a hollow hemisphere must be nearly true if the corner or heel of the square touches every point, and the blade and tongue lie on the exact diameter. The operator can apply this principle to many cases, if he is at all ingenious.

Here is a little problem that may come into use on many occasions: Suppose we want to cut a piece of sheet metal,

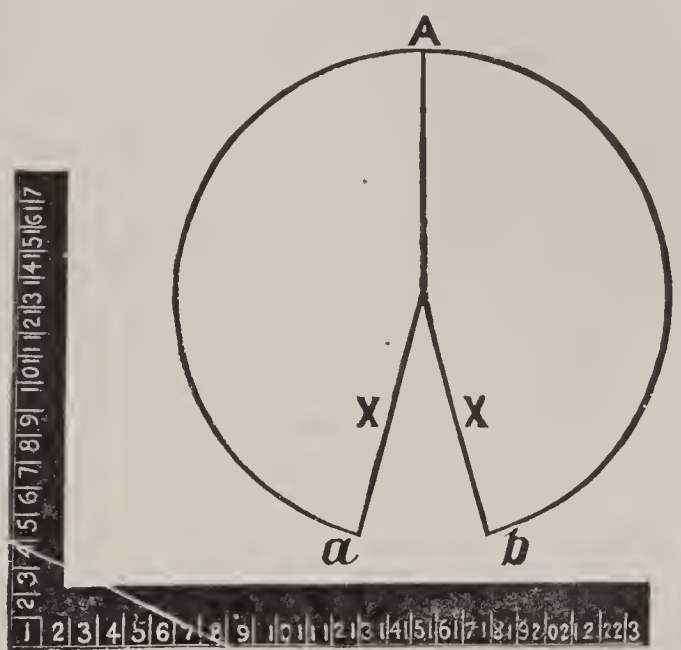

Fig. 70.

paper or thin wood so that it may form a cone, or a cover for a vessel of some sort; say the pitch or height at centre is

to be four inches, and the diameter of the base sixteen inches. Lay off the pitch on the tongue and half the diameter on the blade. The diagonal, from 4 to 8, as shown in Figure 70, gives half the diameter of the circle, to which set your compasses. Describe a circle as at Figure 70, draw a line from the centre as shown, square off from A, on each side seven-elevenths of the diameter, ending at *a* and *b*. The gore left requires to be removed, then when the edges x x are brought together, the cone is complete.

This solution may be used for many purposes.

Sometimes it happens the workman will have heavy square balusters to cut on the angle or rake of the stair. The true angle can always be obtained by taking the height of riser on one blade and the width of tread on the other. Not only will this answer for cutting balusters either under the rail or on the string, but it will serve in every case where the angle or pitch is required. This is so apparent that an illustration seems unnecessary.

PART V.

Sargent's Squares are made of the best double-refined Steel and on improved machinery of delicate adjustment. The Squares are "true;" they have the "hang" which makes them just right and they are accurately marked and nicely finished. Squares for all purposes and with different markings and labor saving tables and scales are made by this company and all genuine Sargent's Standard Steel Squares are stamped thus:

All Squares bearing this stamp are fully warranted.

Sargent's Square No. 100 was used by the author to solve the problems in this book and he has no hesitation in saying that it is the most complete and decidedly the most convenient Square for the operative workman in the market.

The description on the following pages show which tables and scales are used with the various Squares so that the reader will know what number Square to ask for in the hardware store.

Different Styles of Finish.—The finish of a Square is not only a matter of taste but of durability. The

L. OF C.

SARGENT SQUARES are furnished in different styles, of which the following is a summary.

POLISHED.—In these squares the metal is finely polished so that it does not easily rust or corrode, and if exposed to rain or damp the moisture may be thoroughly removed from the surface by wiping with an oiled rag. This cannot be done when the surface is in the least degree rough.

NICKEL PLATED.—Nickel plated Squares are not only very handsome, but are exceedingly durable. Nickel does not corrode readily; moisture and ordinary acids have no effect on it. A steel square of plain, polished steel if allowed to lie for a short time on an oak plank will become corroded and stained, leaving a dark mark on the wood. This does not occur when the surface of the steel has been nickel-plated.

ELECTRO COPPER PLATED.—After being finely polished these squares are coated by an adhesive deposit of copper thrown down by electricity. This protects the surface of the metal and gives a very fine appearance to the square. The marking and lettering is also very distinct.

ROYAL COPPER FINISH.—The royal copper finish is very handsome. It protects the steel very thoroughly and is very durable, not being liable to injury by any usage to which a fairly good mechanic would subject a square. The lettering and markings are very plain and easily read.

BLUED AND ENAMELED.—These squares are blued by a special process and the margins and figures are enameled either in white or yellow as may be desired Sometimes this finish is referred to as gun metal.

The royal copper and blued and enameled finishes make even the finest graduations easily read and the comparatively dull character of the general surface makes these squares easy on the eyes in outdoor work, even in the brightest sunshine.

PATENT RAFTER TABLE, described on pages 106 and 107. This table gives the length of rafters for any one of seven pitches of roof and for buildings of any width.

BRACE MEASURE, described on page 109. This measure gives the length of common braces; its use will be easily understood by a reference to page 109.

OCTAGON "EIGHT-SQUARE" SCALE, described on page 110. This scale is used for laying off lines to cut an "eight-square" or octagon stick of timber from a square one.

ESSEX BOARD MEASURE, described on page 111. This measure gives the contents in feet and inches of boards of various lengths and widths.

POLISHED		NICKEL PLATED		ELECTRO COPPER PLATED BRIGHT FINISH		SIZE IN INCHES	
Numbers	Price each	Numbers	Price each	Numbers	Price each	Body	Tongue
100	$3.33	**200**	$4.17	**100 P**	$4.17	24×2	16×1½
1	2.75	**101**	3.50	**1 P**	3.50	24×2	16×1½
2	2.50	**102**	3.17	**2 P**	3.17	24×2	16×1½
2½	2.33	**102½**	3.00	**2 ½P**	3.00	24×2	16×1½
3	2.30	**103**	2.92	**3 P**	2.92	24×2	16×1½
4	2.20	**104**	2.83	.....	.....	24×2	16×1½
5	2.12	**105**	2.75	.....	.....	24×2	16×1½
6	2.04	**106**	2.67	.....	.....	24×2	16×1½
7	1.96	**107**	2.58	.....	.....	24×2	16×1½
8	2.00	**108**	2.62	.....	.....	24×1½	16×1
9	1.83	**109**	2.46	.....	.....	24×1½	16×1
13	1.96	**113**	2.54	.....	.....	24×2	16×1½
14	1.92	**114**	2.50	**14 P**	2.50	24×2	16×1½
15	25.00	**115**	27.10	.....	.....	24×3	18×1½
16	6.25	**116**	7.08	.....	.....	30×2	24×1½
17	7.50	**117**	9.17	.....	.....	36×2	30×1½
10	1.67	**110**	2.17	.....	.....	12×1½	8×1
11	1.58	**111**	2.08	.....	.....	12×1½	8×1
12	1.92	**112**	2.42	**12 P**	2.42	12×1½	8×1
52	2.08	**152**	2.58	.....	.....	12×1½	8×1
40	1.25	**140**	1.42	.....	.....	6×1	4×¾
41	1.17	**141**	1 33	.....	.....	6×1	4×¾

HOW MARKED

.....For explanation of the letters see page 104.

Face				Back				TWO FEET SQUARES For explanation of the Brace Measure - See page 109 Eight Square - - " " 110 Essex Board Measure " 111
A	B	C	D	E	F	G	H	
$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	1-12 & 100's	$\frac{1}{32}$	$\frac{1}{12}$	$\frac{1}{10}$	Brace Measure, 8 Square and Essex Board Measure.
$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	1-12 & 100's	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	
$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	
$\frac{1}{8}$	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	Framing.
$\frac{1}{16}$	$\frac{1}{4}$	$\frac{1}{16}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	Brace Measure and Essex Board Measure.
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{2}$	$\frac{1}{12}$	$\frac{1}{4}$	
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{2}$	$\frac{1}{4}$	$\frac{1}{4}$	
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{4}$	1 in.	$\frac{1}{4}$	$\frac{1}{4}$	Essex Board Measure.
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{4}$	1 in.	$\frac{1}{4}$	$\frac{1}{4}$	Brace Measure and Essex Board Measure.
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{4}$	1 in	$\frac{1}{4}$	$\frac{1}{4}$	Essex Board Measure.
$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	BRIDGE BUILDERS' SQUARES. Body is 3 inches wide with a 1 inch slot through the centre. Slot is marked in $\frac{1}{8}$ths on both sides.
$\frac{1}{8}$	$\frac{1}{2}$	$\frac{1}{8}$	$\frac{1}{2}$	$\frac{1}{4}$	1 in.	$\frac{1}{4}$	1 in.	STONE CUTTERS' SQUARES,
$\frac{1}{8}$	$\frac{1}{2}$	$\frac{1}{8}$	$\frac{1}{2}$	$\frac{1}{4}$	1 in.	$\frac{1}{4}$	1 in.	
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	12 INCH SQUARES.
$\frac{1}{8}$	$\frac{1}{4}$	$\frac{1}{8}$	....	$\frac{1}{4}$	$\frac{1}{4}$	$\frac{1}{4}$	....	
$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	
$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{32}$	$\frac{1}{12}$	$\frac{1}{10}$	
$\frac{1}{32}$	$\frac{1}{8}$	$\frac{1}{32}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	6 INCH MACHINISTS' SQUARES.
$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	

Explanation of the Letters used in these pages to show how Sargent's Squares are marked:

Face of Square:	**A,**	Face of Body, Outside.
	B,	" " " Inside.
	C,	Face of Tongue, Outside.
	D,	" " " Inside.
Back of Square:	**E,**	Back of Body, Outside.
	F,	" " " Inside.
	G,	Back of Tongue, Outside.
	H,	" " " Inside.

The "Face" of the Square is the side upon which the name "Sargent & Co." is stamped.

The reverse side is the "Back." The larger arm is the "Body" or "Blade" and the shorter arm the "Tongue."

Squares with 18-inch Tongue of the following numbers furnished to order: Nos. 1, 2, 3, 13, 14, 100, 101, 102, 103, 200.

Royal Copper Steel Squares.

The following Squares can be furnished, at extra price, in Royal Copper Finish:

No. **100 C,** Same Marks and Scales as No. 100
No **100 CR,** " " " " " " 100 R

Blued Steel Squares.

The following Squares can be furnished, at extra price, in blued steel with enameled figures and marks:

Blued. White Enameled Figures and Marks	Blued. Yellow Enameled Figures and Marks	Same Marks and Scales as Numbers.
100 B	**100 YB**	100
1 B	**1 YB**	1
2 B	**2 YB**	2
2½ B	**2½ YB**	2½
3 B	**3 YB**	3
12 B	....	12
14 B	**14 YB**	14
100 BR	**100 YBR**	100 R
1 BR	**1 YBR**	1 R
3 BR	**3 YBR**	3 R

Steel Squares with Metric Measure.

Numbers	Each	Description	Size in Inches	
			Body	Tongue
314	$2.12	Steel Squares, Tapered....	24×2	16×1½
322	1.00	Steel Squares, Not Tapered	24×1½	12×1

HOW MARKED

	Face of Square				Back of Square			
	A	B	C	D	E	F	G	H
314	⅛	¼	⅛	¼	Centi-	metres	Centi-	metres
322	⅛	..	⅛	..	"	"	"	"

Squares with Rafter Table.

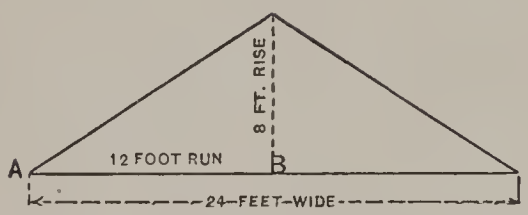

The Run of a rafter set up in place, is the horizontal measure from the extreme end of the foot to a plumb line from the ridge end. From A to B.

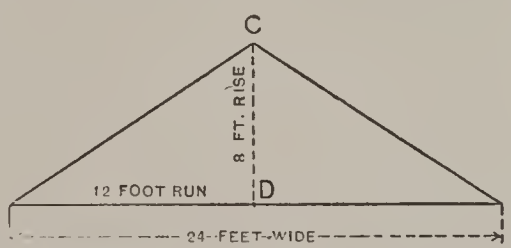

The Rise is the distance from the top of the ridge end of the rafter to the level of the foot. From C to D.

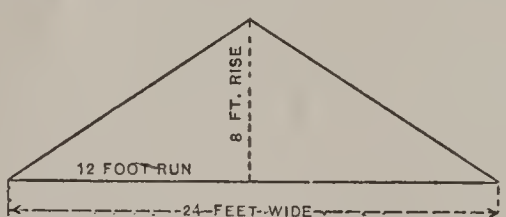

The Pitch is the proportion that the rise bears to the whole width of the building. The above illustration shows $\frac{1}{3}$ pitch; the rise of 8 feet being $\frac{1}{3}$ of the width of the building.

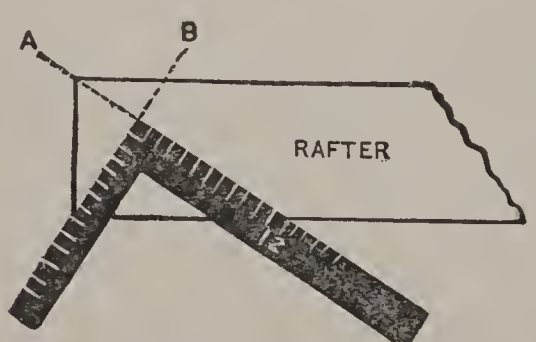

The Cuts or angles of a rafter are obtained by applying the square so that the 12 inch mark on the body and the mark on the tongue that represents the rise shall both be at the edge of the rafter. The illustration shows 8 foot rise. the line A, the cut for the foot end of rafter and B the cut for ridge end.

Rafter Table Directions.

The Rafter Table includes the outside edge graduations of the back of the square on both body and tongue, and is in twelfths. The inch marks may represent inches or feet, and the twelfth marks may represent twelfths of an inch or twelfths of a foot (that is, inches) as a scale. The edge graduation figures above the table represent the "run" of the rafter, and under the proper figure on the line representing the "pitch," will be found in the Table, the rafter length required. The "pitch" is represented by the figures at the left of the table and in the illustration under the word PITCH.

12	feet	run to	4	feet	rise	is	1/6 pitch.
12	"	"	6	"	"	1/4	"
12	"	"	8	"	"	1/3	"
12	"	"	10	"	"	5/12	"
12	"	"	12	"	"	1/2	"
12	"	"	15	"	"	5/8	"
12	"	"	18	"	"	3/4	"

TO FIND THE LENGTH OF A RAFTER.

For a roof with 1/6 pitch (or the "rise" 1/6 the width of the building) and having a "run" of 12 feet: follow in the Rafter Table the upper or 1/6 pitch ruling, find, under the graduation figure 12, the rafter length required, which is 12 7 10, or 12 feet 7 & 10/12 inches.

If the "run" is 11 feet, and the "pitch" 1/2 (or the "rise" 1/2 the width of the building) then the rafter length will be 15 6 8, or 15 feet 6 & 8/12 inches. If the "run" is 25 feet, add the rafter length for "run" of 23 feet to the rafter length for "run" of 2 feet.

When the "run" is in inches, then in the Rafter Table read inches and twelfths instead of feet and inches. For instance: if with 1/2 pitch the "run" is 12 feet 4 inches, add the rafter length of 4 inches to that of 12 feet, as follows:

For "run" of 12 feet the rafter length is 16 ft. 11 & 8/12 in.
For "run" of 4 inches the rafter length is 5 & 8/12 in.

Total.....17 ft. 5 & 4/12 in.

The "run" of 4 inches is found under the graduation "4" and is 5 7 11, which may be read 5 & 8/12 inches. If it were feet it would read 5 feet, 7 & 11/12 inches.

Sargent's Steel Squares
with Rafter Table.

PATENTED JUNE 5, 1900.

POLISHED		NICKEL PLATED		Electro Copper Plated. Bright Finish		SIZE IN INCHES	
Numbers	Price each	Numbers	Price each	Numbers	Price each	Body	Tongue
100 R	$3 67	**200R**	$4 50	**100 PR**	$4 50	24×2	16×1½
1 R	3 08	**101R**	3 83	**1 PR**	3 83	24×2	16×1½
3 R	2 62	**103R**	3 25	**3 PR**	3 25	24×2	16×1½

HOW MARKED

.....For explanation of the letters see page 104.

	FACE				BACK				Two Feet Squares
	A	B	C	D	E	F	G	H	
100R 200R 100 P R	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{32}$	$\frac{1}{12}$	$\frac{1}{10}$	Brace Measure 8 Square and Patent Rafter Table
1R 101R 1PR	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{16}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	$\frac{1}{12}$	$\frac{1}{8}$	
3R 103R 3 PR	$\frac{1}{16}$	$\frac{1}{4}$	$\frac{1}{16}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	$\frac{1}{12}$	$\frac{1}{4}$	Brace Measure and Patent Rafter Table

The patent Rafter Table gives the measure of the rafter for any one of seven pitches of roof, based upon the length of the horizontal measurement of the building from the centre to the outside. Full description and directions for using may be found on pages 106 and 107.

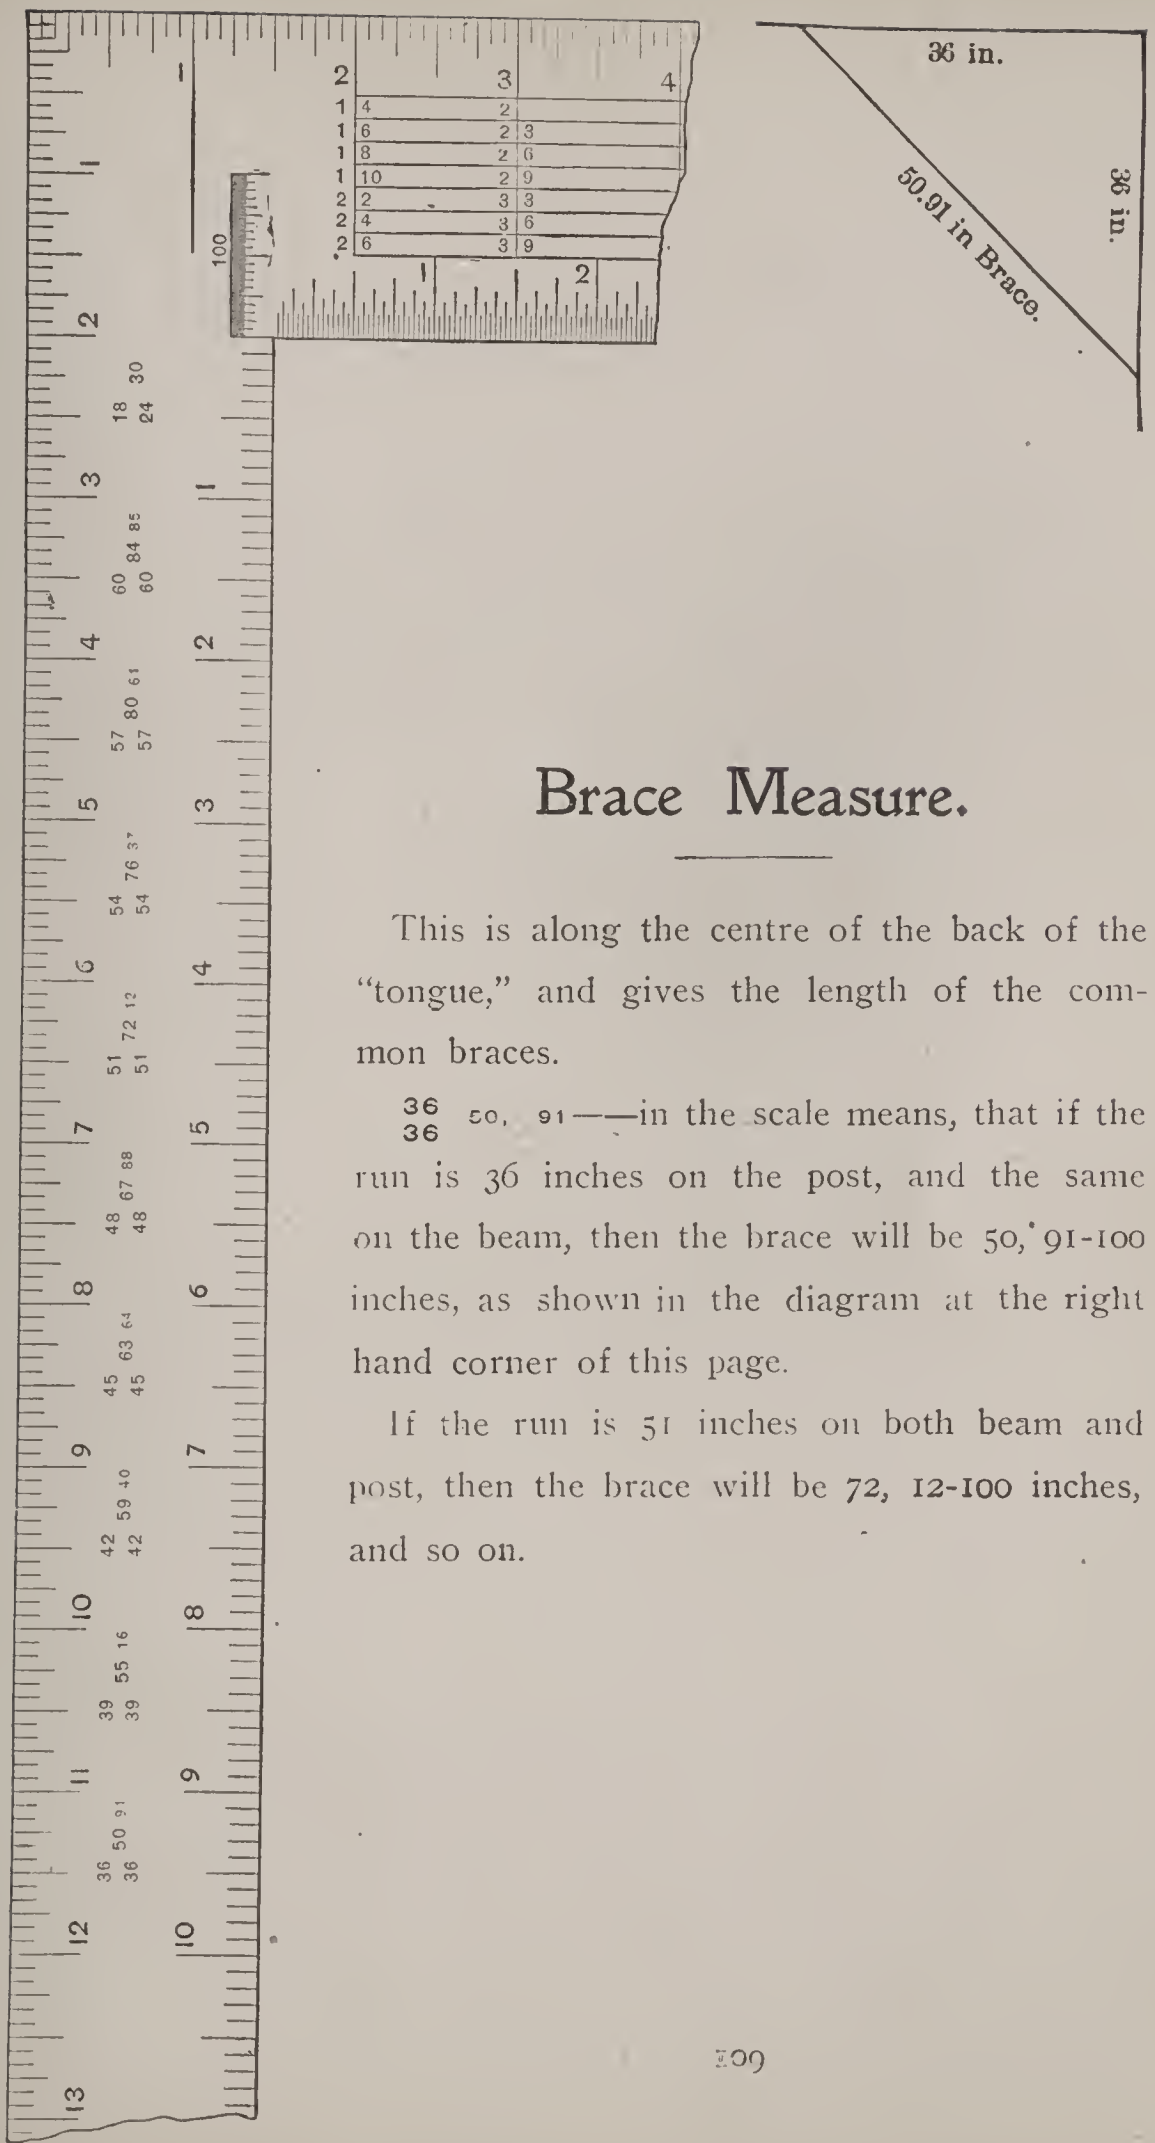

Brace Measure.

This is along the centre of the back of the "tongue," and gives the length of the common braces.

$\frac{36}{36}$ 50, 91——in the scale means, that if the run is 36 inches on the post, and the same on the beam, then the brace will be 50, 91-100 inches, as shown in the diagram at the right hand corner of this page.

If the run is 51 inches on both beam and post, then the brace will be 72, 12-100 inches, and so on.

Octagon "Eight=Square" Scale.

This scale is along the middle of the face of the tongue, and is used for laying off lines to cut an "eight square" or octagon stick of timber from a square one.

Suppose the figure A, B, C, D, is the butt of a square stick of timber 6×6 inches. Through the centre draw the lines A B and C D, parallel with the sides and at right angles to each other.

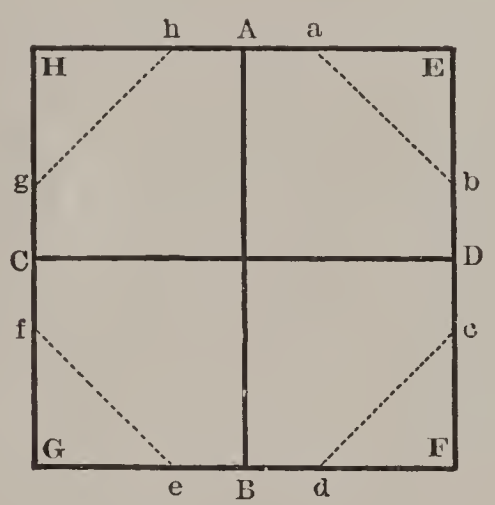

With the dividers take as many spaces (6) from the scale as there are inches in the width of the stick, and lay off this space on either side of the point A, as A a and A h; lay off in the same way the same space from the point B, as B d, B e; also C f, C g and D b, D c. Then draw the lines a b, c d, e f and g h. Cut off the solid angle E, also F, G and H; this will leave an octagon, or "eight-square" stick. This is nearly exact.

Essex Board Measure.

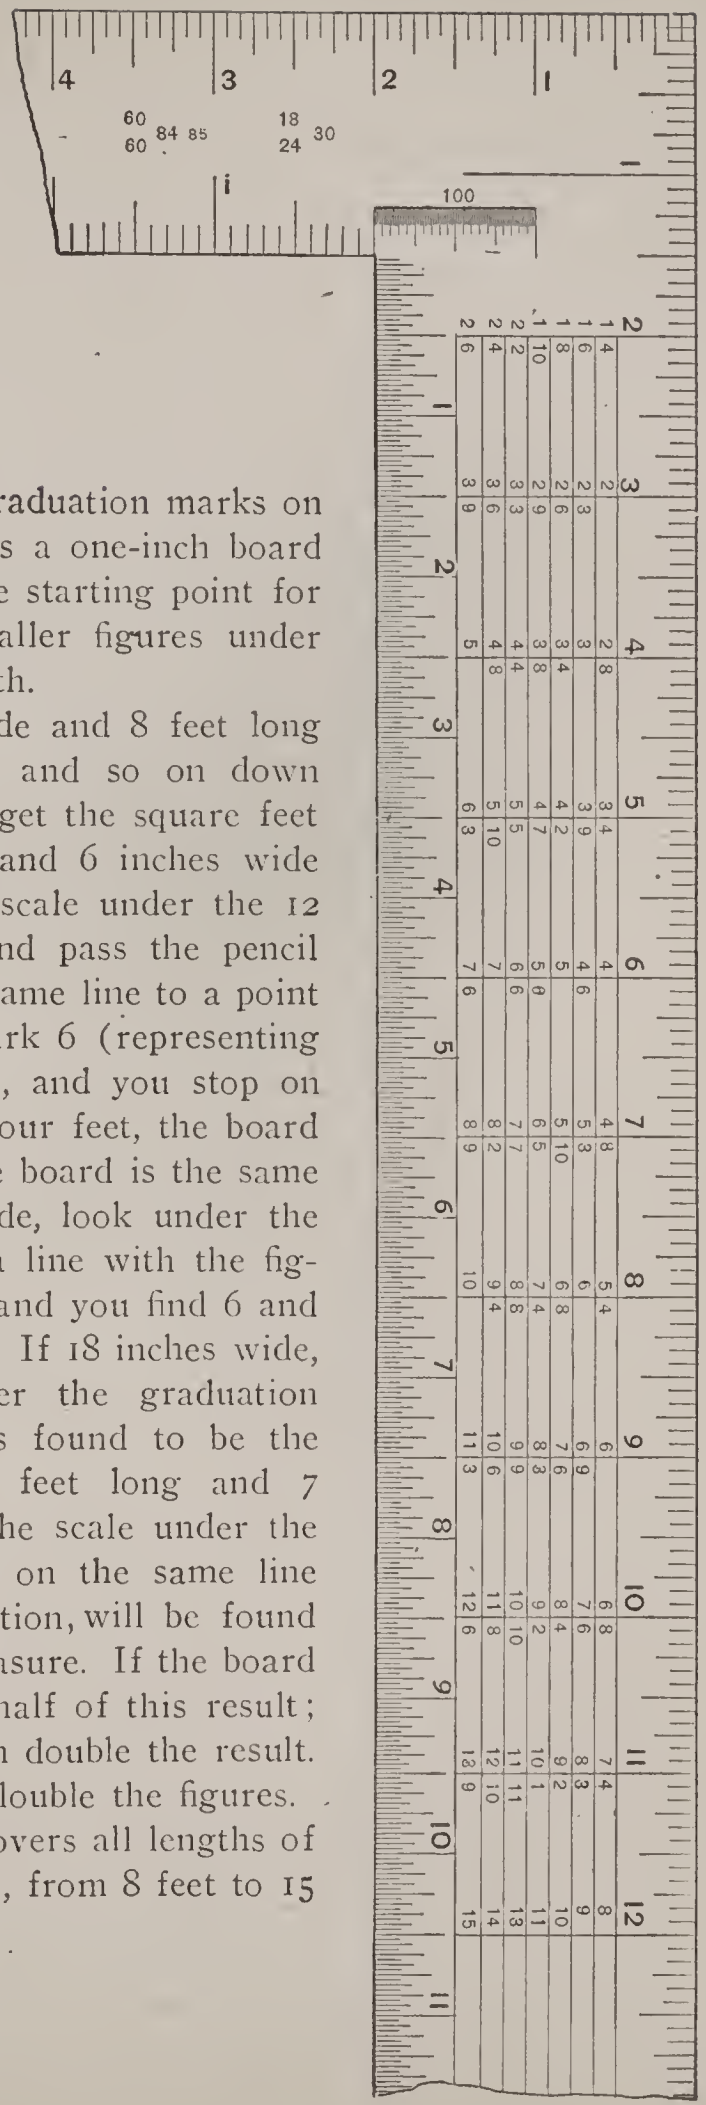

The figure 12 in the graduation marks on the outer edge represents a one-inch board 12 inches wide and is the starting point for all calculations; the smaller figures under the 12 represent the length.

A board 12 inches wide and 8 feet long measures 8 square feet, and so on down the table. Therefore to get the square feet of a board 8 feet long and 6 inches wide find the figure 8 in the scale under the 12 inch graduation mark and pass the pencil along to the left on the same line to a point below the graduation mark 6 (representing the width of the board), and you stop on the scale at 4, which is four feet, the board measure required. If the board is the same length and 10 inches wide, look under the graduation mark 10 on a line with the figure 8 before mentioned, and you find 6 and 8-12 feet board measure. If 18 inches wide, then to the right under the graduation mark 18, and 12 feet is found to be the board measure. If 13 feet long and 7 inches wide, find 13 in the scale under the 12 inch graduation, and on the same line under the 7 inch graduation, will be found 7 and 7-12 feet board measure. If the board is half this length, take half of this result; if double this length, then double the result. For stuff 2 inches thick double the figures.

In this way the scale covers all lengths of boards, the most common, from 8 feet to 15 feet, being given.

SARGENT & COMPANY'S

WOOD-BOTTOM AND IRON

PLANES

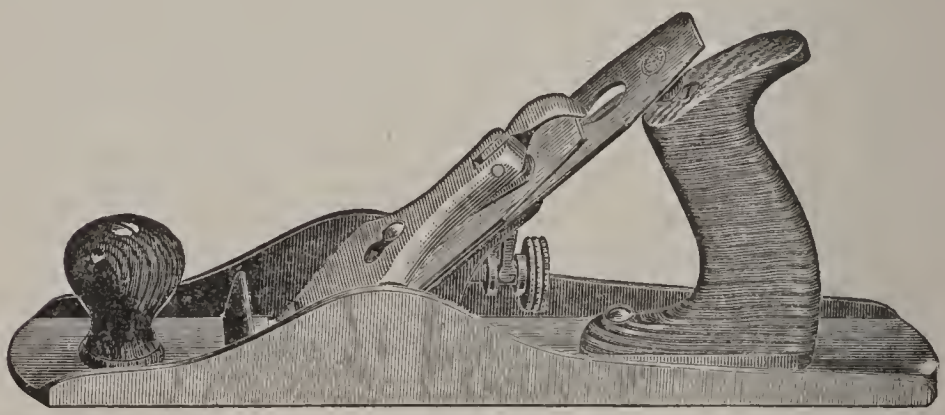

Good Workmen call for the best tools. In these planes we have the best material, properly put together, well proportioned and warranted in every way as the best Planes manufactured. The patent adjustment is perfect, and the steel cutters are tempered by an improved process, assuring the best results. Dealers are authorized to fully warrant every Plane having this stamp upon the Steel Cutter.

Books for Carpenters.

We make a specialty of supplying books on carpentry and building work and we would be pleased to send you, free, our catalog "S," as this describes some of the best books a carpenter can have that will aid him in mastering his trade.

We have books for nearly every trade, and if you wish to know how to do something, write us about it and no doubt we will be able to recommend a book that will tell you all about it.

We publish a monthly paper **The Practical Carpenter** at 50 cents per year. Each issue contains at least 16 6x9-inch pages of reading matter of special interest to carpenters and builders. You ought to subscribe as it will keep you posted. Send for a free sample copy.

Below we give a short list of some of the useful books we have. Any book sent prepaid on receipt of price and if the book don't suit send it back and we will return your money.

INDUSTRIAL PUBLICATION CO.,

16 THOMAS ST., NEW YORK.

Roof Framing Made Easy, by Maginnis. A practical method for laying out various kinds of roofs. Simple and reliable; 164 pages, 100 illustrations, octavo, handsomely bound in cloth for $1.00

Cloth Bound Books at 50c. each.

Steel Squares and Their Uses, by Hodgson, gives many new problems. A companion volume to this book, 80 pages, illustrated.

Practical Carpentry, a practical guide to laying out carpenter's work, 144 pages, 300 illustrations.

Hand Saws, their use, care and abuse. Tells how to set, file, etc., 96 pages, illustrated.

Cloth Bound Books at 50c. each.

Stair Building Made Easy. A simple guide for laying out and erecting different sorts of stairs, 160 pages, 100 illustrations.

New System of Hand Railing. Simple, economical and may be learned in an hour. Illustrated by folding plates.

How to Measure Wood Work for Buildings, by Maginnis, 79 pages, 160 illustrations.

Easy Lessons in Architecture, by Mitchell. A simple text book for the beginner; 94 pages, 100 fine illustrations.

The Carpenters' and Joiners' Pocket Companion, by Moloney; contains rules, data and directions for laying out work; 102 pages.

The Steel Square Pocket Book, by Stoddard. A handy and practical treatise on the square; 108 pages, 112 illustrations.

The Workshop Companion, by Phin. A useful book of recipes for mechanics; 160 closely printed pages.

How to Mix Paints, by Godfrey; 64 pages; illustrated.

The Hardwood Finisher, 112 pages about staining, finishing, polishing, etc.

Hints for Cabinet Makers and Furniture Men, 130 pages of useful recipes and hints.

25c. Books in Paper Covers.

Carpentry.
Practical Joinery.
Rafter and Brace Tables.
Scaffolding.
Hints and Aids in Building and Estimating.
How to Become a Good Mechanic.
Draughtmanship.
The Slide Rule and How to Use It.
Home Handicrafts.
Hints for Painters.
Concrete.
Artificial Stone, Terra Cotta, etc.
Masonry.
Bricklaying.
Plastering.
Cements and Glue.
Plumbing and Tinsmiths' Work.
Slating and Tiling for Roofs.
Wood Turning.
Glazing.
The Lightning Calculator.

Useful Instructive Books

AT 25 CENTS EACH

The books in the following list are practical and reliable, being especially prepared for self-instruction.

The books are 12mo in size, printed on good paper, and well illustrated wherever the subject needs it. Bound in neat paper covers. The cheapest series of really good technical books now in print.

Books on other subjects in preparation.

Any book sent postpaid on receipt of 25c., or five for one dollar.

Industrial Publication Company

16 Thomas Street, NEW YORK

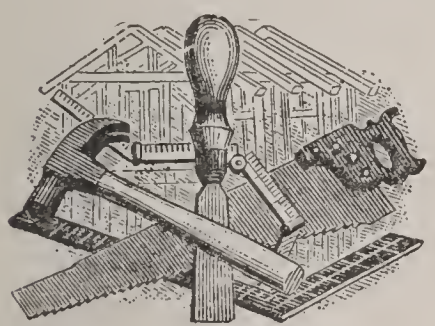

Carpentry: A Practical Manual edited by JOHN BLACK. 92 pages; illustrated by 100 engravings.

This book treats on the principles of the subject, the strains in the various members of framed structures; joints of various kinds; simple roofs, king-post roofs, queen-post roofs, hip roofs, roofs covering buildings of irregular plan, Mansard roofs; properties of timber; flooring and timbers for supporting same; trussed beams; partitions, from simple examples to elaborate examples of trussed partitions; method of deadening sound, etc., etc.

Practical Joinery.—Edited by JOHN BLACK. 92 pages; illustrated by 130 engravings.

A book that points out the best methods in the various departments of joiner's work, such as mouldings, classic and Gothic; tongue and groove joints, dowel joints, miter joints, lap joints, dove-tail joints, mortice and tenon joints; cutting timbers, making doors, paneling; hanging doors and windows; skylights; laying down floors; hardwood floors; construction of niches, etc. Woodworking machinery; picture frame making, and instructions on how to use the diagonal scale.

The Steel Square.—By F. T. HODGSON. 48 pages; illustrated by 38 engravings.

This work is intended as an elementary introduction for the use of those who have not time to study the larger works on the same subject. The book shows how some difficult problems in carpentry and joinery are simplified and solved by the aid of the carpenter's steel square, together with a full description of the tool, and explanations of the scales, lines and figures on the blade and tongue, and how to use them in everyday work. Showing how the Square may be used in obtaining the lengths and bevels of rafters, hips, groins, braces, brackets, purlins, collar beams and jack-rafters. Also its application in obtaining the bevels and cuts for hoppers, spring mouldings, octagons, diminished styles, etc.

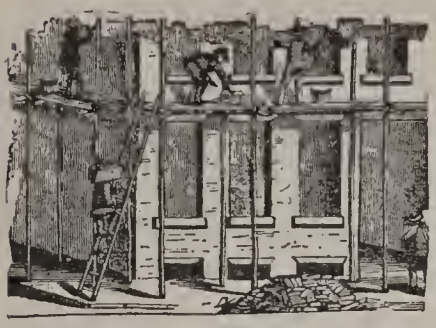

Scaffolding.—Edited by JOHN BLACK. 90 pages; illustrated by 45 engravings.

The subject of the erection of proper scaffolding for various purposes is practically treated in this book. A short history of ancient scaffolding is given, together with directions for erecting ordinary bricklayers' scaffolds, ladders; shoring and needling for supporting buildings; cranes, lifts, hoists, traveling cranes, transporters, cable railways; repairing steeples and tall chimneys; descriptions of various schemes and aids that will give a fund of practical information to every one called upon to erect scaffolding at the least cost in time and money.

Hints and Aids in Building and Estimating. A hand-book for every one engaged in the erection and repair of buildings. 36 pages.

This useful little book gives hints and prices; tells how to measure: explains building terms, together with a number of tables; schedule of architects' charges and form for building contract; form for making estimates; cost of doing work; work a man will do; diameter and height of chimneys; weight of various roof coverings; painting.

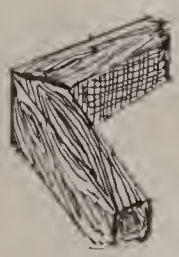

Cements and Glue.—A practical treatise on the preparation and use of all kinds of cements, glue and paste. By JOHN PHIN, author of "How to Use the Microscope." 58 pages.

Every mechanic and householder will find this volume of almost every-day use. It contains nearly 200 recipes for the preparation of cements for almost every conceivable purpose, amongst which are recipes for waterproof cements. bottle cement, cap cement, fireproof cement, various glues, rubber cement, iron cement, ivory cement, leather cement; to cement glass, stone, etc., to metal; different kinds of paste, etc.

Plastering.—Edited by JOHN BLACK. 90 pages; illustrated by 40 engravings.

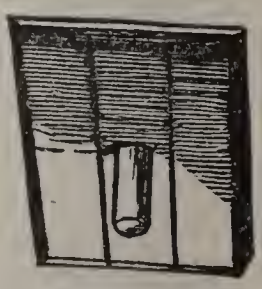

This book coutains quite a fund of information of a plain and practical character. A short history of the craft is given and then, in order, the materials and methods are described. The art of plastering is described, also the tools used, etc. Other chapters treat of various cements and their uses; lime and cement mortars; methods of outside and inside work; decorative plastering and details; stucco coloring and plaster painting; fixing tiles, mouldings, scagliola, fibrous plaster and other plasters; making a scagliola column; making mouldings in fibrous plaster; use of asbestos in the making of fireproof plaster, etc.

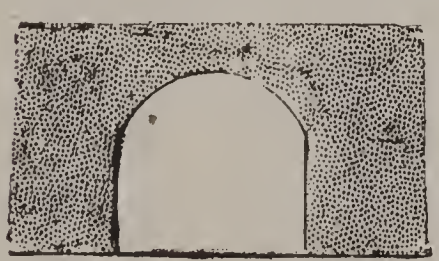

Concrete.—By FRANK JAY. 94 pages; illustrated by 38 engravings.

The extensive use of concrete at the present time makes this little manual "fill a long felt want." It is written by an expert of many years' experience in concrete work. The various methods now in vogue are described. The following is a synopsis of the contents: Historical; materials; aggregates and proportions; building in concrete; apparatus for erecting buildings; floors, joists and wallings; concrete paving and flooring; methods of construction; comparisons of different systems; fire resisting qualities; pavings *in situ*; moulds for concrete work; making artificial stone; coloring and hardening; armored concrete; manufacture and use of concrete for dams, breakwaters, etc.; use of concrete in building walls, piers, columns, floors. chimneys; building armored concrete beams, etc., etc.

Bricklaying.—Edited by JOHN BLACK. 88 pages; illustrated by 100 engravings.

This book is not intended as a text-book but as a guide to the best practice. The instruction is given in simple. clear language, and the following points are treated: Classes and kinds of bricks; bonding for foundations and walls; pilasters; piers; window openings; arches, their setting out and construction; bridges, their development and construction; flues, fireplaces and chimneys; oriels and bay windows; stops; quoins, cornices, gables; ornamental brickwork; fixing tiles; general memoranda, etc.

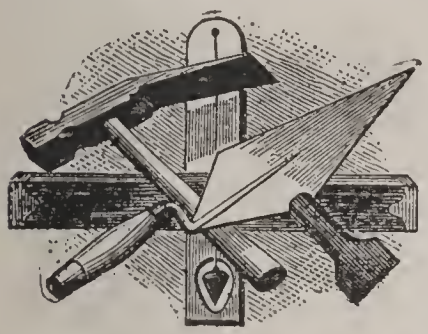

Masonry.—Edited by JOHN BLACK. 94 pages; illustrated by 80 engravings.

This little book deals with the operations of masonry in a thoroughly practical manner, describing the various materials, the preparation of surfaces, building of all sorts of walls and foundations of various kinds; varieties of masonry; openings; arches; buttresses; domes; vaults; together with a short history and simple directions about drawing. The numerous illustrations show how stones are cut and dressed, showing ashlar, hammer or pick dressing, chisel dressing, rubbing; chamfered stones; to produce a perfectly plane surface; winding surfaces, etc.

Plumbing and Tinsmiths' Work.—Edited by JOHN BLACK. 92 pages; illustrated by 80 engravings.

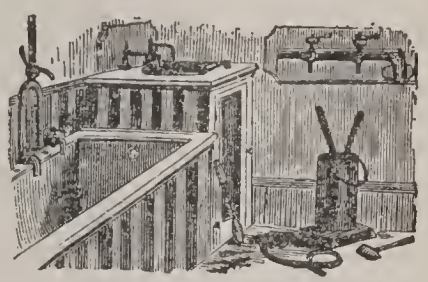

This little book deals with roof-covering; roof work; gutters; covering flats, platforms, dormers, ridges, etc.; finials; pipes; the storage and supply of water; delivery and control of water; elementary sanitation; soil pipes, closets, baths, traps; lead lining for sinks; development of surfaces so as to get the cuts for elbows, angles, etc.; how flashings should be put down; snow boards; principles of water supply; drinking water supply; float tanks; hydraulics, etc.

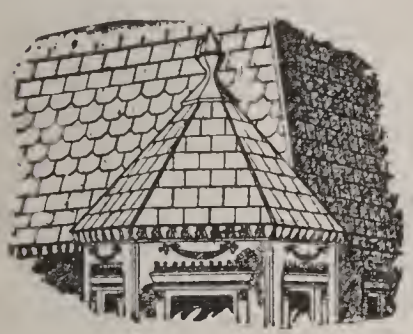

Slating and Tiling.—Edited by JOHN BLACK. 93 pages; illustrated by 50 engravings.

Many buildings now have slate or tile roofs, and this book gives concise information about the various points, such as a history of many roof coverings from the earliest times, also of modern roof coverings, tiles, slates and slating; tools used by roofers; preparation of the roof; different kinds of roofs; description of various forms of framing; more about tiling; how to lay slates; copper and lead roofs; soldering irons, etc.; zinc roofs and concrete roofs; the use of expanded metal, etc.; comparison of different roofing materials; thatched roofs; measuring up slating, tiles and other roof covering, with remarks on different methods of measuring.

Decorating.—Edited by JNO. BLACK. 95 pages; illustrated by 15 engravings.

The subjects treated in this practical book are as follow: Theory of colors; color blindness; the decoration of churches, libraries, dining, sitting and bedrooms; history and application of glass painting; stained glass in decoration; scene painting; carving in wood and stone; stencils; metal work in decoration, tile decoration, frescoes, plasters; sanitary decoration of the house, etc. The hints contained in this book will be appreciated by the practical painter and decorator, as well as every householder who desires to have his home neatly and tastefully ornamented.

Home Handicrafts,—A Practical Guide for Amateurs. 92 pages; illustrated by 60 engravings.

This book will be appreciated by every one who takes advantage of their spare hours to construct or decorate some detail of their homes. The following synopsis of the contents will show the wide range of subjects: Tools, materials, planing, workbench, mortise and tenon joint, halved joint, half lap joint, simple doors, out buildings, kitchen table, saw horses, picture frame making; gluing, lathing, whitewashing, paperhanging, painting, window boxes, soldering, table fountain, renewing sash lines, rustic railings, meat safes, bicycle racks, green-house work, constructing sun dials, making a drawing-board, French polishing, kennels, dovecots, poultry houses, useful recipes, etc.

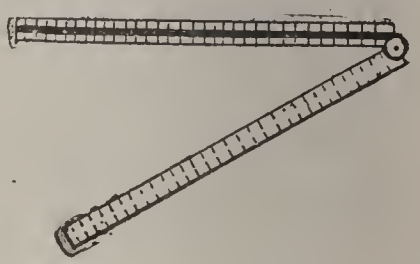

***The* Slide Rule and How to Use It.** 30 pages. By F. T. HODGSON.

This is a compilation of explanations, rules and instructions suitable for mechanics and others interested in the industrial arts. Rules are given for the measurement of all kinds of boards and planks, timber in the round or square, glaziers' work and painting, brickwork, paviors' work, tiling and slating, the measurement of vessels of various shapes, the wedge, inclined planes, wheels and axles, levers, the weighing and measuring of metals and all solid bodies, cylinders, cones, globes, octagon rule and formulæ, the measurement of circles, a comparison of French and English measures, together with much information useful to carpenters, bricklayers, glaziers, paviors, machinists and other mechanics.

***The* Engineer's Slide Rule and Its Applications.**—By WILLIAM TONKES. 35 pages.

A complete investigation of the principles upon which the slide rule is constructed, together with its application to all the purposes of the practical mechanic, such as multiplication, division, extracting roots, powers of numbers, measurement of various plane and solid figures, estimating the weight of various materials, geometrical problems, proportion, change of gears for screw-cutting, calculations on levers, etc. Possessed of either of the above books and a good slide rule, mechanics might carry in their pockets some hundreds of times the power of calculation that they now have in their heads, and the use of the instrument is very easily acquired.

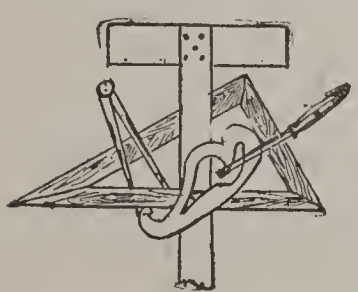

Drawing Instruments.—By AN OLD DRAFTSMAN. 48 pages; illustrated by 20 engravings.

A treatise on drawing instruments, with rules for their use and care; dividers, compasses, ruling pens, bow instruments; special forms of instruments; how to handle them; drawing boards, paper, tee-squares, triangles, curves, scales, thumb-tacks, tracing paper and cloth, inks, pencils, protractors; useful memoranda and data for every owner of drawing instruments.

Painting and Varnishing.—Edited by JOHN BLACK. 94 pages; illustrated by 20 engravings.

A practical manual treating on materials, principles of color, mixing paints, preparation of surfaces, distemper, decoration, hints on dealing with customers, hints on the use of brushes, what colors to use in different rooms, etc.; varnishes and varnishing; recipes for making various kinds of varnish; graining, graining to imitate oak, mahogany, satin wood, walnut and rosewood; marbling, white veined, dove colored, red, green, jasper, black and gold, Florentine, Sienna, etc.; inside painting and decoration gilding, sign writing, lettering, alphabets, stencils, monograms, etc.; outside painting brickwork, metal work, etc.

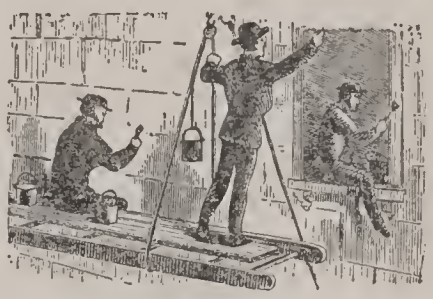

Hints for Painters, Decorators and PAPER HANGERS. — Prepared with Special Reference to the Wants of Amateurs. By AN OLD HAND. 60 pages.

A most useful book treating on the preparation of surfaces, materials used as bases and vehicles, white lead, linseed and other oils, driers, coloring paints, mixed paints, operations, taste in color, general remarks on graining, miscellaneous receipts, paper-hanging, cleaning paper-hangings, varnishing paper, making paste; useful hints, tables, etc., for estimating cost of work and materials which will prove of great value to the beginner in the painting business.

Success with Recipes.—A practical guide to success in the use of recipes, formulæ, etc., with hints on chemical and mechanical manipulation. Intended as a supplement to all books of recipes. By JOHN PHIN. 44 pages.

While it is an undoubted fact that many of the recipes published in the ordinary collections are erroneous, either from original blunders on the part of the authors, or from mistakes in copying, failure in the use of others frequently arises from defective information and vicious methods on the part of those who attempt to put them into practice. The object of the present book is to give such hints and cautions as will enable the worker to secure success where success is possible, and where the products are intended for sale it gives valuable advice as to the best methods of putting them on the market.

Useful and Precious Minerals.—How to find them; how to test them and how to estimate their value by simple methods and easily obtained appliances. Intended for the use of non-experts. Edited by JOHN PHIN. 72 pages; illustrated by 4 engravings.

This book was prepared to meet the wants of the non-expert so that they may, by simple tests, know if their "find" is valuable or only useless dirt. To this end the book gives general hints on the examination and testing of minerals; distinguishing characteristics of minerals; a simple method of finding specific gravity; scale of hardness, malleability, color, luster, crystallization, chemical composition; prospecting or searching for minerals, etc.

How to Become a Good Mechanic.—Intended as a practical guide to self-taught men, telling what books to use; how to begin; what difficulties will be met; how to overcome them; in a word, how to carry on such a course of self-instruction as will enable the young mechanic to rise from the bench to something higher. By JOHN PHIN. Second edition, revised and greatly enlarged. 68 pages.

This book is not a text-book, but rather a guide to the use of these books. The author briefly outlines a course of study for mechanics who wish to advance themselves. The notes and instructions given are of a kind that appeal directly to the good sense and reason of the young student, and cannot fail to act as a stimulant to greater efforts in obtaining the knowledge sought. The difficulties which may be expected by the student are dwelt upon, and valuable suggestions as to the proper method of overcoming them are given.

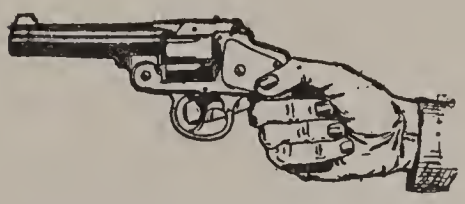

The Pistol as a Weapon of Defence, in the House or on the Road. 50 pages.

This work aims to instruct peaceable and law-abiding citizens in the best means of protecting themselves from the attacks of the brutal and the lawless, and it is the only practical book published on this subject. Its contents are as follows: The pistol as a weapon of defence: the carrying of firearms; different kinds of pistols in market; how to choose a pistol, amunition, different kinds; powder, caps, bullets, copper cartridges, etc.; best form of bullet; how to load; best charge for pistols; how to regulate the charge; care of pistol; how to clean it; how to handle and carry it; how to learn to shoot; practical use of the pistol; how to protect yourself and disable your antagonist.

Shooting on the Wing.—Plain directions for acquiring the art of shooting on the wing. With useful hints concerning all that relates to guns and shooting, particularly in regard to the art of loading so as to kill. To which has been added several valuable and hitherto secret recipes of very great practical importance to the sportsman. By An Old Gamekeeper. 88 pages; illustrated.

This book tells how to choose the gun, about ammunition, gun cases, how to load the gun, how to clean it, how to handle and how to carry it, how to learn to shoot, finishing touches, useful hints, recipes and miscellaneous matter. The book contains a novel and most valuable feature found in no other work on this subject. This is a series of graduated lessons by which the self-taught young sportsman is enabled to advance step by step from such easy marks as a sheet of paper nailed on a fence to the most difficult trap-shooting and the sharpest snap-shots.

What to Do in Case of Accident.—A book for everybody. 96 pages.

This is one of the most useful books ever published It tells exactly what to do in case of accidents, such as severe cuts, sprains, dislocations, broken bones, burns with fire, scalds, burns with corrosive chemicals, sun stroke, suffocation with foul air, hanging, drowning frost-bite, fainting, stings, bites, starvation, lightning poisons, accidents from machinery, gun-shot wounds etc., etc. It ought to be in every house and workshop for young and old are liable to accident, and the directions given in this book might be the means of saving many a valuable life.

The Sun.—A familiar description of his phenomena. By Rev. Thomas William Webb. Author of "Celestial Objects for Common Telescopes." 80 pages; illustrated by 17 engravings.

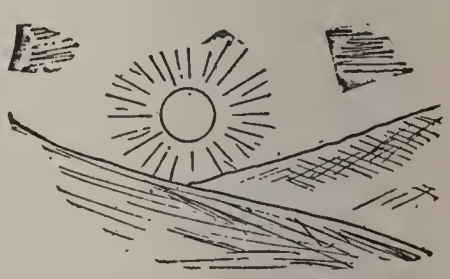

A book for every one interested in Nature, as it simply and fully describes the sun, tells about spots, eclipses, etc., in a very attractive style, so that the ordinary reader who does not understand astronomy may thoroughly comprehend and enjoy the subject. A reading of this book will give a fair idea of the wonderful universe of which we are a part.

Rhymes of Science; Wise and Otherwise.—By Oliver W Holmes, Bret Hart, Ingoldsby, Prof. Forbes, Prof. J. W. Mc.Q Rankine, Hon. R. W. Raymond and others. 66 pages; illustrated

A collection of scientific rhymes that will form pleasant reading for any one interested in scien

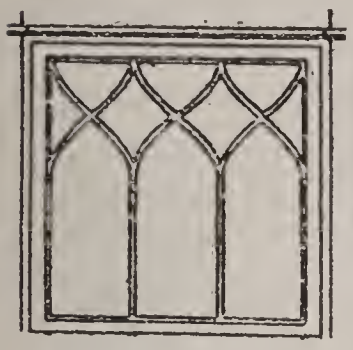

Glazing.—Edited by JOHN BLACK. 94 pages, illustrated by 50 engravings.

The information in this manual will save much time and trouble to the practical glazier, while the apprentice will find it a trustworthy guide. Beginning with a history of the invention of glass and its manufacture, the practical instruction of glass cutting is taken up. Directions and hints are given for cutting oval, circular and irregular pieces, as well as rectangular ones. Practical notes are given on the planning and placing of windows so as to get the best effect of the light. The subject of designing stained glass windows is taken up, and directions given for painting, firing, etching and embossing. The use of wooden mouldings or astragals to produce curved and interlaced forms. Details of French casements, etc.

Draughtsmanship.—Edited by JOHN BLACK. 94 pages, illustrated by 75 engravings.

This little manual is intended for those who desire some little knowledge of drawing, and to whom the study of the larger treatises would not be suitable. It briefly states about drawing instruments and how to use them, geometry for draughtsman, the development of surfaces, perspective, together with some useful remarks about keeping records of builders' work in a systematic manner, hints on the duties of the builder's clerk.

Enough practical information is given in this book to enable one to understand the principles of drawing as applied to the making of working plans and details for buildings.

Wood Turning.—Edited by JOHN BLACK. 91 pages, illustrated by 52 engravings.

The art of wood turning is simply and clearly described in this volume, and will prove a useful manual for the amateur and young wood worker. After some introductory remarks about the history of wood turning, the following subjects are fully described and treated upon: Wood turners' lathes, lathe details, mandrels, chucks of various kinds. tools, art of turning, turning classical columns, decorative side of wood turning, special lathes, slide rest, ornamental turning, examples and methods of making simple turned articles in the lathe, match boxes, reels, castors, candle stick, spice box, thimble holders, comb and brush tray, etc.

Rafter and Brace Tables.—By H. J. AURLIE. 32 pages, illustrated by 8 engravings.

This time-saving reference book was prepared for the convenience of carpenters and builders, as it shows at sight the length of rafters and braces. As the tables are arranged in convenient form, their daily use will save time and mental effort and avoid the errors which are so likely to occur in finding of the lengths of any common hip, valley, or jack rafter.

Besides these tables, there are others giving the decimal equivalents of parts of one inch for each sixty-fourth; strength of wooden posts; safe strength of bolts; weight and strength of chains and ropes; weights and measures, short cuts in mensuration, cost of chimneys, etc.

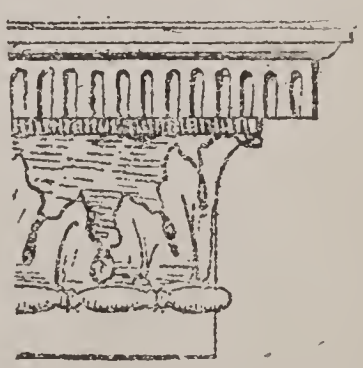

Artificial Stone, Terra Cotta, etc.—Edited by JOHN BLACK. 92 pages, illustrated by 29 engravings,

The growing popularity of various forms of artificial stone for building purposes at the present time has led to the publication of this manual. It forms a companion volume to **CONCRETE**, and concisely describes early manufacture and use of concrete and artificial stone; construction, manufacture and use of mosaic; systems of paving; artificial stone as a paving material; testing building stone; artificial sandstone sills, bricks and blocks; hydraulic machinery; hollow stone building blocks; scagliola and enameled slate: other methods of making artificial stone; terra cotta, its history, manufacture, cost, use, making a useful book of information about building materials that are constantly gaining favor.

DON'T CUT AND TRY

But Lay Out Your Work Accurately
by Up-to-Date Methods

ROOF FRAMING MADE EASY

A Practical and Easily-Understood System of Laying Out and Framing Roofs Adapted to Modern Building Construction.

The Methods are Made Clear by Nearly 100 Large & Clear Engravings

By OWEN B. MAGINNIS, Architect

Inspector of Buildings of the City of New York

Author of "How to Frame a House," "How to Measure Up Woodwork for Buildings," "Bricklaying," etc., etc.

Second Edition, Revised and Greatly Enlarged, Now Ready
Over 160 Octavo Pages, Handsomely Bound in Cloth

PRICE $1.00 PREPAID

THE carpenter or builder who will study the methods described in this book will realize the constructive value of every piece of timber which enters into a framed roof and will understand how to lay out every piece of timber used without wasting valuable time and material cutting and trying.

The language used is that of the practical workman—scientific phrases and confusing terms have been avoided where possible—and everything has been made so plain that any one who will faithfully study the book will understand it from beginning to end. In fact, every problem in the book was "tried" on a boy who had had no experience in building work, and he understood every problem with a little study. This will show that the book is valuable to the beginner as well as the advanced workman.

Any intelligent mechanic will be able to save at least ten times the cost of this book in time and material during the first few weeks that he has it in use.

INDUSTRIAL PUBLICATION CO.

P. O. Box 1852 **16 Thomas Street, N. Y.**

JAN 27 1966

LIBRARY OF CONGRESS
0 033 213 127 8